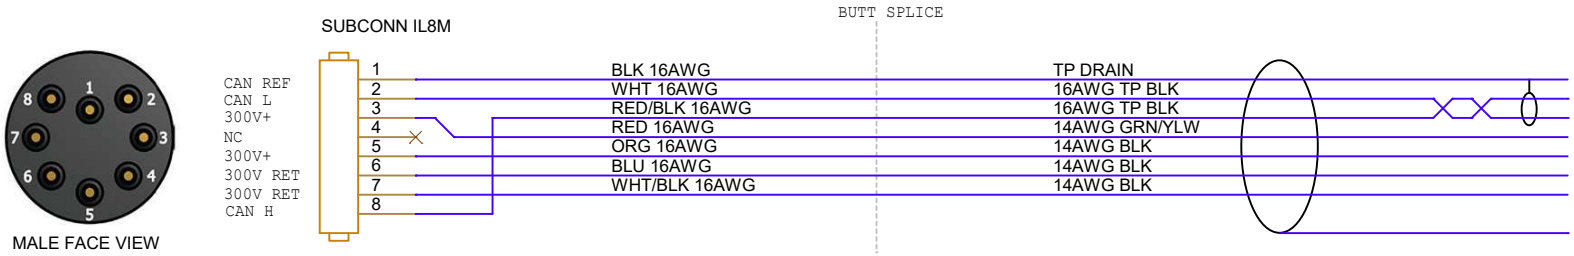


TPC 60021 VFD Shielded
Power Cable with Signal Pair

**NOTES**

1. Do not terminate shield at connector end of assembly.
2. Isolate TP drain from cable shield.

| | | | | |
|---|---|---|---|---|
| MBARI | | | ***Monterey Bay Aquarium Research Institute*** **7700 Sandholdt Road, Moss Landing, CA 95039** | |
| | | | **Title** Cable: Battery Box to PTO | |
| **Engineer** EJM | **Size** A | **Document Number** ?? | **Layout File** POWERCABLE.OPJ | **Rev** 4 |
| **Layout** | Date: Monday, April 18, 2022 | | Sheet 1 of 1 | |