


WARNING
P1 Needs to be wired OPPOSITE of
its physical markings. Use the triangle
marking as an indicator for pin 6

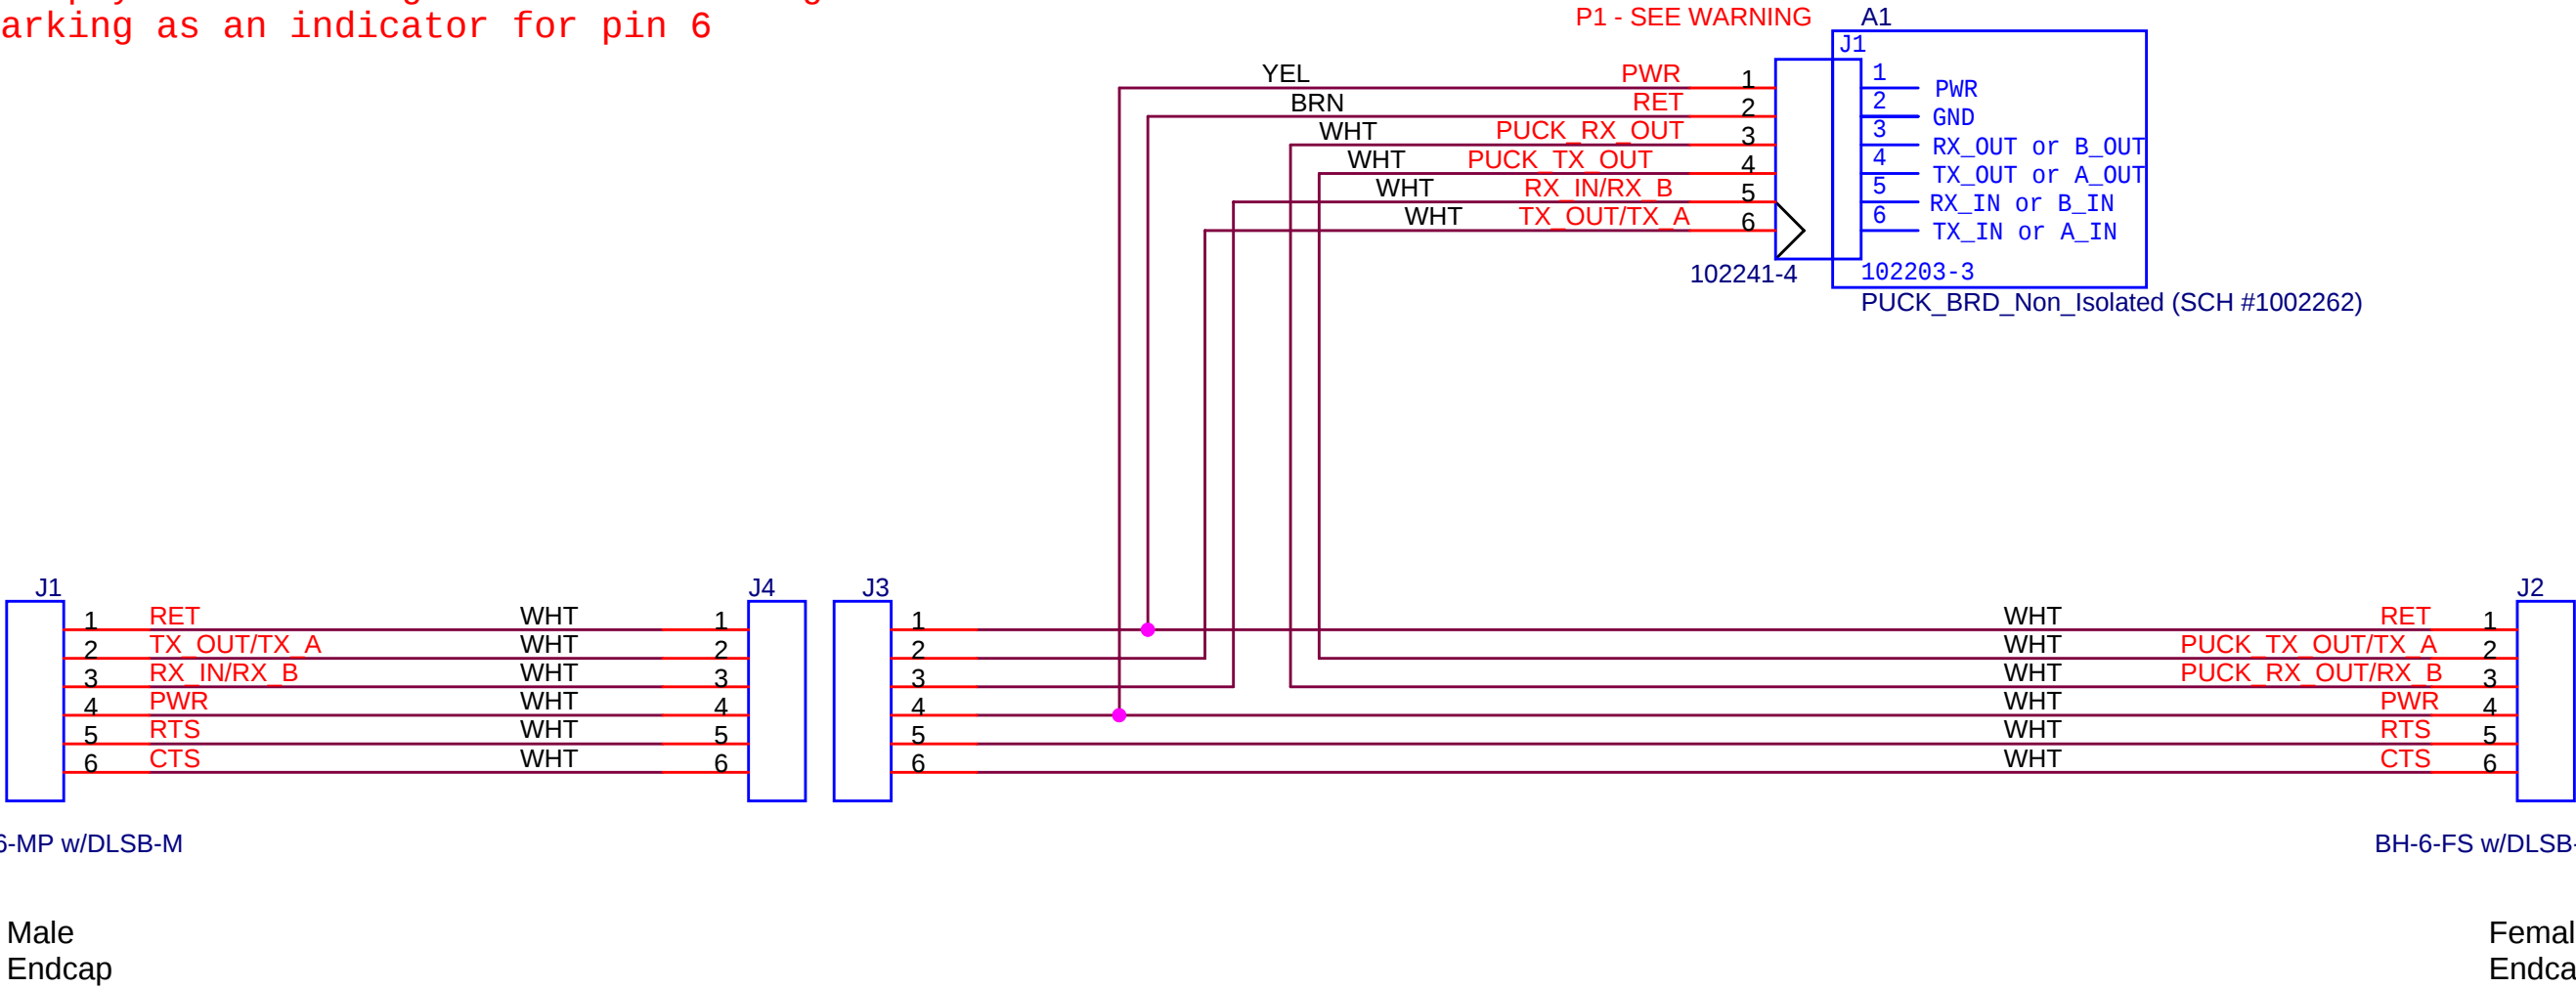

NOTES:

1. WHITE WIRES 20 AWG SUPPLIED WITH ENDCAP CONNECTORS

Title		
CIMT Canned Puck Assembly		
Size A	Document Number <Doc>	Rev 1K
Date:	Monday, May 10, 2004	Sheet 1 of 2