



WARNING
P1 Needs to be wired OPPOSITE of
its physical markings. Use the triangle
marking as an indicator for pin 6

From MMC

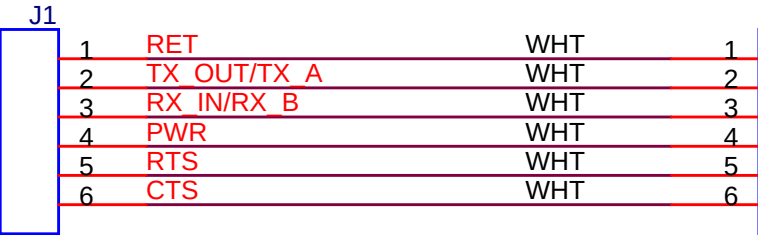


IL-6-MP w/DLSB-M


IL - 6 - MP

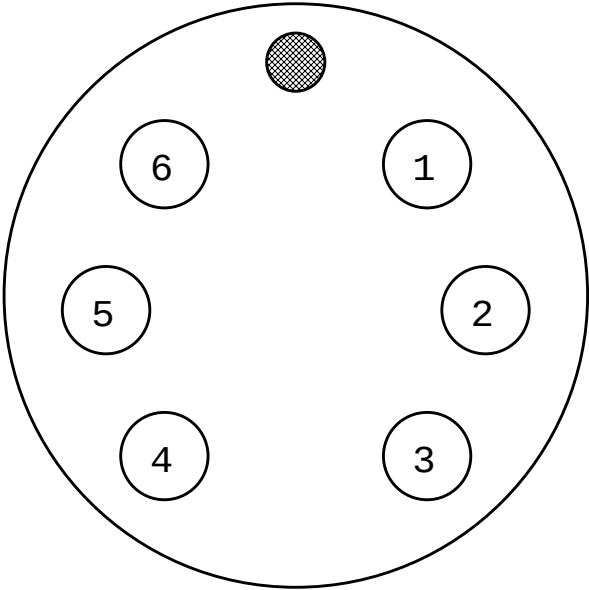

P1 - See Warning

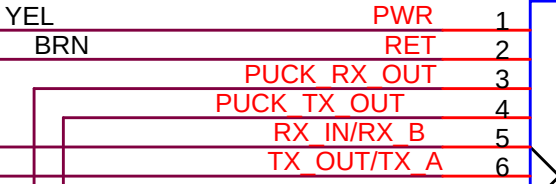


102241-4

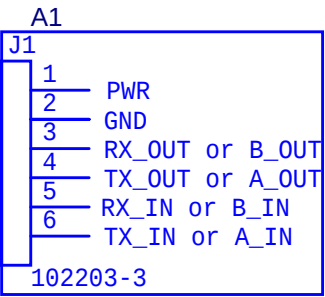


PUCK_BRD_Non_Isolated (SCH #1002262)

To MicroCAT

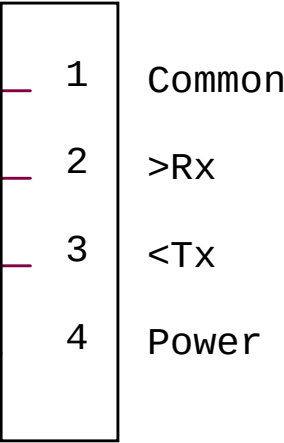

G-FLS-P

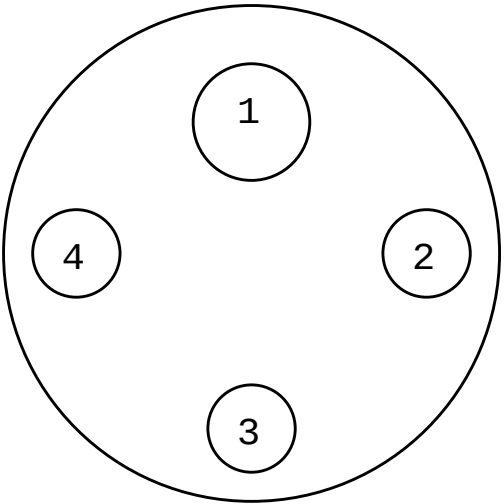

RMG - 4 - FS

Title		
CIMT MicroCAT PUCK Wiring		
Size	Document Number	Rev
A	<Doc>	2K
Date:	Monday, May 10, 2004	Sheet 1 of 1