

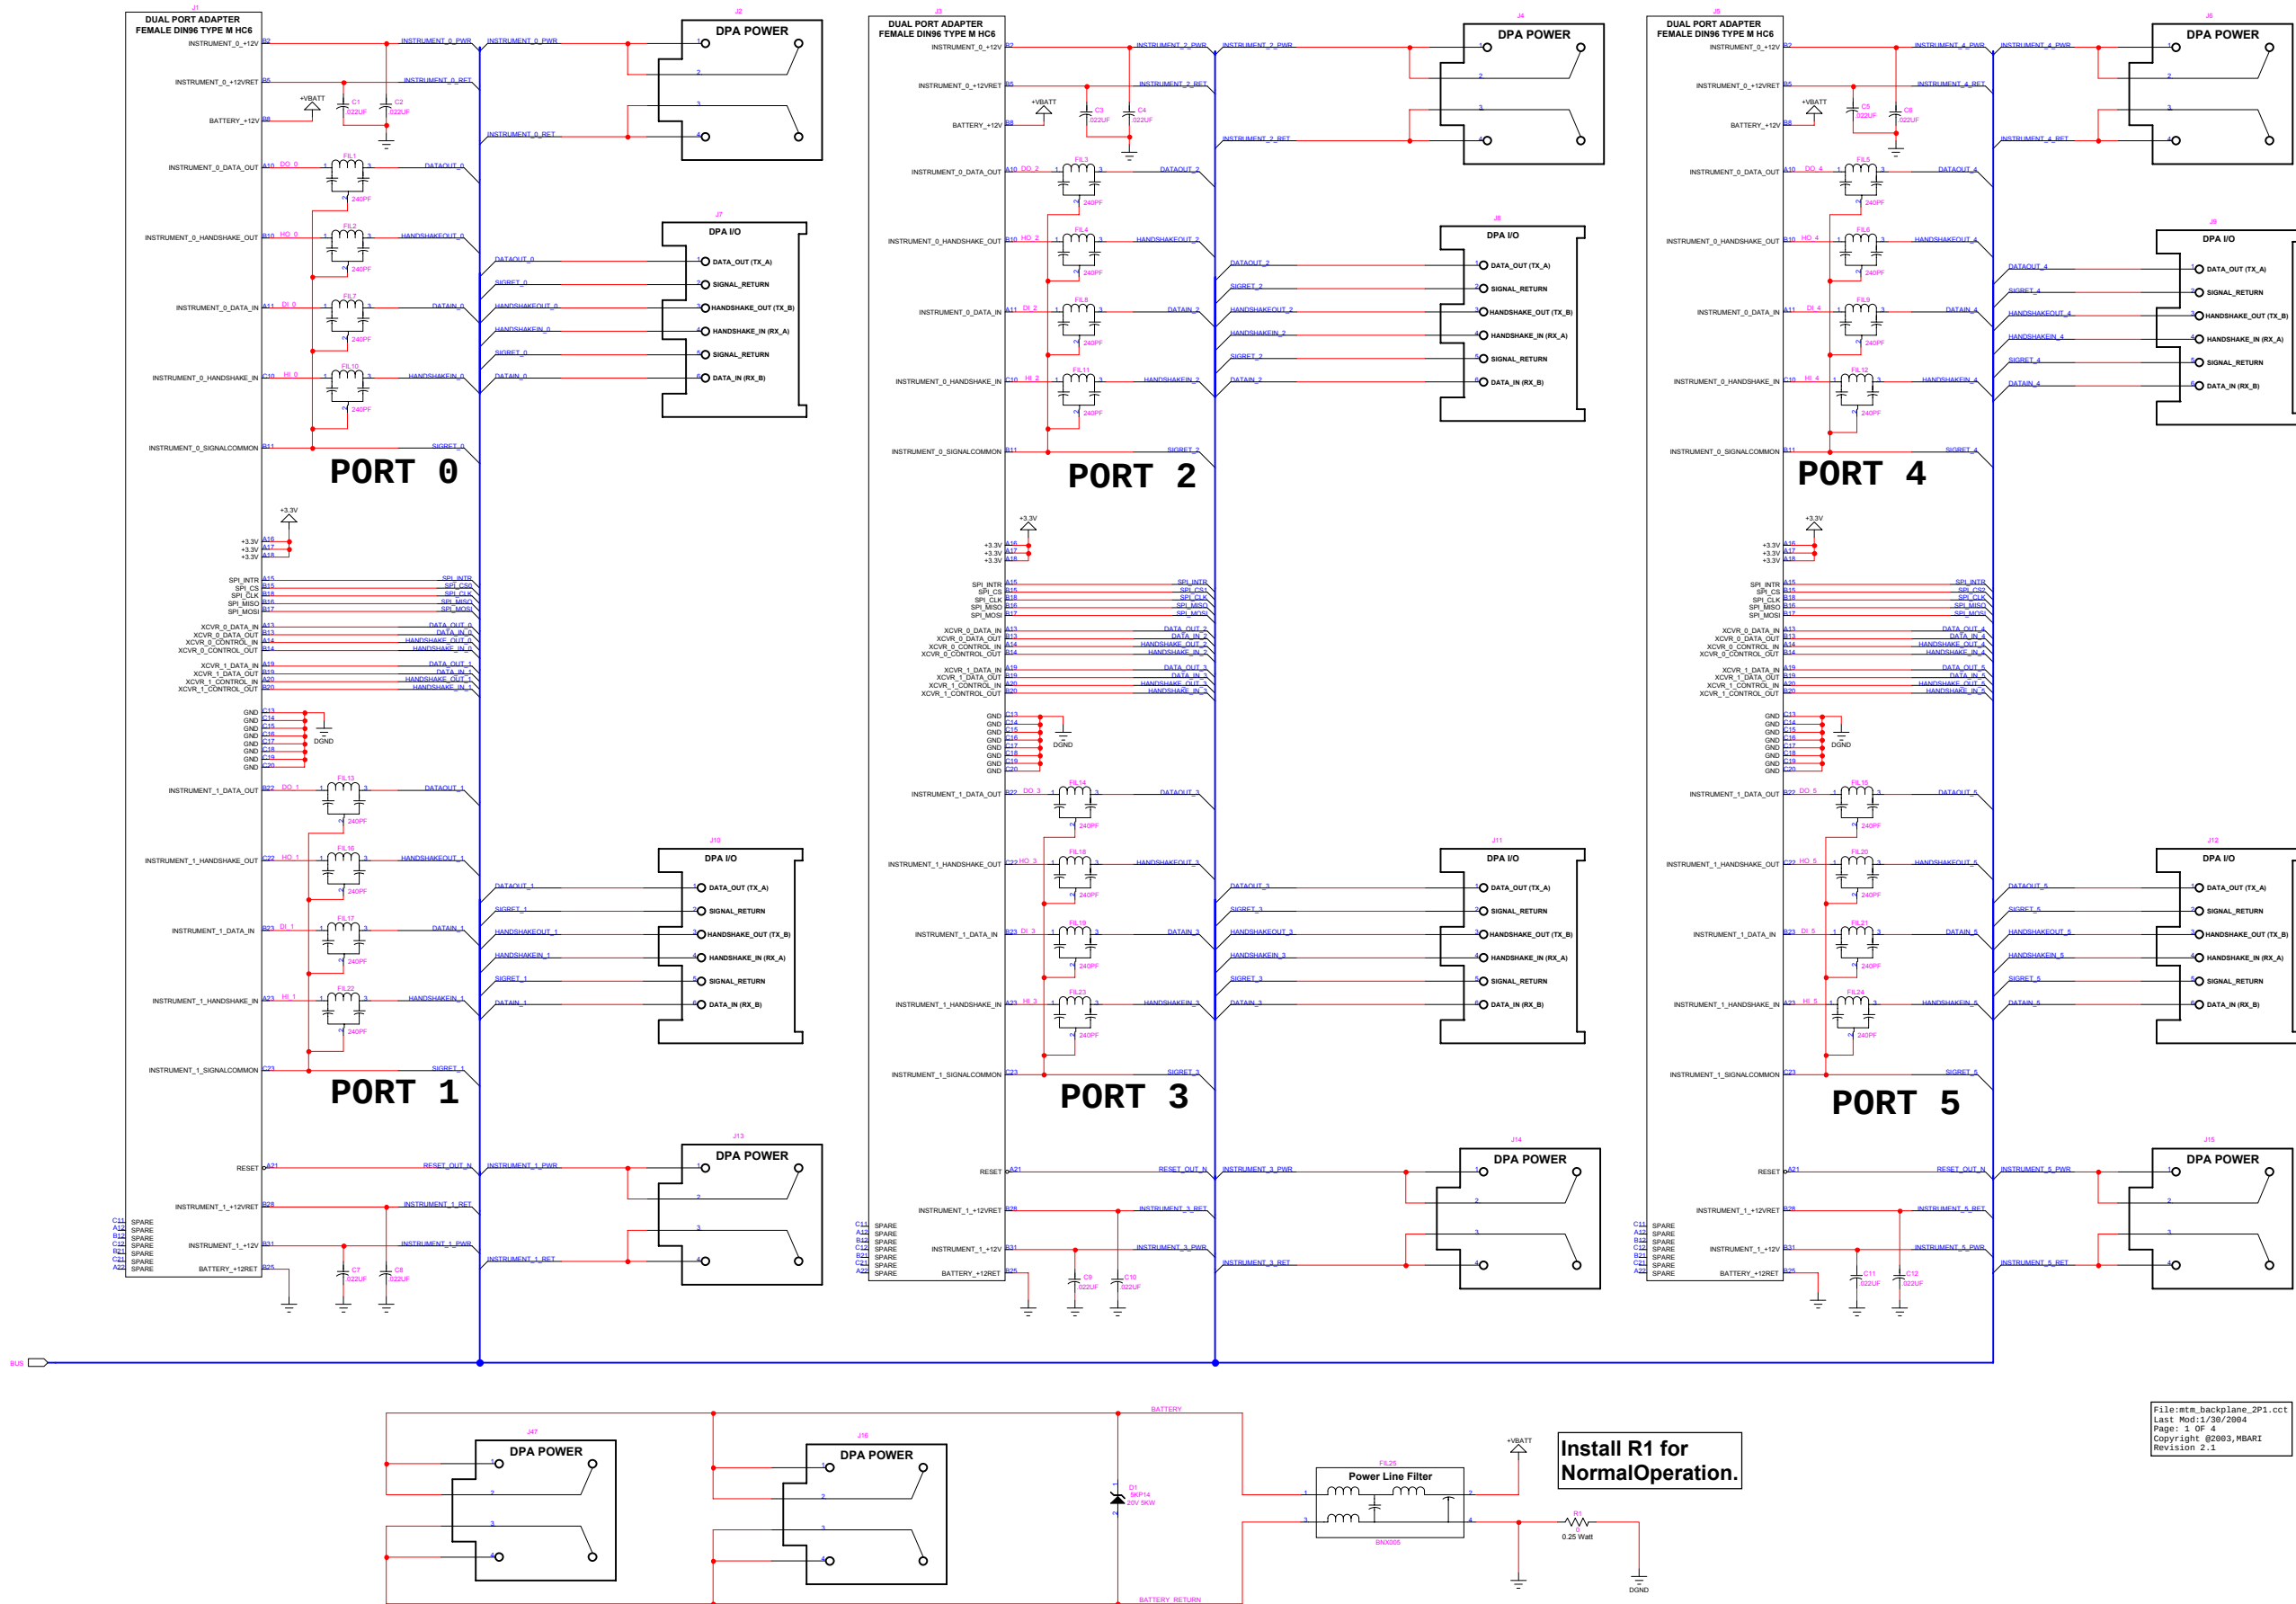
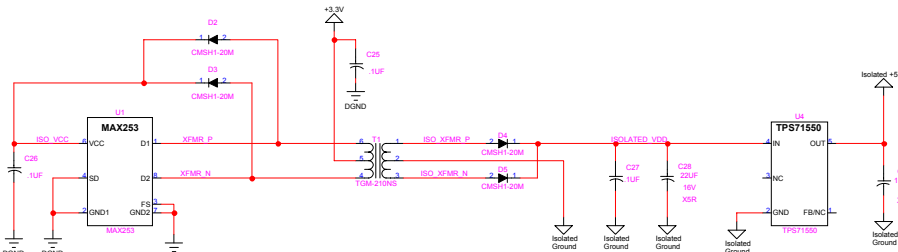
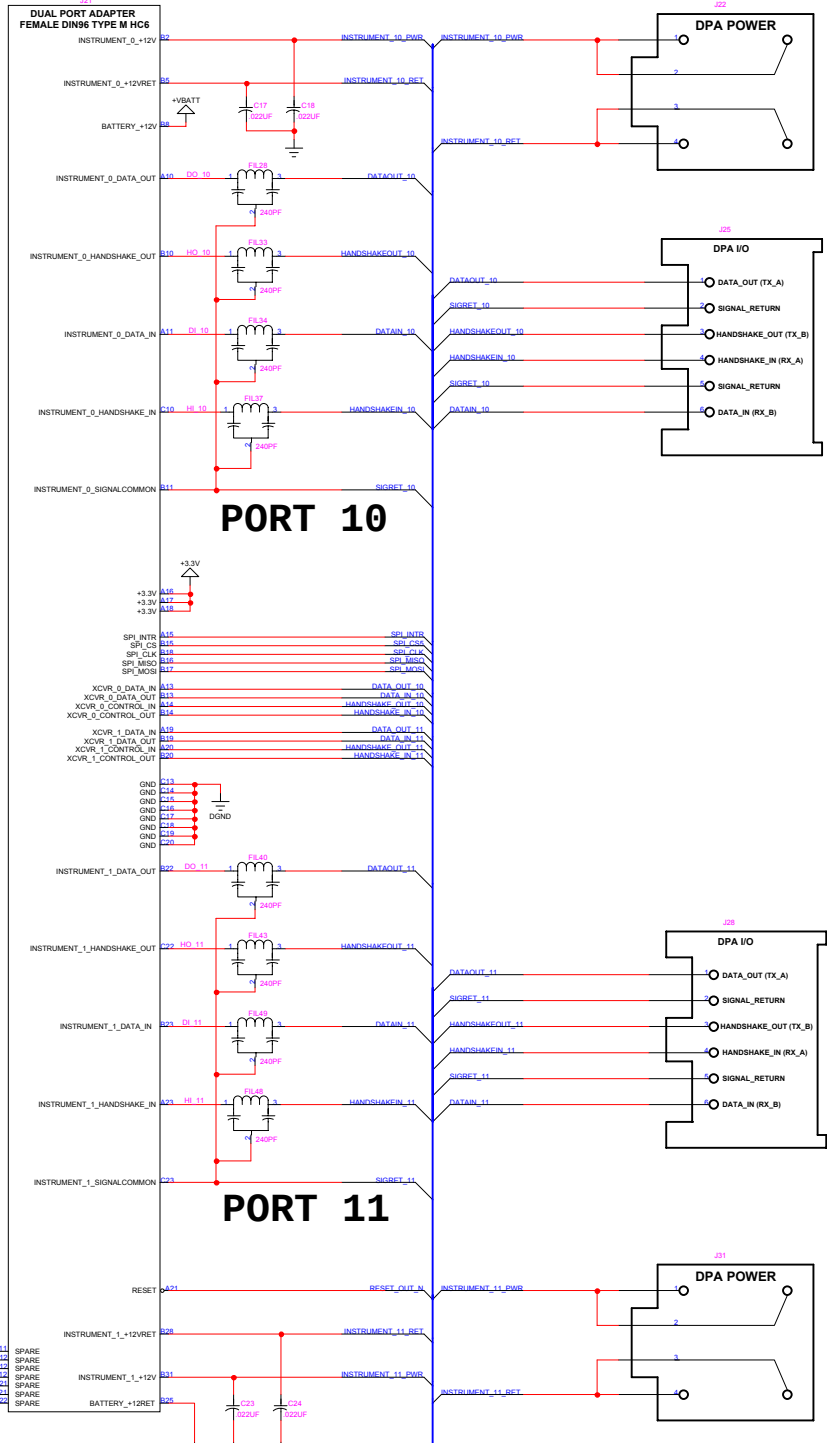


DPA PORTS 0 TO 5

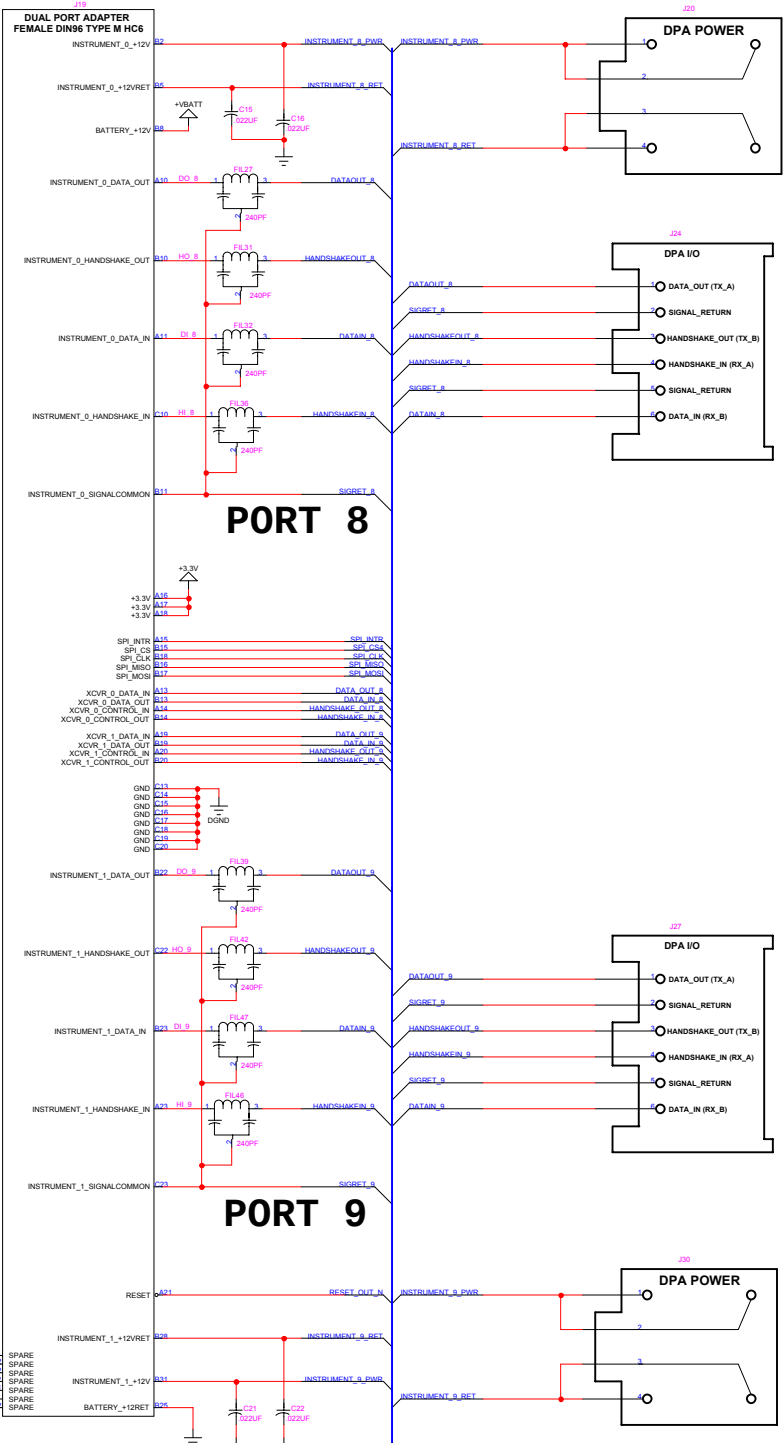


DPA PORTS 6 TO 11

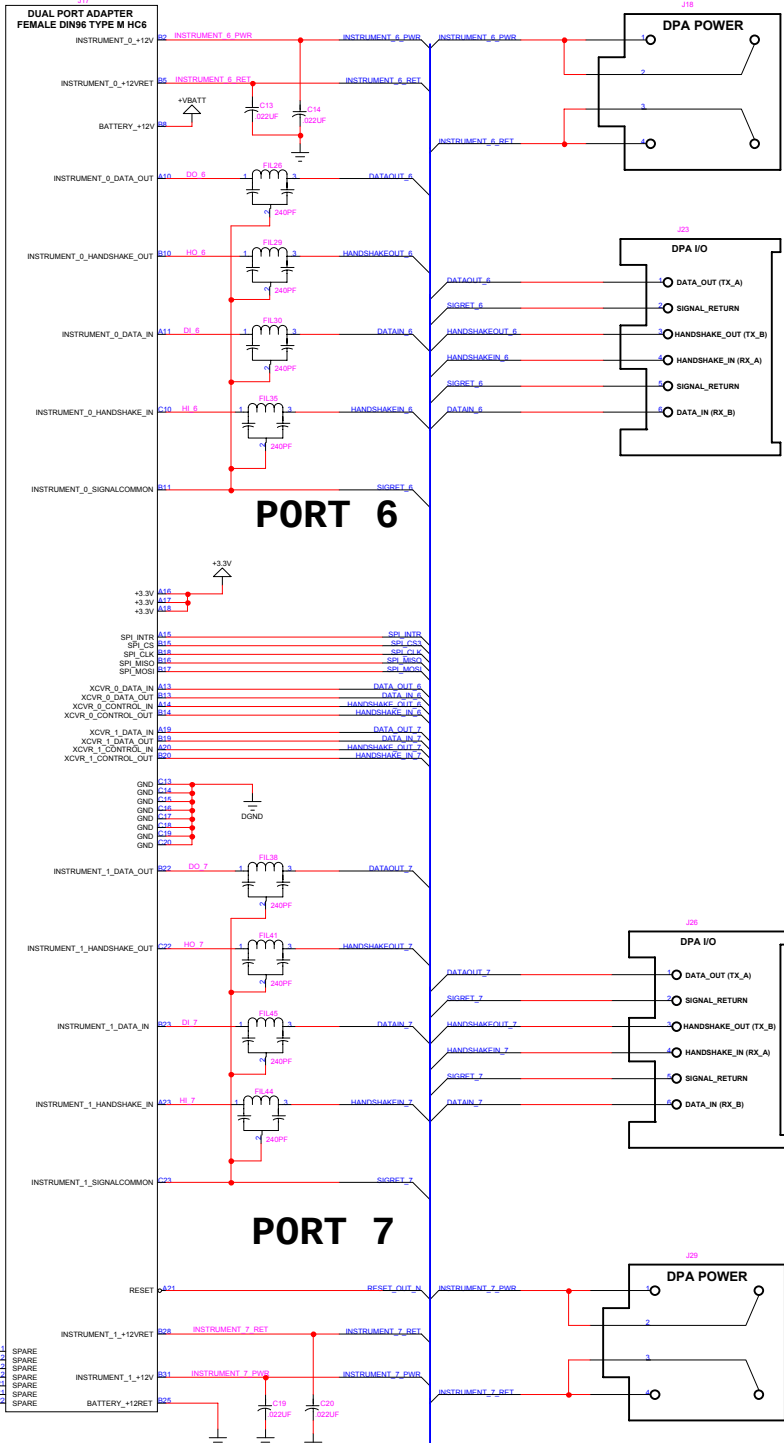

SIDEARM, RF MODEM, COMM CONTROLLER

Install FB1 for controller.
Do not install FB1 for use in
power can.

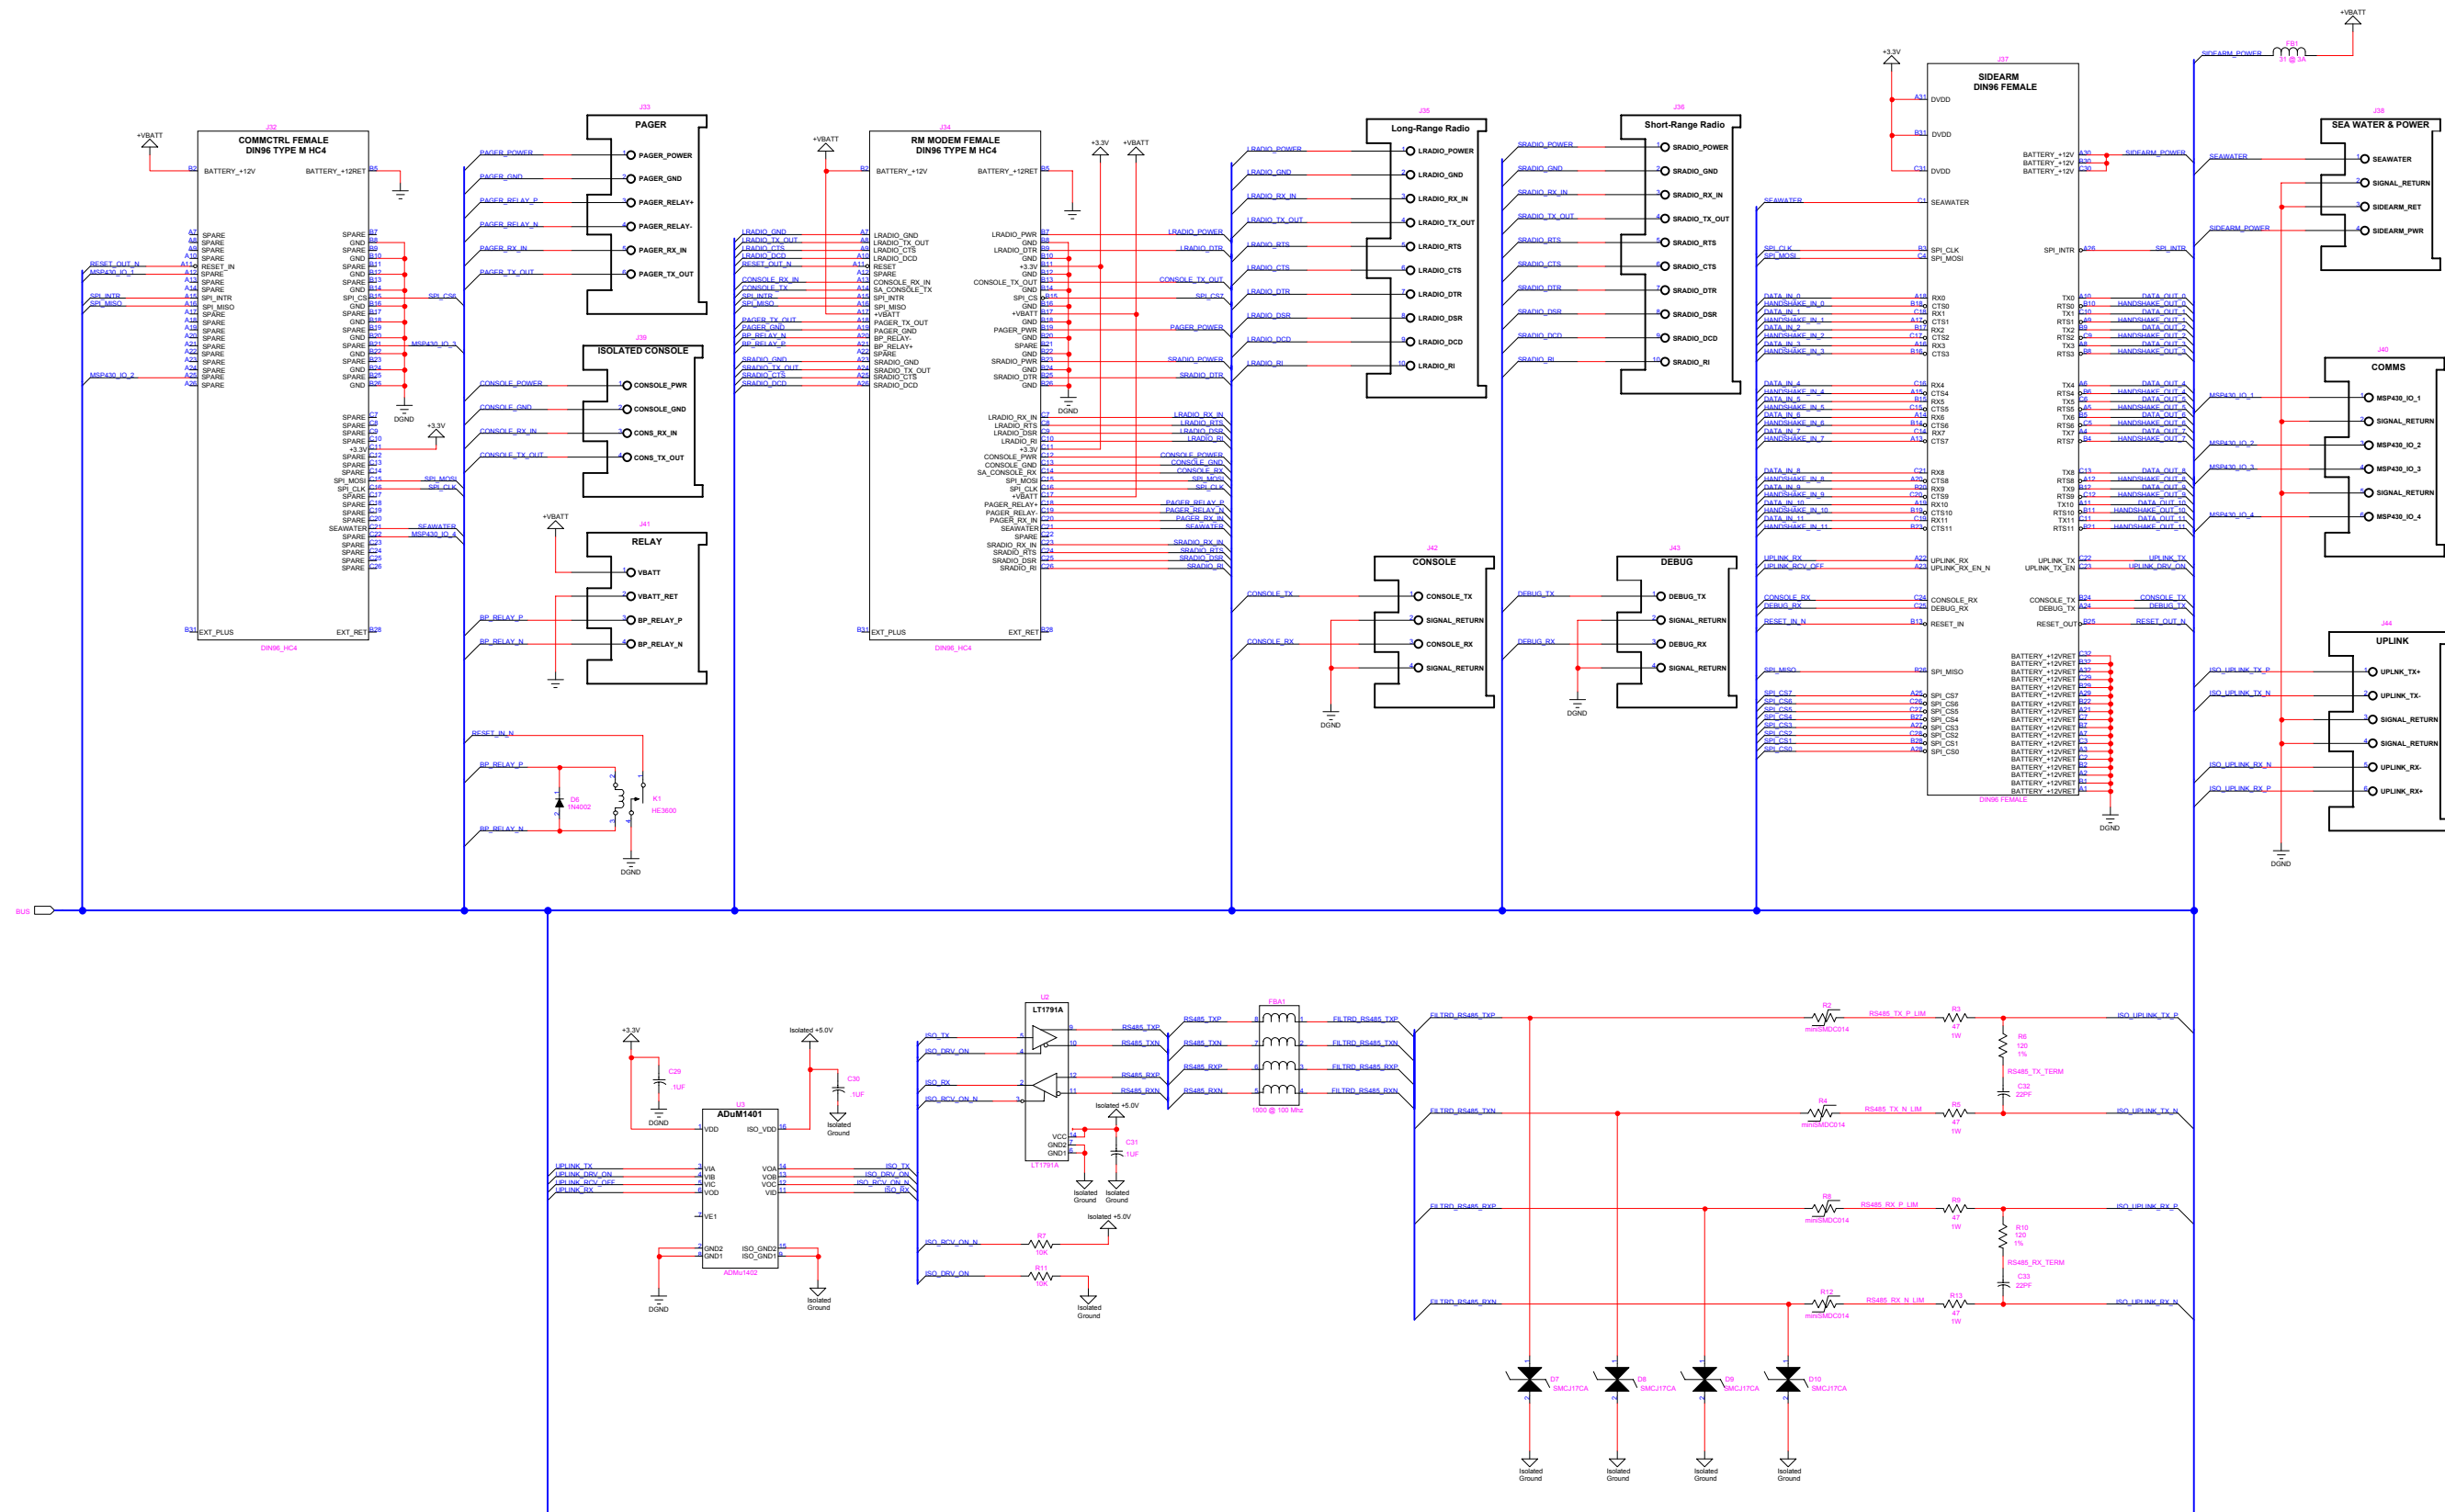

BACKPLANE TERMINATIONS

