



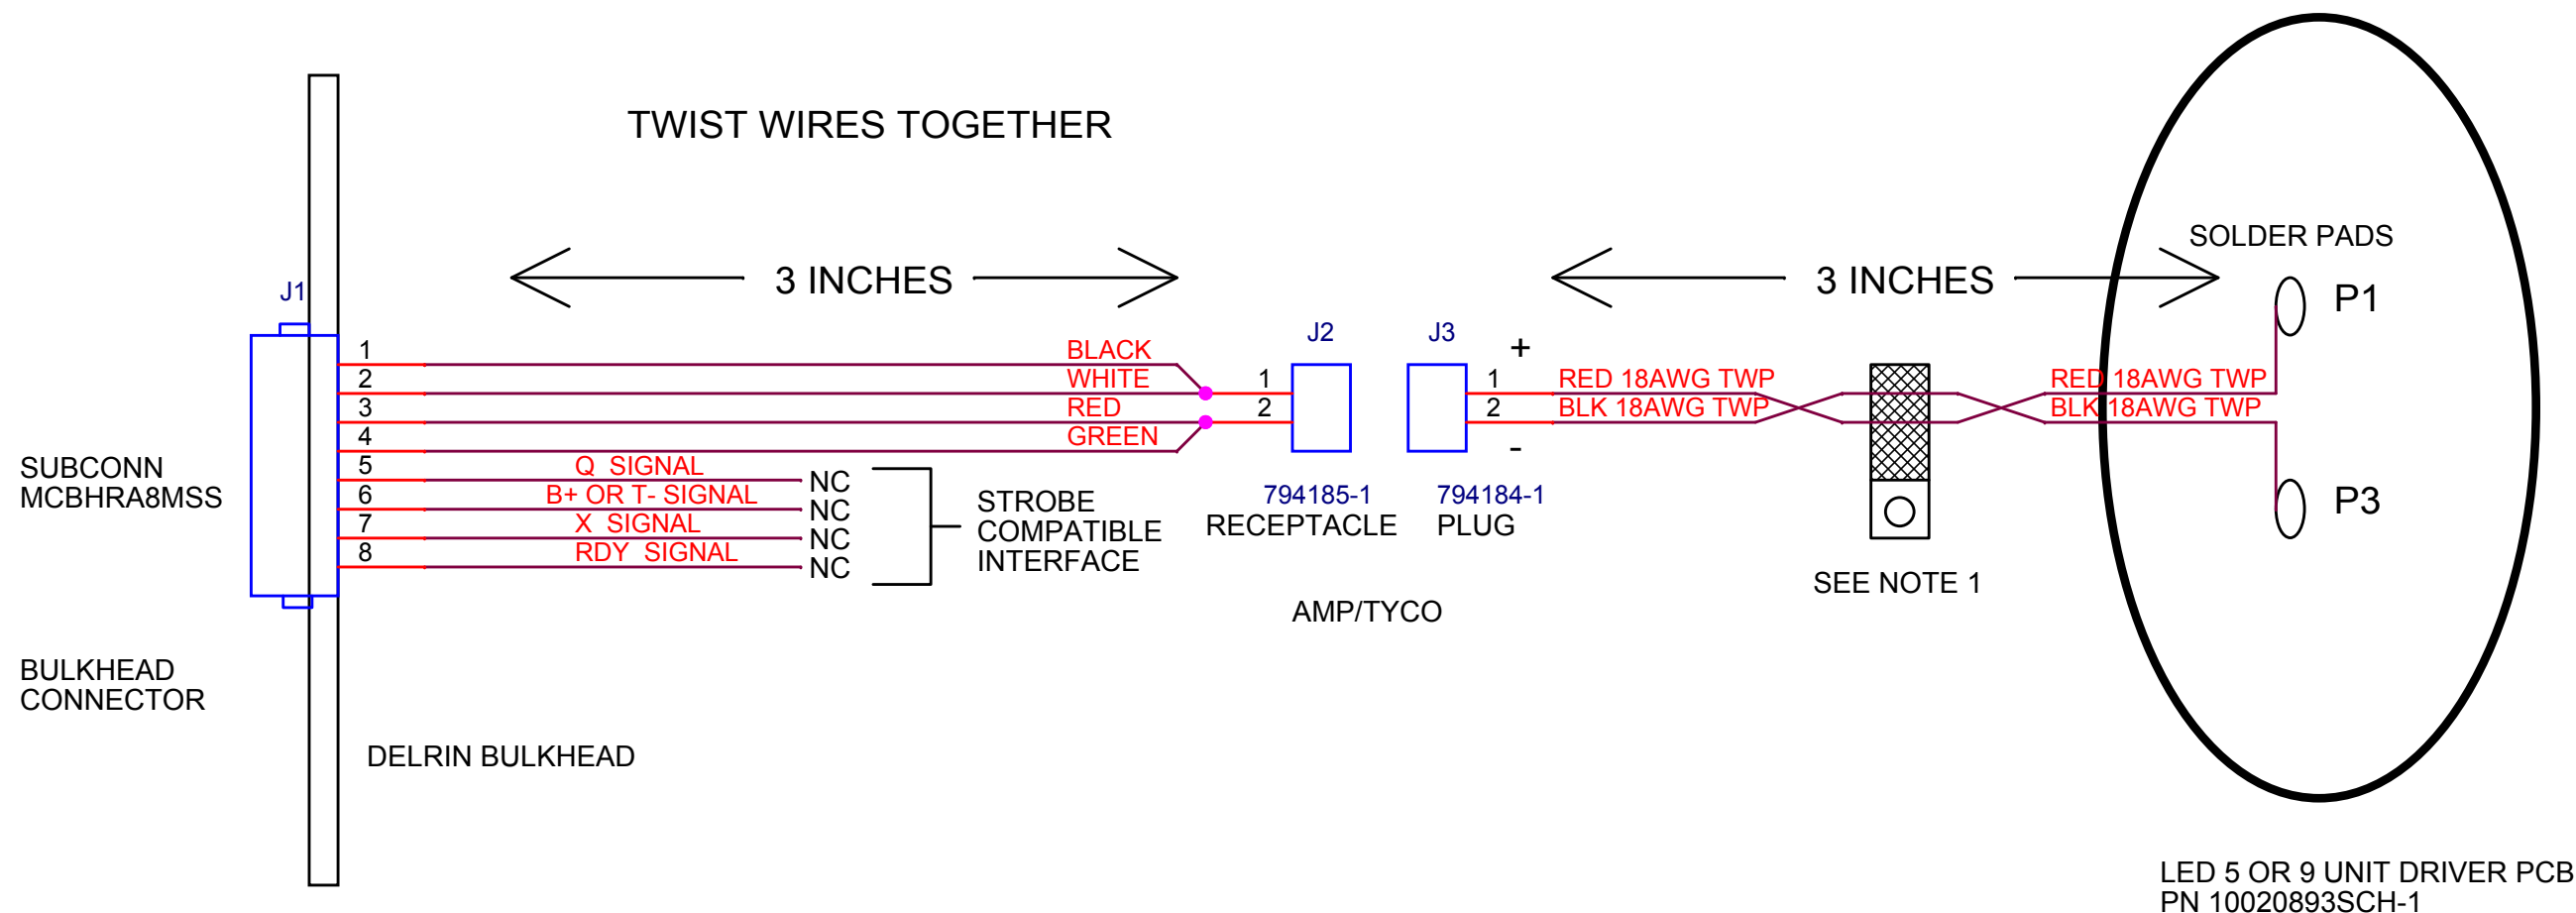

NOTES:
1. INSTALL PLASTIC CLAMP ON PIGTAIL FROM PCB
SOLDER PADS TO SECURE WIRE TO PCB.

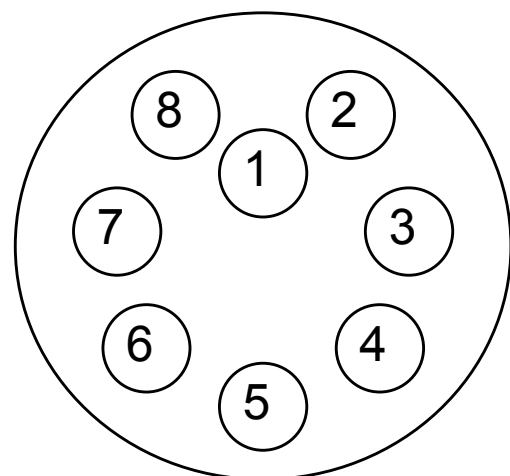

MONTEREY BAY AQUARIUM RESEARCH INSTITUTE
7700 SANDHOLDT ROAD
MOSS LANDING, CA 95039

PHONE (831) 775-1700 www.mbari.org
COPYRIGHT © 2012 MBARI
MAY NOT BE COPIED WITHOUT PERMISSION



Title SCPI LIGHTING ELECTRICAL ASSEMBLY				
Size A	Engineer: Mark Chaffey EMAIL: chma@mbari.org (831) 775-1708		Number 10020893SCH-5-B	
	Date: Friday, December 07, 2012		Sheet 5 of 5	
	Filename <Filename>		Rev B	