
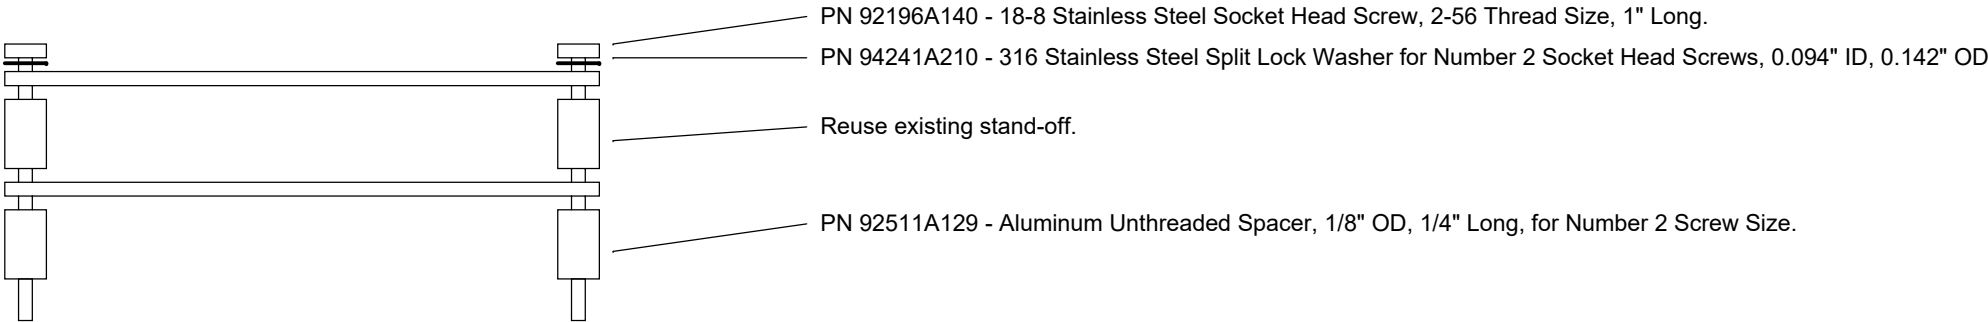


WIRE LEADS FROM HOUSING PENETRATOR

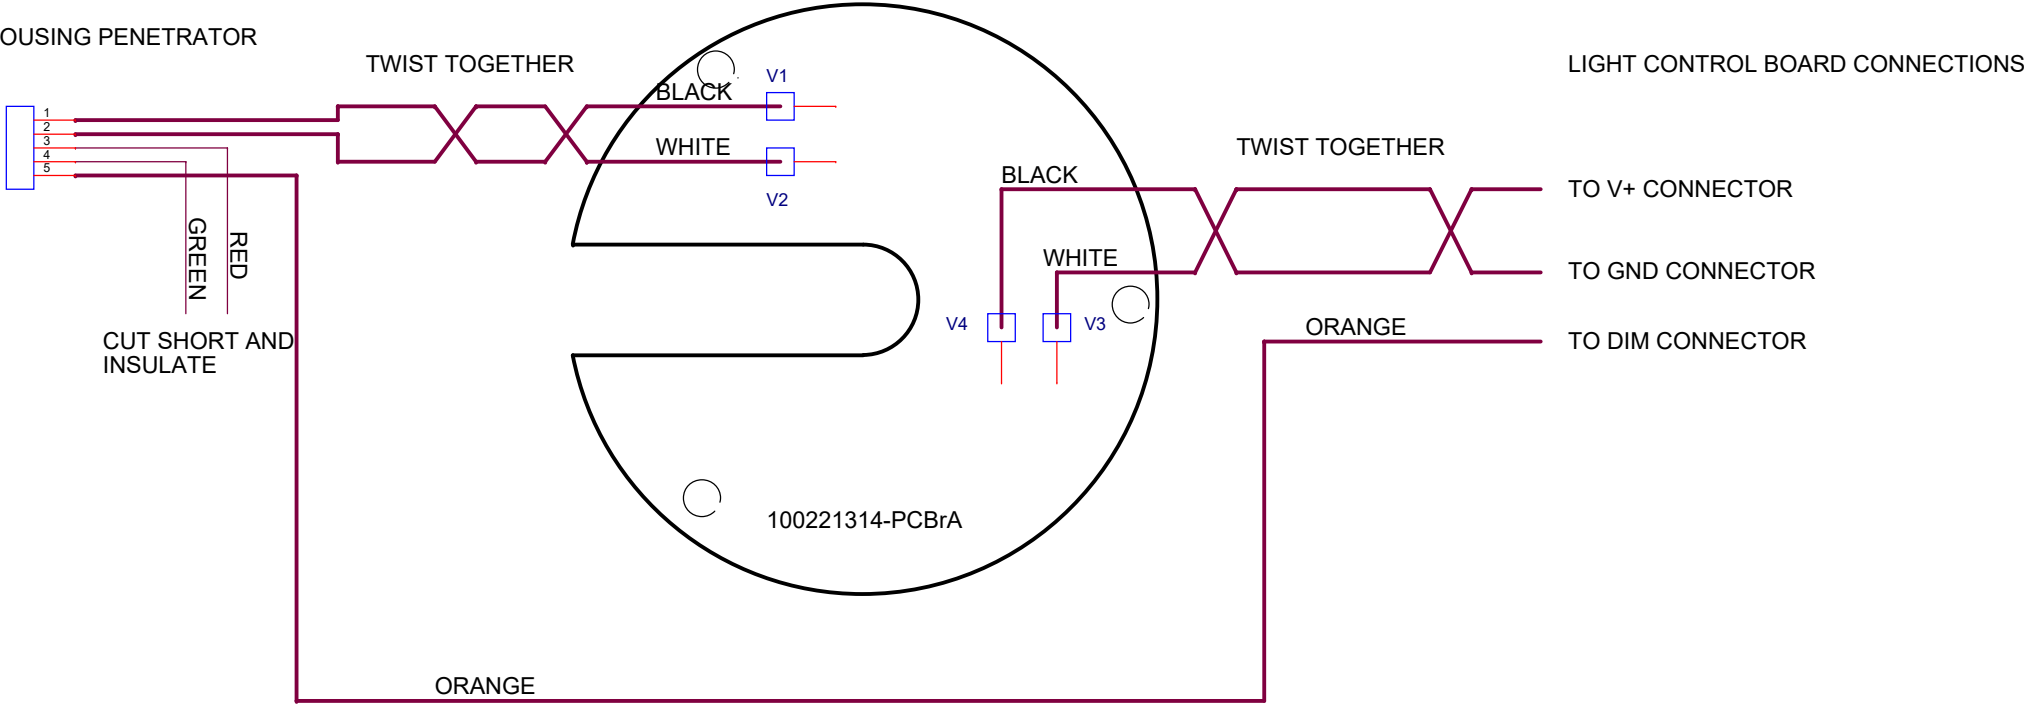

ASSEMBLY INSTRUCTIONS:

1. REMOVE RED WIRE FROM LIGHT PCB AND CUT GREEN AND RED SHORT TO CONNECTOR AND INSULATE.
2. CUT WHITE AND BLACK WIRES NEAR MIDDLE LEAVING ENOUGH PIGTAIL ON CONNECTOR TO REACH FIRST PCB CONNECTIONS. STRIP, TIN AND TWIST TOGETHER.
3. SOLDER CONNCTIONS TO FILTER BOARD AND ASSEMBLE BOARD STACK. MAKE SURE SCREWS HAVE A GOOD ELECTRICAL CONNECTION TO PCB AND CHASSIS.

DSP&L LIGHT COMMON MODE FILTER BOARD INSTALLATION

MONTEREY BAY AQUARIUM RESEARCH INSTITUTE

7700 SANDHOLDT ROAD

MOSS LANDING, CA 95039

PHONE (831) 775-1700 www.mbari.org

COPYRIGHT © 2019 MBARI

MAY NOT BE COPIED WITHOUT PERMISSION

M B A R I



Title

DSP&L LIGHT COMMON MODE FILTER BOARD INSTALLATION

Size	Engineer: Mark Chaffey EMAIL: chma@mbari.org	Number	100221314-02-SCH-A	Rev	A
Date: Monday, May 06, 2019	Filename	Sheet	1 of 1		