


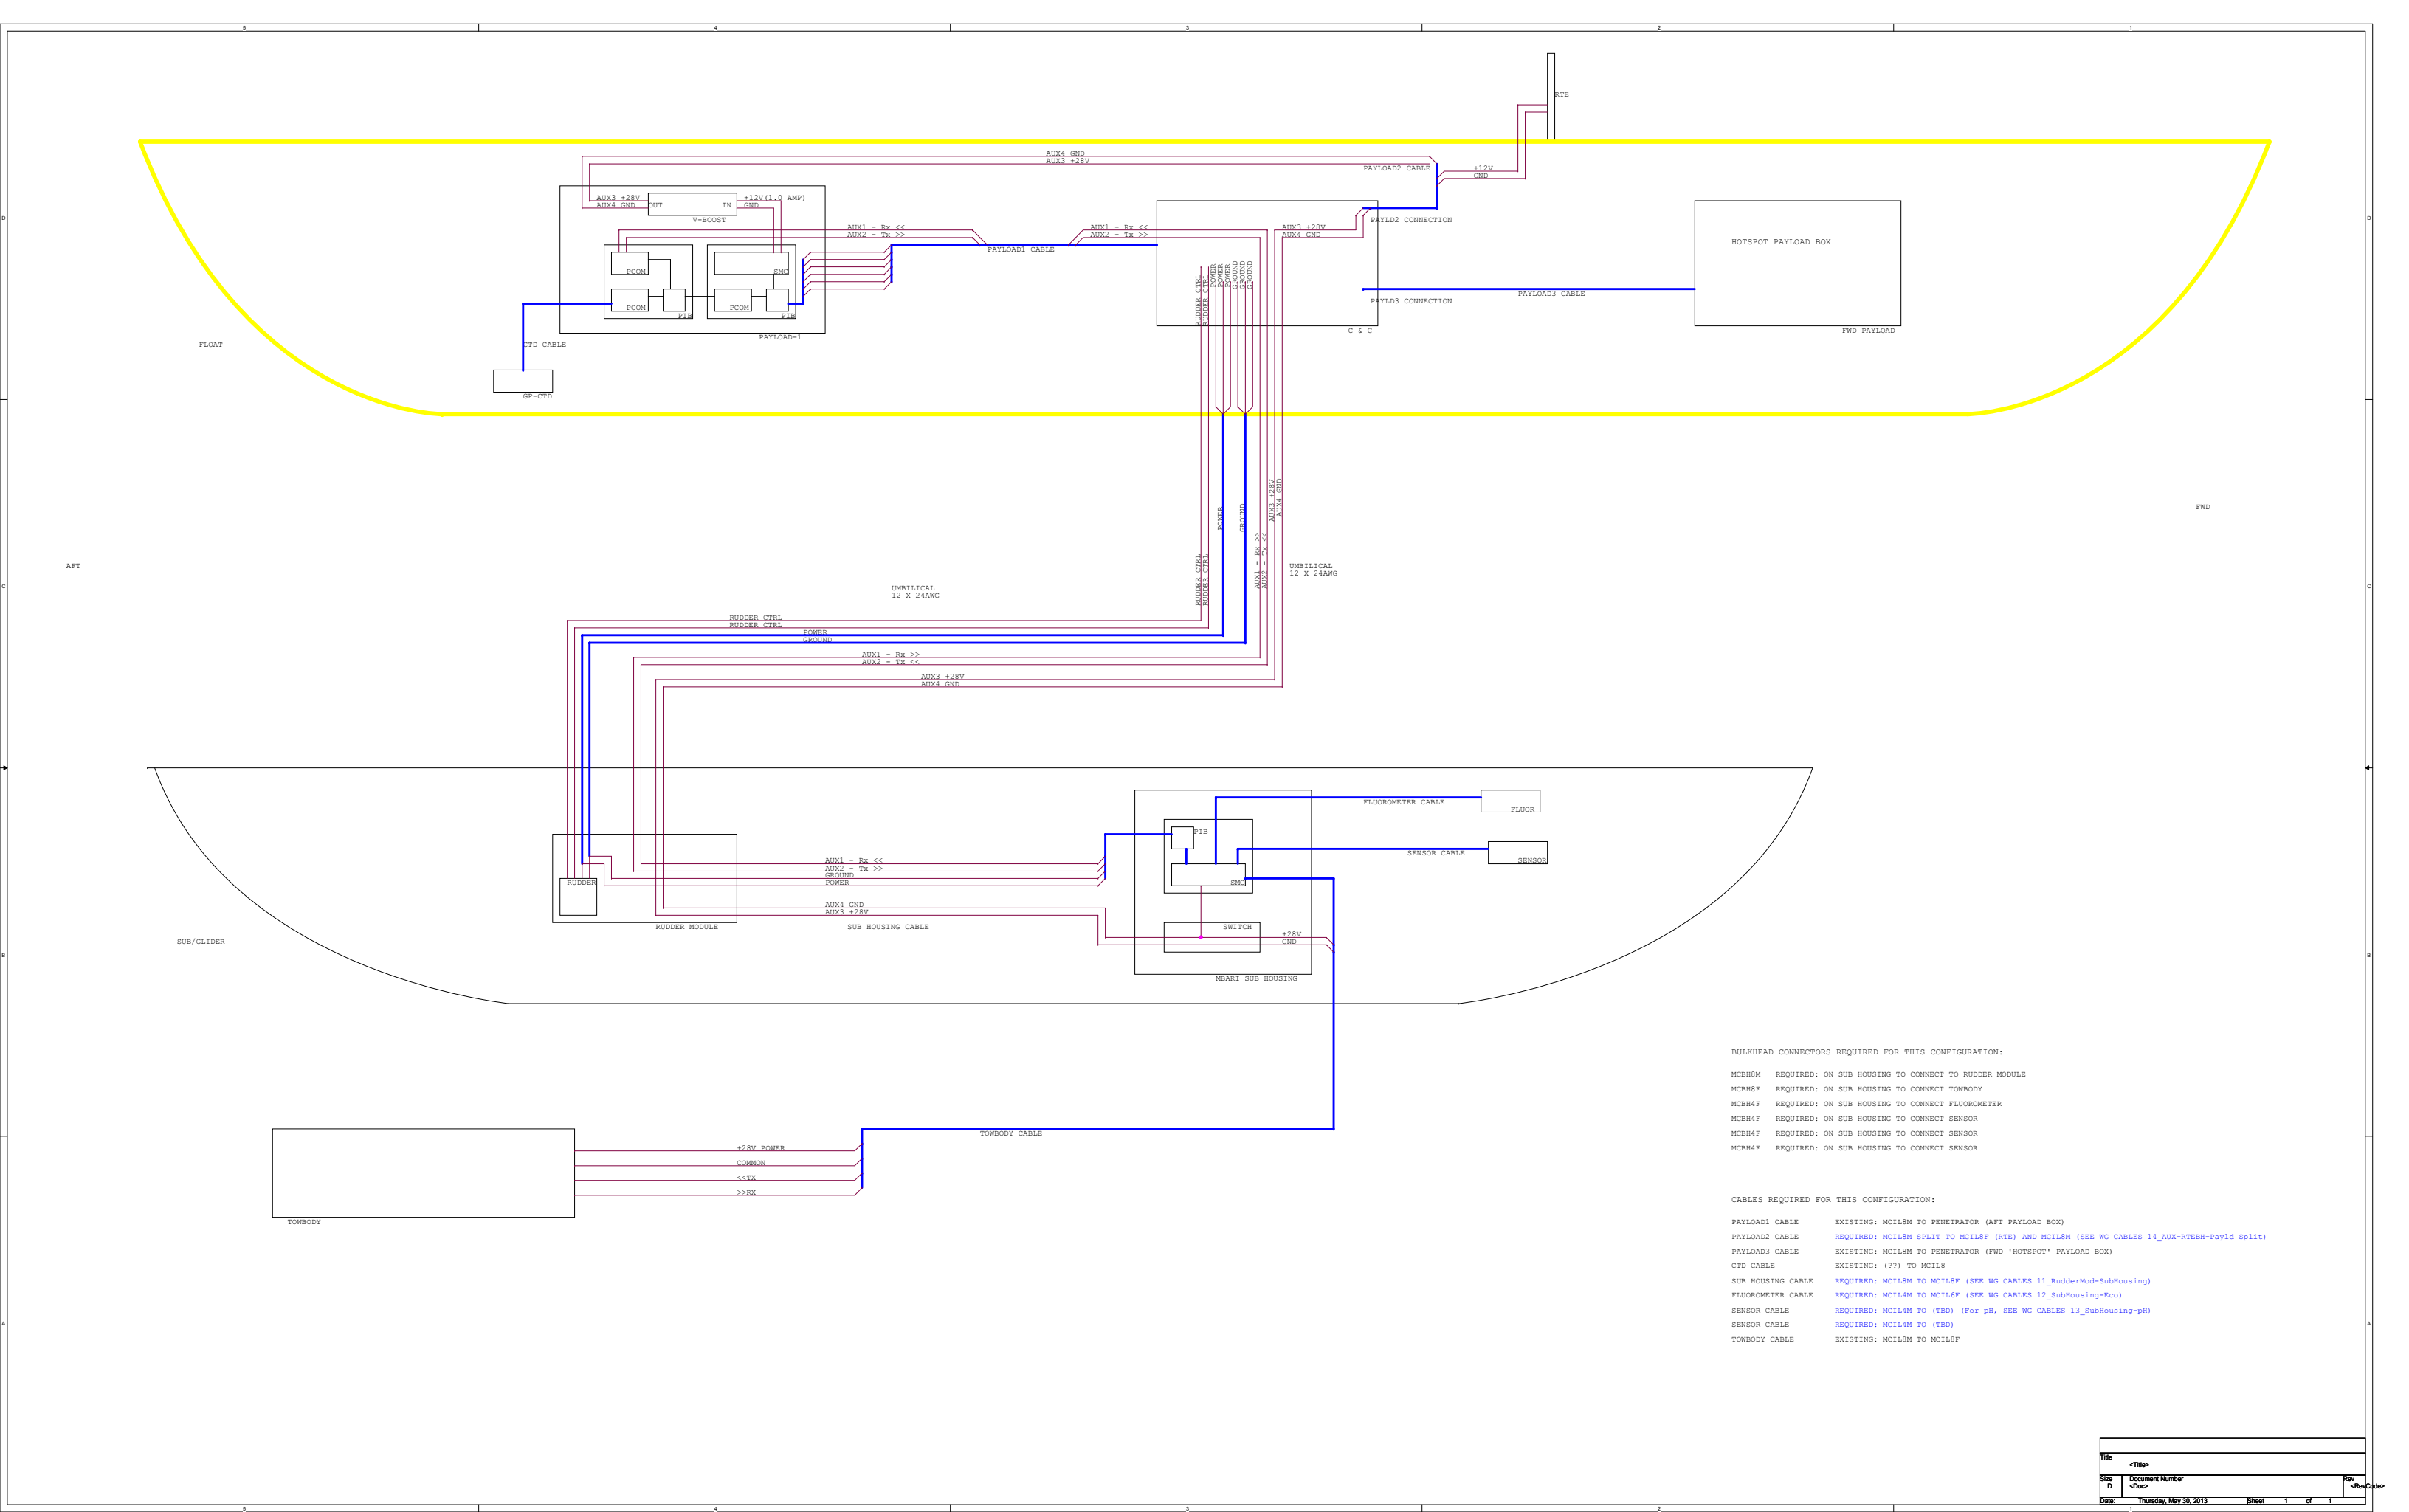

BULKHEAD CONNECTORS REQUIRED FOR THIS CONFIGURATION:

- MCBH8M REQUIRED: ON SUB HOUSING TO CONNECT TO RUDDER MODULE
- MCBH8F REQUIRED: ON SUB HOUSING TO CONNECT TOWBODY
- MCBH4F REQUIRED: ON SUB HOUSING TO CONNECT FLUOROMETER
- MCBH4F REQUIRED: ON SUB HOUSING TO CONNECT SENSOR
- MCBH4F REQUIRED: ON SUB HOUSING TO CONNECT SENSOR
- MCBH4F REQUIRED: ON SUB HOUSING TO CONNECT SENSOR

CABLES REQUIRED FOR THIS CONFIGURATION:

- PAYLOAD1 CABLE EXISTING: MCIL8M TO PENETRATOR (AFT PAYLOAD BOX)
- PAYLOAD2 CABLE REQUIRED: MCIL8M SPLIT TO MCIL8F (RTE) AND MCIL8M (SEE WG CABLES 14_AUX-RTEBH-Payld Split)
- PAYLOAD3 CABLE EXISTING: MCIL8M TO PENETRATOR (FWD 'HOTSPOT' PAYLOAD BOX)
- CTD CABLE EXISTING: (??) TO MCIL8
- SUB HOUSING CABLE REQUIRED: MCIL8M TO MCIL8F (SEE WG CABLES 11_RudderMod-SubHousing)
- FLUOROMETER CABLE REQUIRED: MCIL4M TO MCIL6F (SEE WG CABLES 12_SubHousing-Eco)
- SENSOR CABLE REQUIRED: MCIL4M TO (TBD) (For pH, SEE WG CABLES 13_SubHousing-pH)
- SENSOR CABLE REQUIRED: MCIL4M TO (TBD)
- TOWBODY CABLE EXISTING: MCIL8M TO MCIL8F