


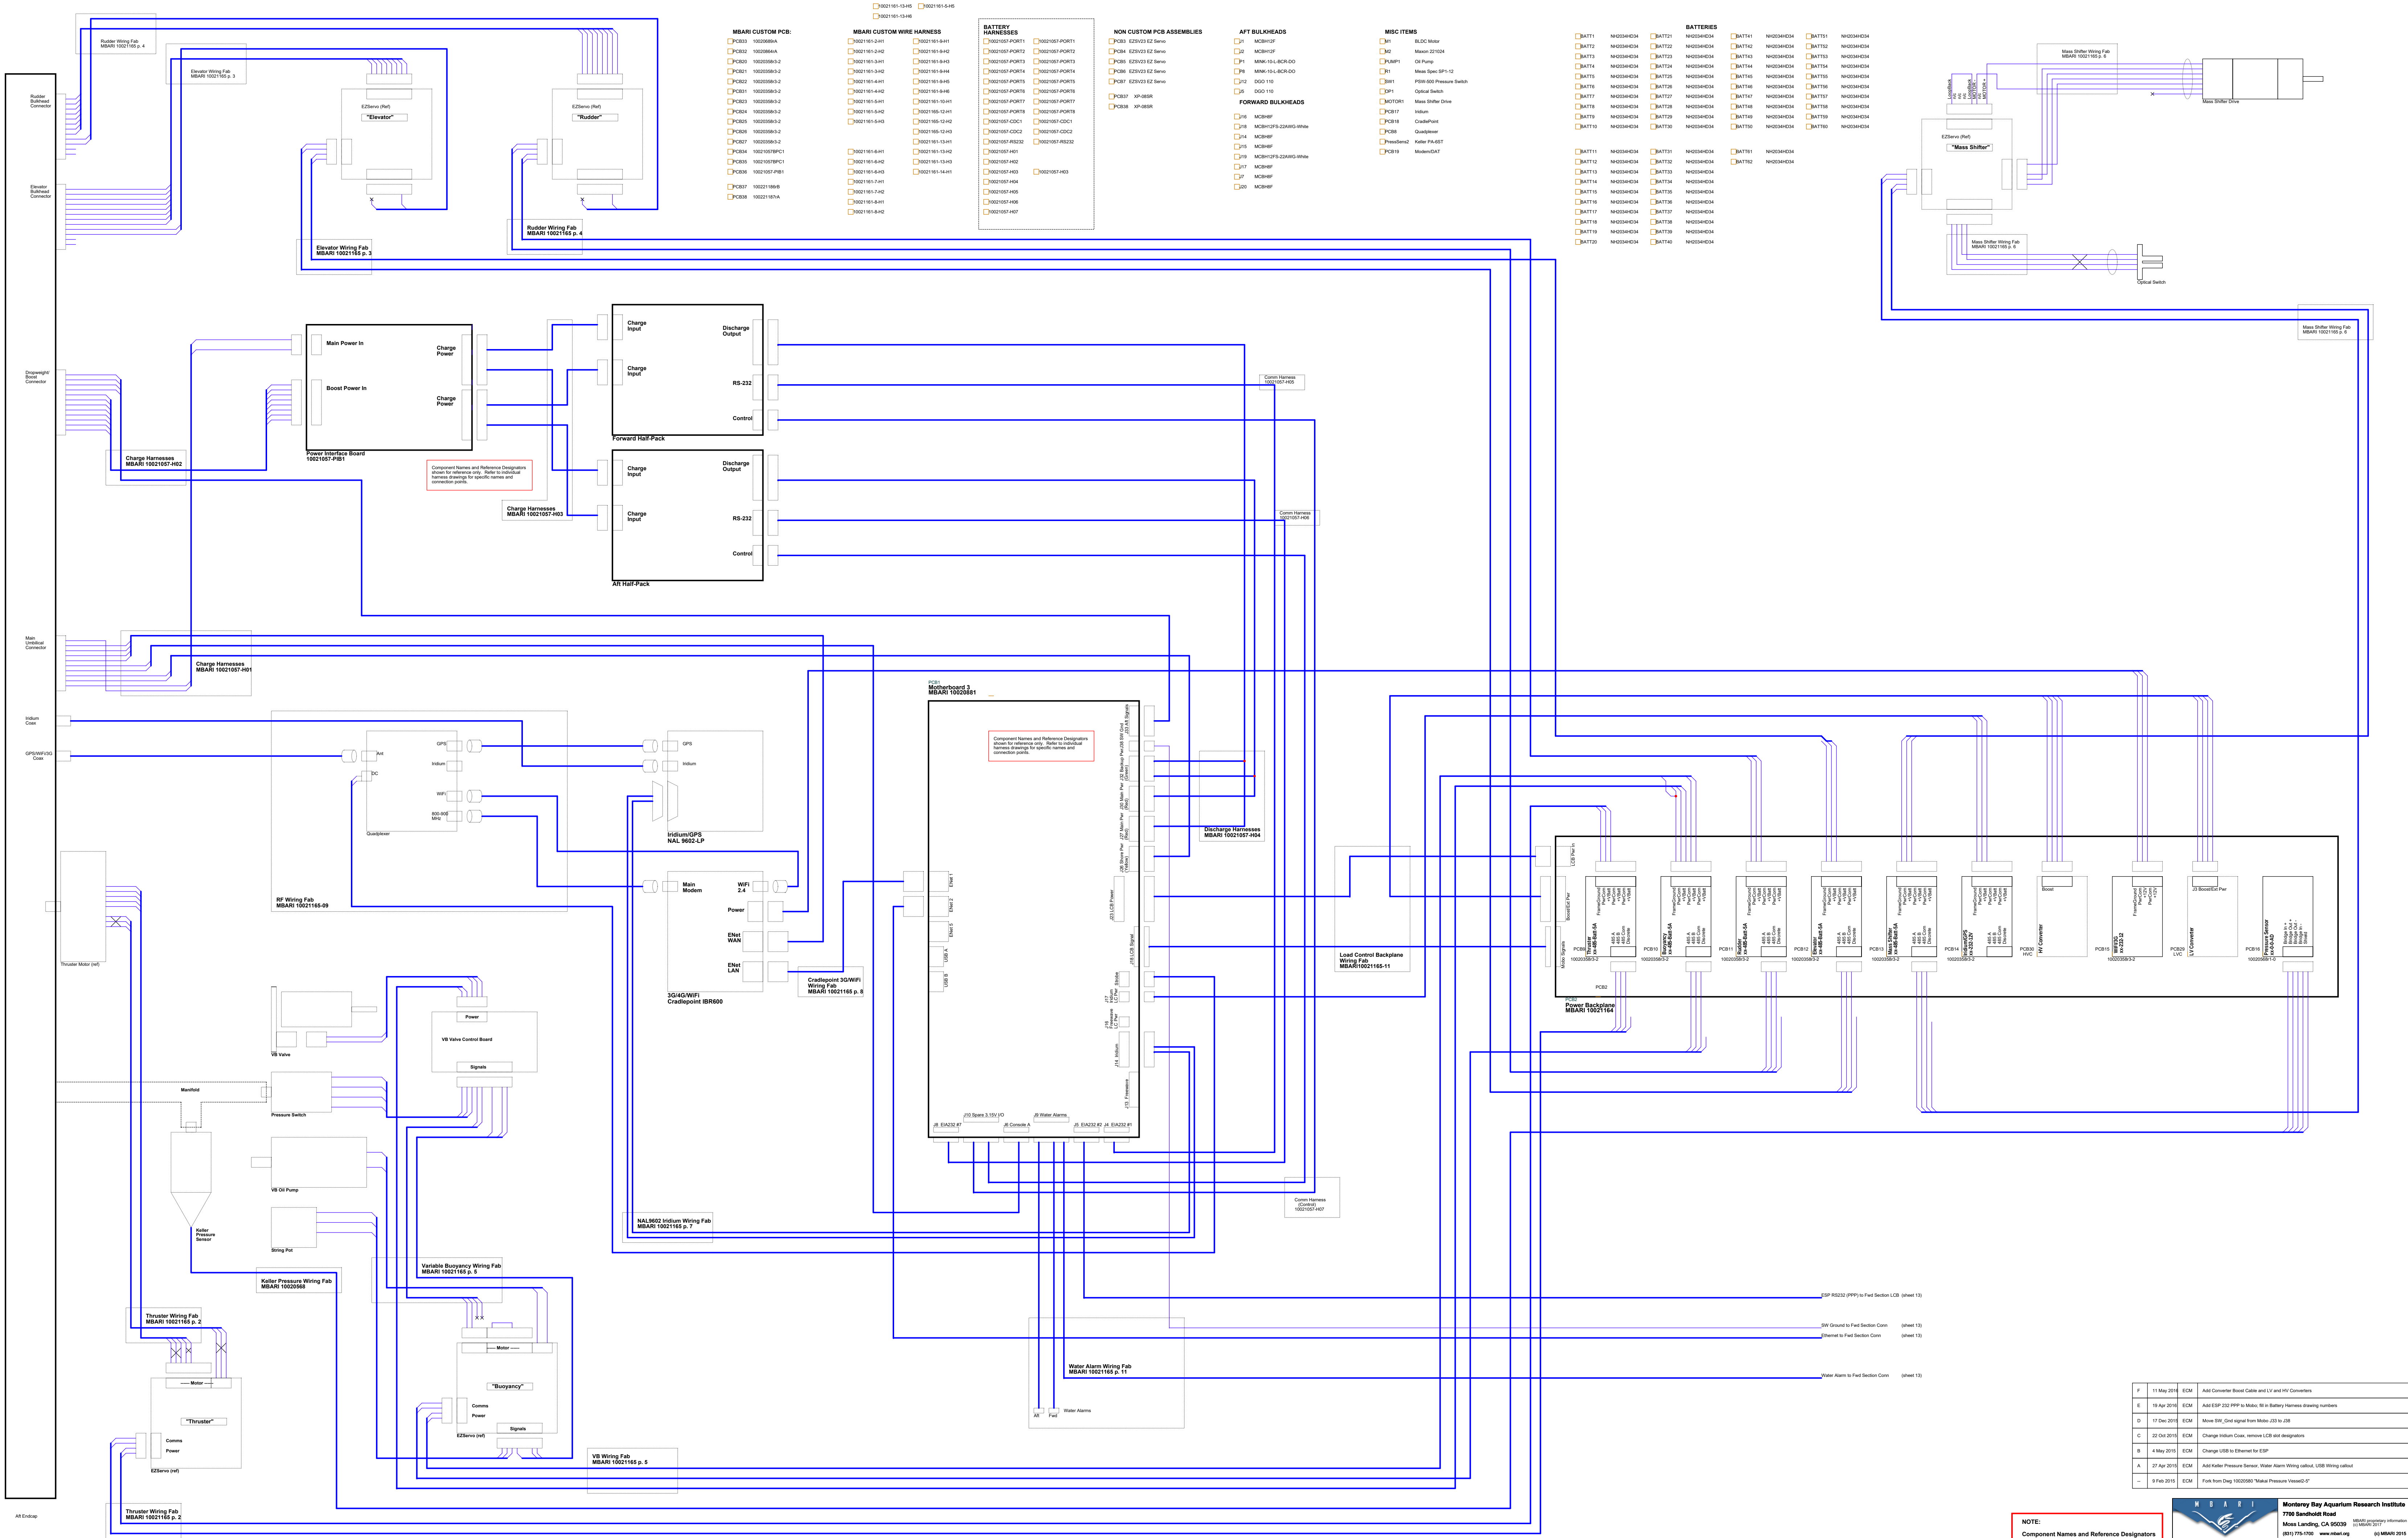

AR-Entire

NOTE:
Component Names and Reference Designators shown for reference only. Refer to individual harness drawing pages for specific names and connection points.

F	11 May 2016	ECM	Add Converter Board Cable and LV and HV Connectors	
E	19 Apr 2016	ECM	Add ESP 232 PPP to Motor 90 in Battery Harness drawing system	
D	17 Dec 2016	ECM	Motor 90W_Cord signal from Motor J20 to J20	
C	22 Oct 2016	ECM	Change Hydrom Cables, remove LCB slot designators	
B	4 May 2016	ECM	Change USB to Ethernet for ESP	
A	27 Apr 2016	ECM	Add Keller Pressure Sensor, Water Alarm Wiring, USB Wiring, and	
-	9 Feb 2016	ECM	Fork from Dwg 10020588 "Make Pressure Vesel0-0"	

Monterey Bay Aquarium Research Institute
7700 Sandhole Road
Monterey, CA 94029
(415) 775-1700 www.mbari.org
© MBARI 2015

Doc No:	Rev:	Date:	Author:	Check:	Rev:
10021165	1	11 May 2016	W. J. ...	W. J. ...	1
Block Diagram, LRAUV Int Press Vess Wiring, Build					
Sheet 1 of 15					