
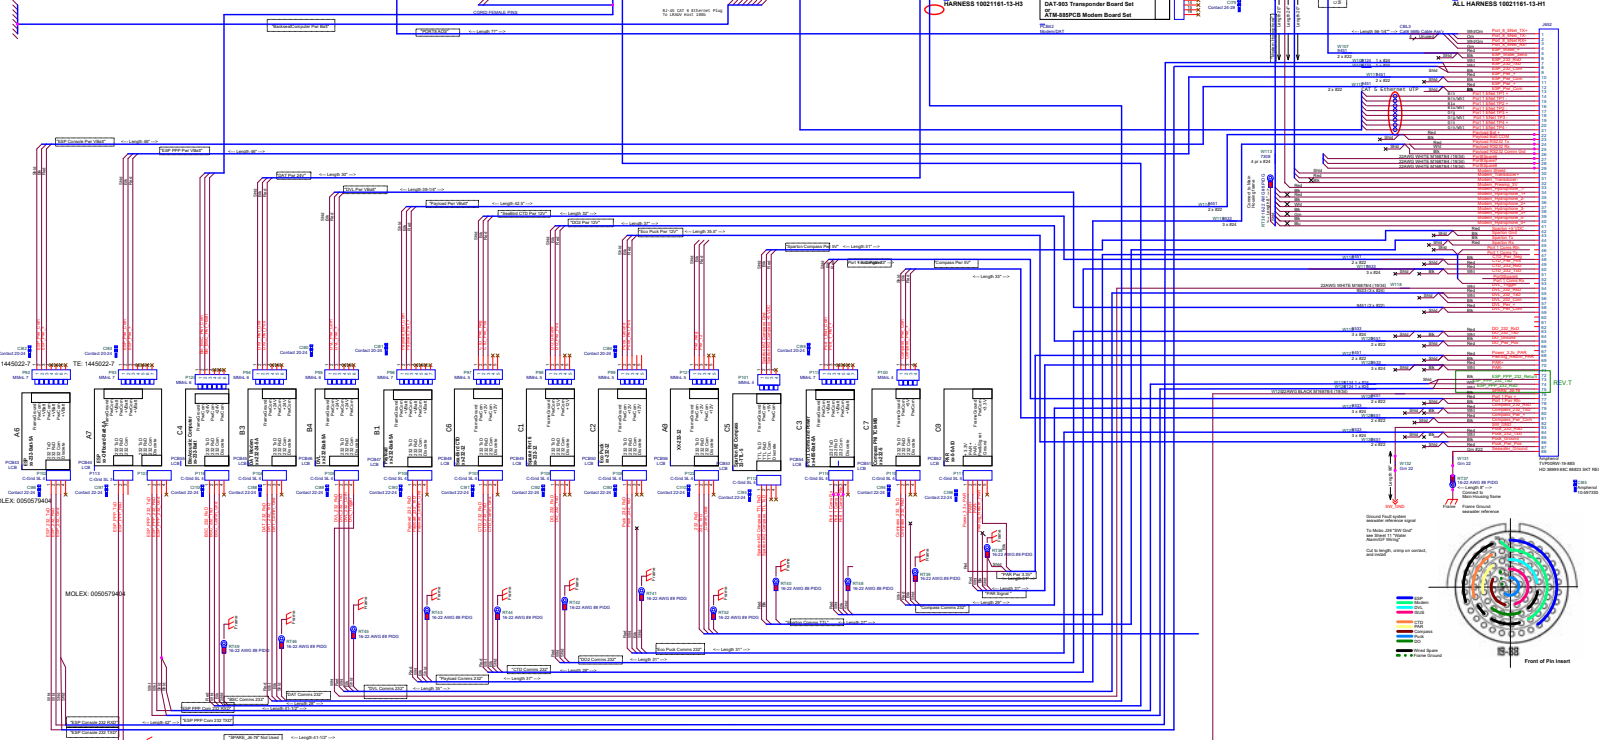
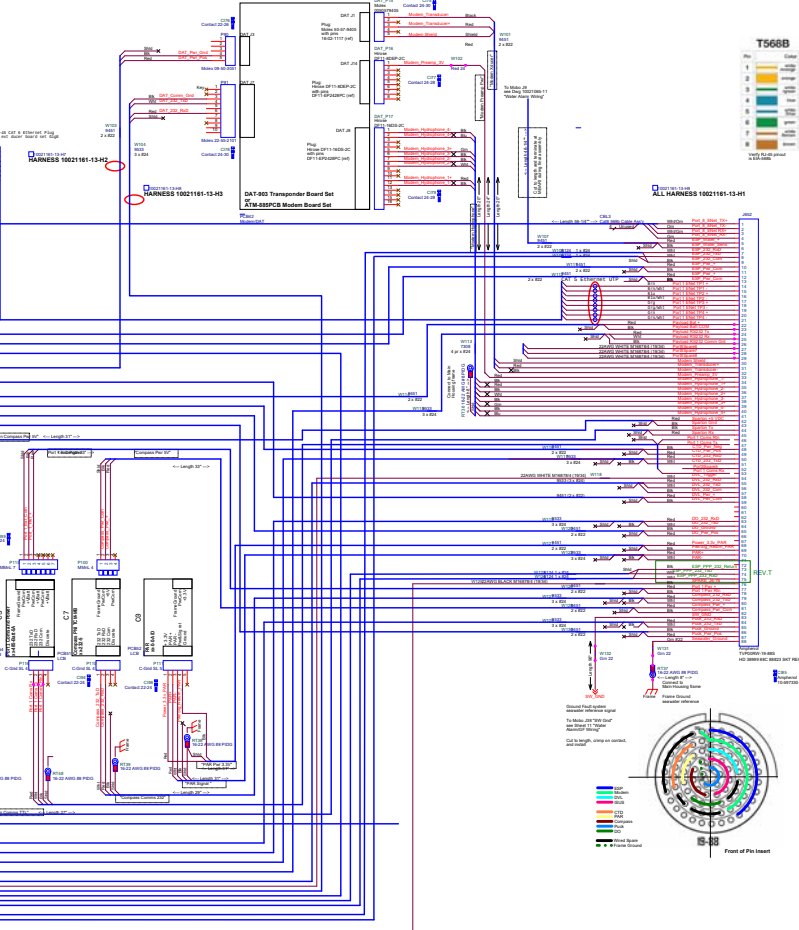


T000:

- update connectors
- check r/r/x on connector
- what LC voltage/current?

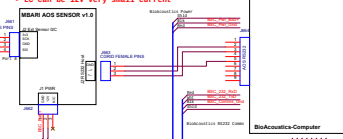

NOTE: Board position on drawing does not correspond to board position in vehicle. See vehicle-specific config doc.

Rev	Date	Author	Description	Rev	Date	Author	Description	Rev	Date	Author	Description
1	13 Jan 2010	BAI	Added Pin 1 (Biosensor) connector	5	1 Feb 2010	JLS	Change wiring to the BPP PPP Connectors	6	27 Jan 2010	BAI	Change wiring to the BPP PPP Connectors
2	8 Aug 2010	BAI	Added BPP PPP 600 connector cable	6	28 Jan 2010	BAI	Change wiring to the BPP PPP Connectors	7	1 Feb 2010	BAI	Change wiring to the BPP PPP Connectors
3	24 Oct 2010	BAI	Added wiring to the BPP PPP 600 connector cable	7	2 Jan 2010	BAI	Change wiring to the BPP PPP Connectors	8	1 Feb 2010	BAI	Change wiring to the BPP PPP Connectors
4	12 Aug 2010	BAI	Added wiring to the BPP PPP 600 connector cable	8	2 Jan 2010	BAI	Change wiring to the BPP PPP Connectors	9	1 Feb 2010	BAI	Change wiring to the BPP PPP Connectors
5	12 Aug 2010	BAI	Added wiring to the BPP PPP 600 connector cable	9	2 Jan 2010	BAI	Change wiring to the BPP PPP Connectors	10	1 Feb 2010	BAI	Change wiring to the BPP PPP Connectors

Western Sky Aquarum Research Institute

7700 Southview Road
Aliso Viejo, CA 92656

Phone: 949.261.1234
Fax: 949.261.1235
Email: info@westernsky.com

Website: www.westernsky.com