



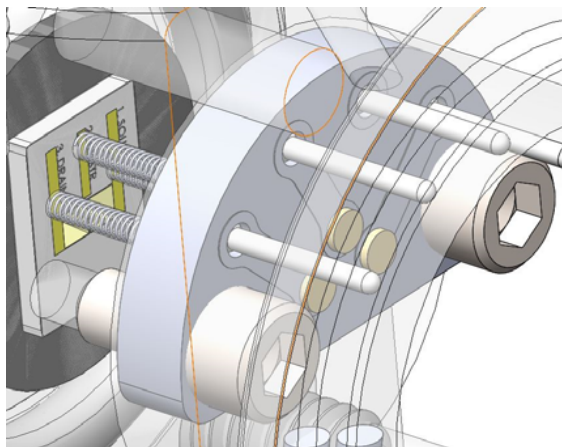

Notes:

- 1) 4X Pave wires are soldered to the CCA solder pins. 1X reference electrode wire is soldered to a CCA solder pin as shown
- 2) 1X Pave wire mounts under the counter electrode screw
- 3) Trace side shown here has 4 solder pins and 3 nail heads and is visible when mounted in stem
- 4) Nail pins on other side contact the fuzz buttons which contact the trace (back) side of the ISFET chip

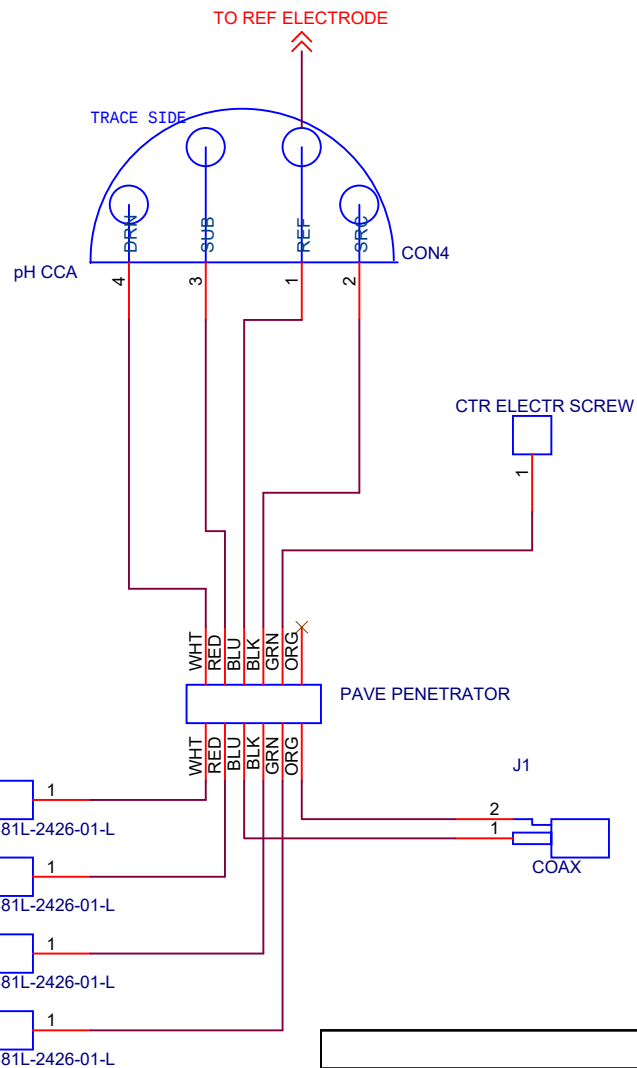

Title		
ph2018 Stem Wiring Diagram		
Size A	Document Number <Doc>	Rev <Rev Code>
Date:	Tuesday, April 16, 2019	Sheet 1 of 1