


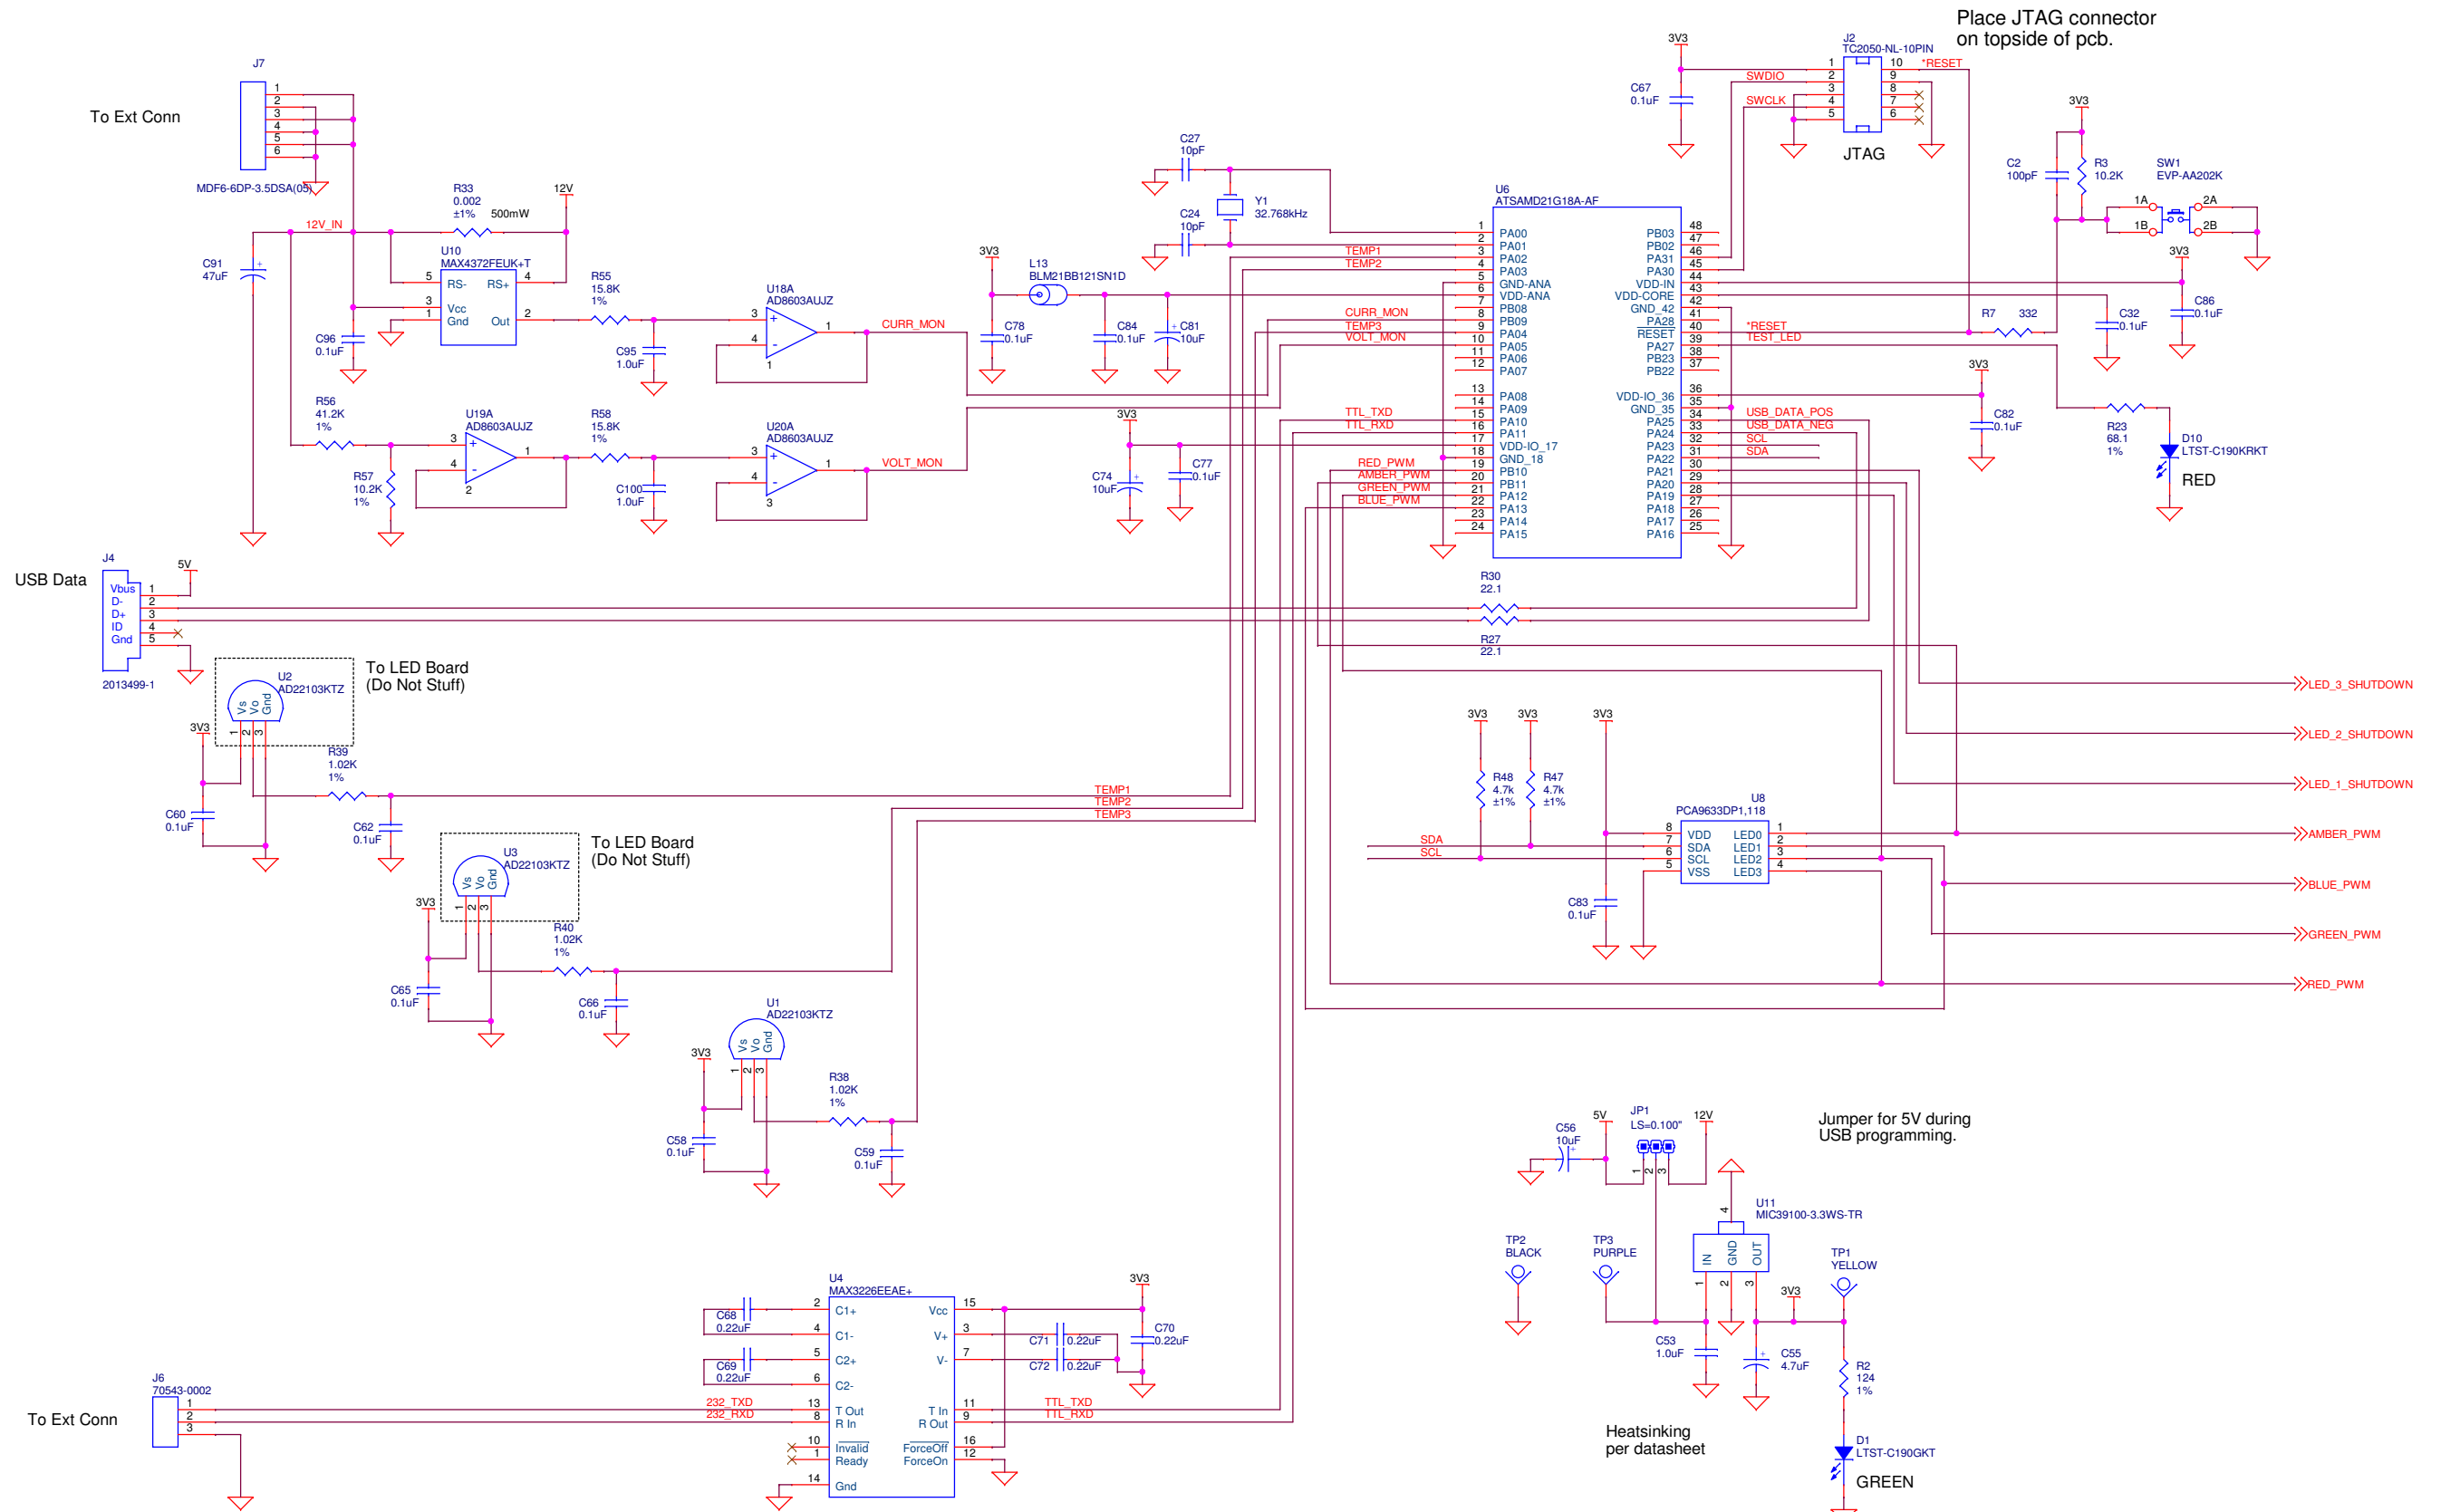

Place JTAG connector on top side of pcb.

Jumper for 5V during USB programming.

Heatsinking per datasheet

5-Pin Board Connector
Molex PN# 0533980571
Digikey PN# WM7609CT-ND

5-Pin Inline Connector
Molex PN# 0510210500
Digikey PN# WM1723-ND


Pins:
Molex PN# 0500798000
Digikey PN# WM1142CT-ND



Monterey Bay Aquarium Research Institute
7700 Sandholdt Road, Moss Landing, CA 95039

Title
MSLED Driver Board

Engineer	Size	Document Number	Layout File	Rev
Kecy	C	<Doc>	<Layout File>	<Rev>
Date: Wednesday, February 19, 2020		Sheet 1 of 3		

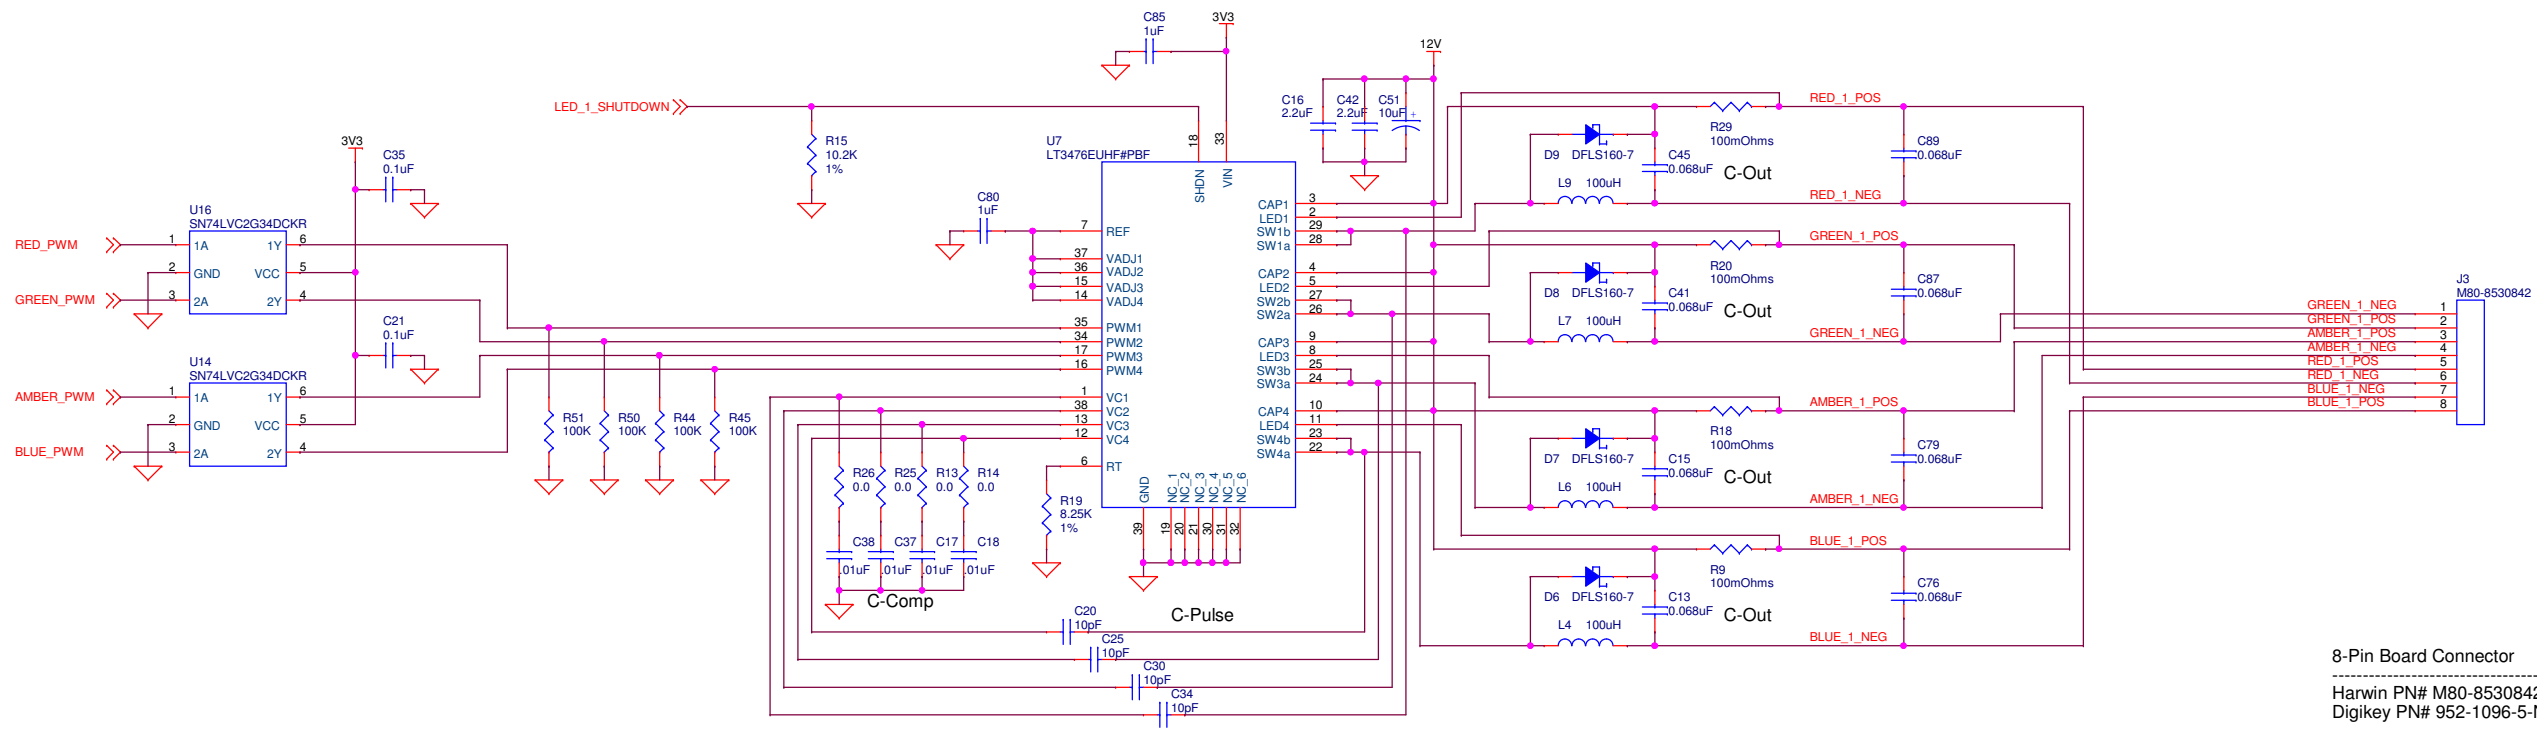

8-Pin Board Connector


Harwin PN# M80-8530842
Digikey PN# 952-1096-5-ND

8-Pin 22AWG Inline Connector

Harwin PN# M80-8890805
Digikey PN# 952-1209-ND

8-Pin 24-28AWG Inline Connector

Harwin PN# M80-8880805
Digikey PN# 952-1198-ND

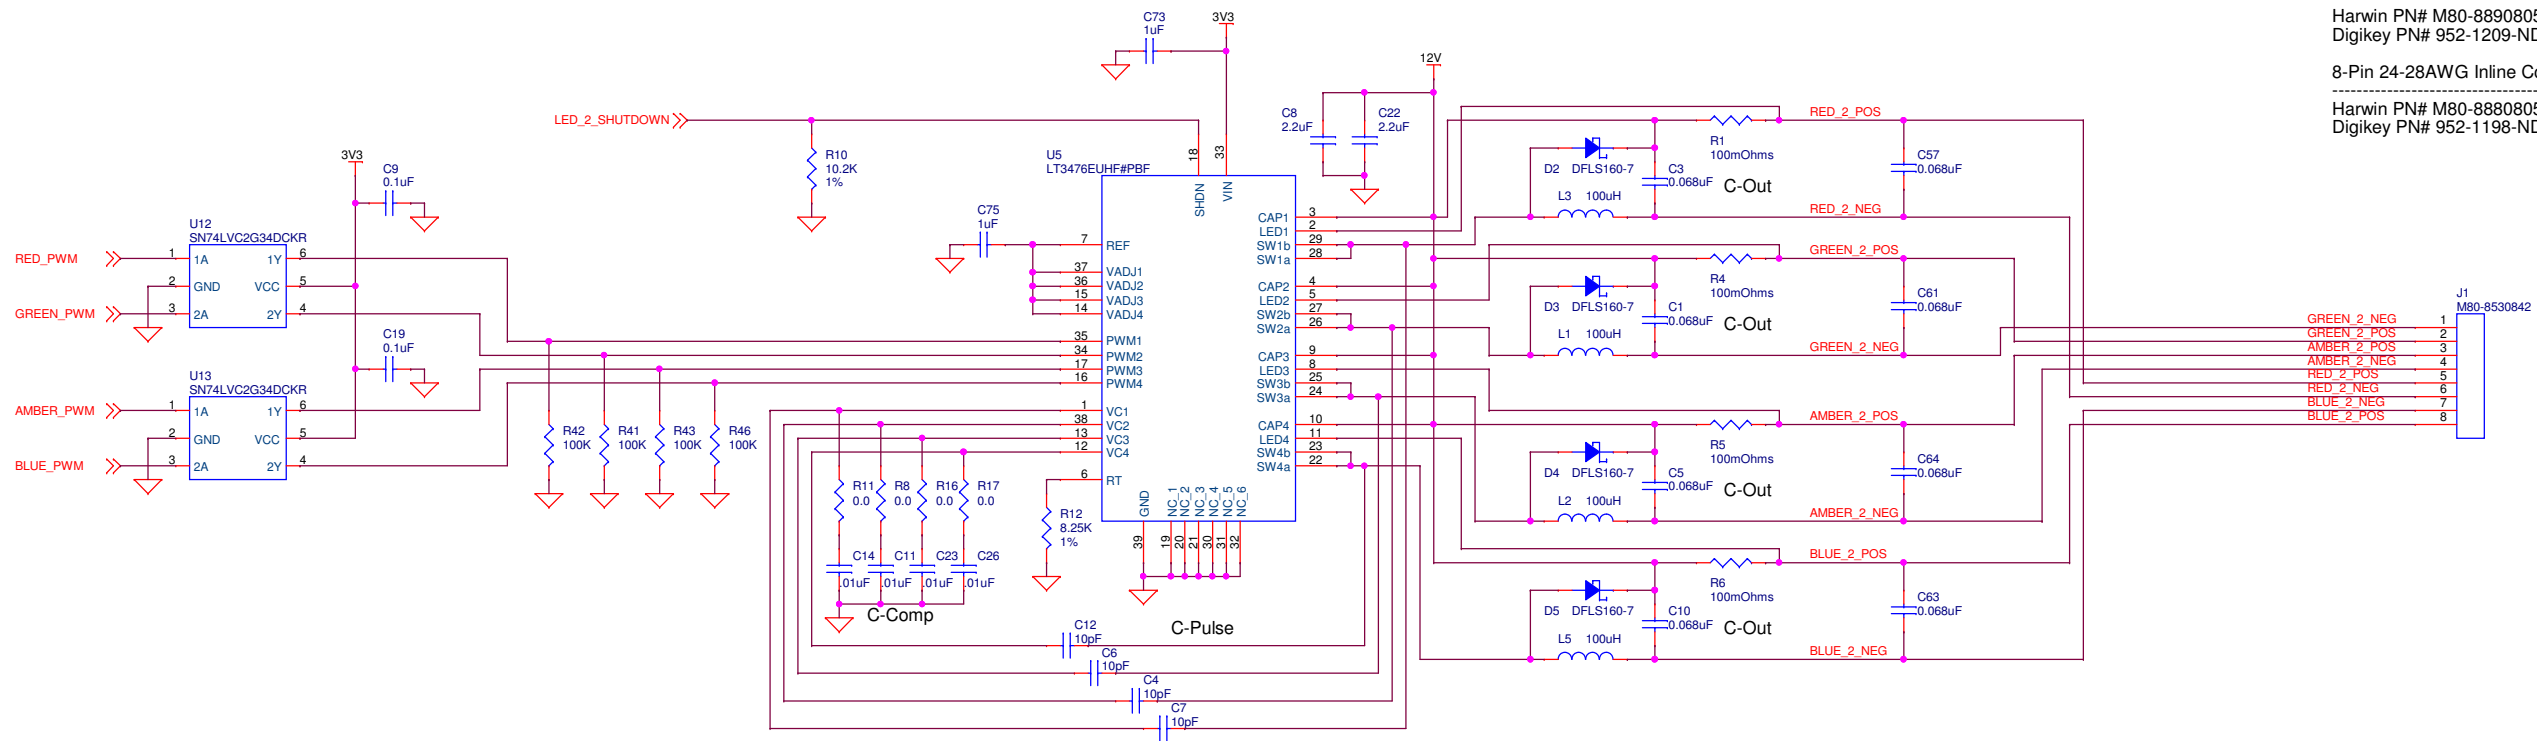

8-Pin Board Connector

Harwin PN# M80-8530842
Digikey PN# 952-1096-5-ND

8-Pin 22AWG Inline Connector

Harwin PN# M80-8890805
Digikey PN# 952-1209-ND

8-Pin 24-28AWG Inline Connector

Harwin PN# M80-8880805
Digikey PN# 952-1198-ND

