


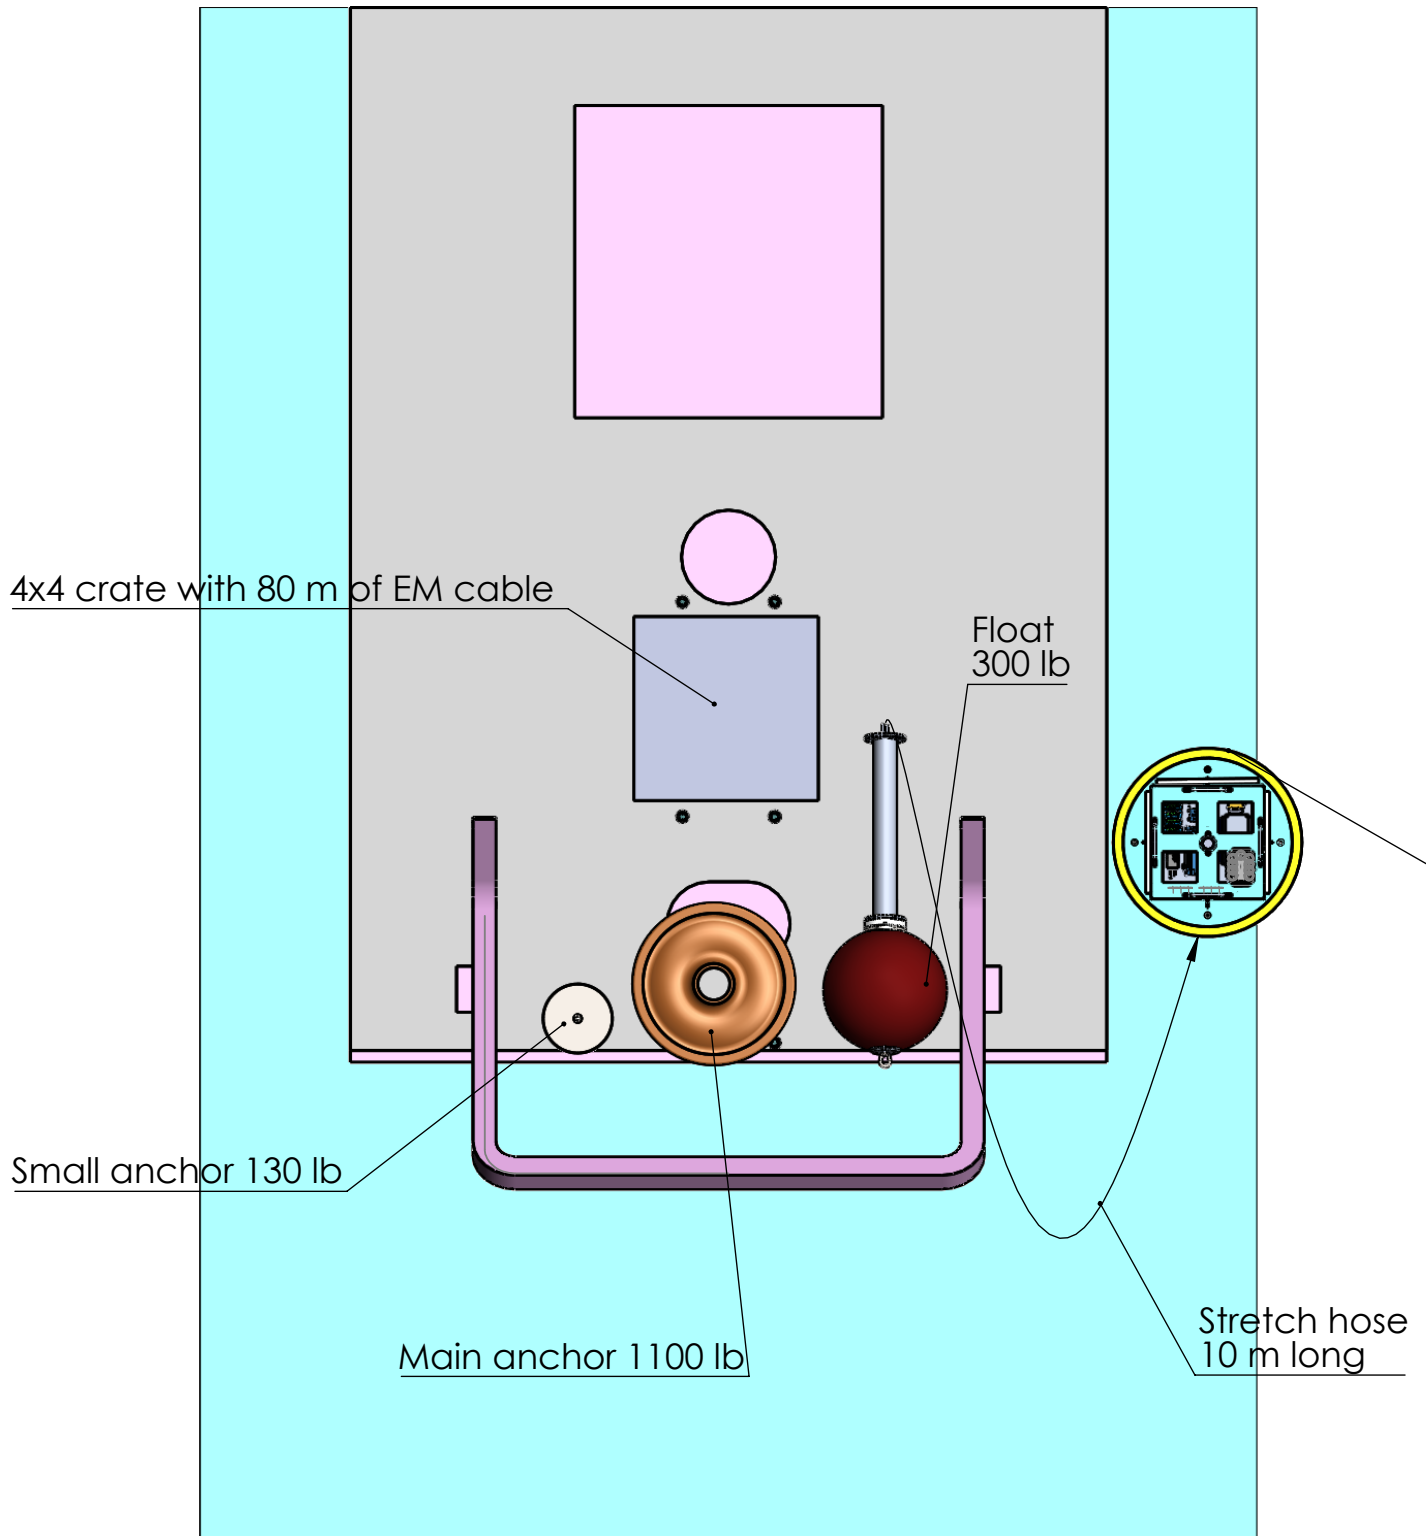

Start of deployment: put the buoy in the water and tie to the side of the boat.
Move large float near transom.