


Motherboard COM port map
J9 Slot 1:
CHA = COM1
CHB = COM2
CHC = COM4
J10 Slot 2:
CHA = COM3
CHB = COM5
CHC = COM6

NOTES:
1. Remove R2 and R3 (SCL and SDA pullups) from PTH sensor board

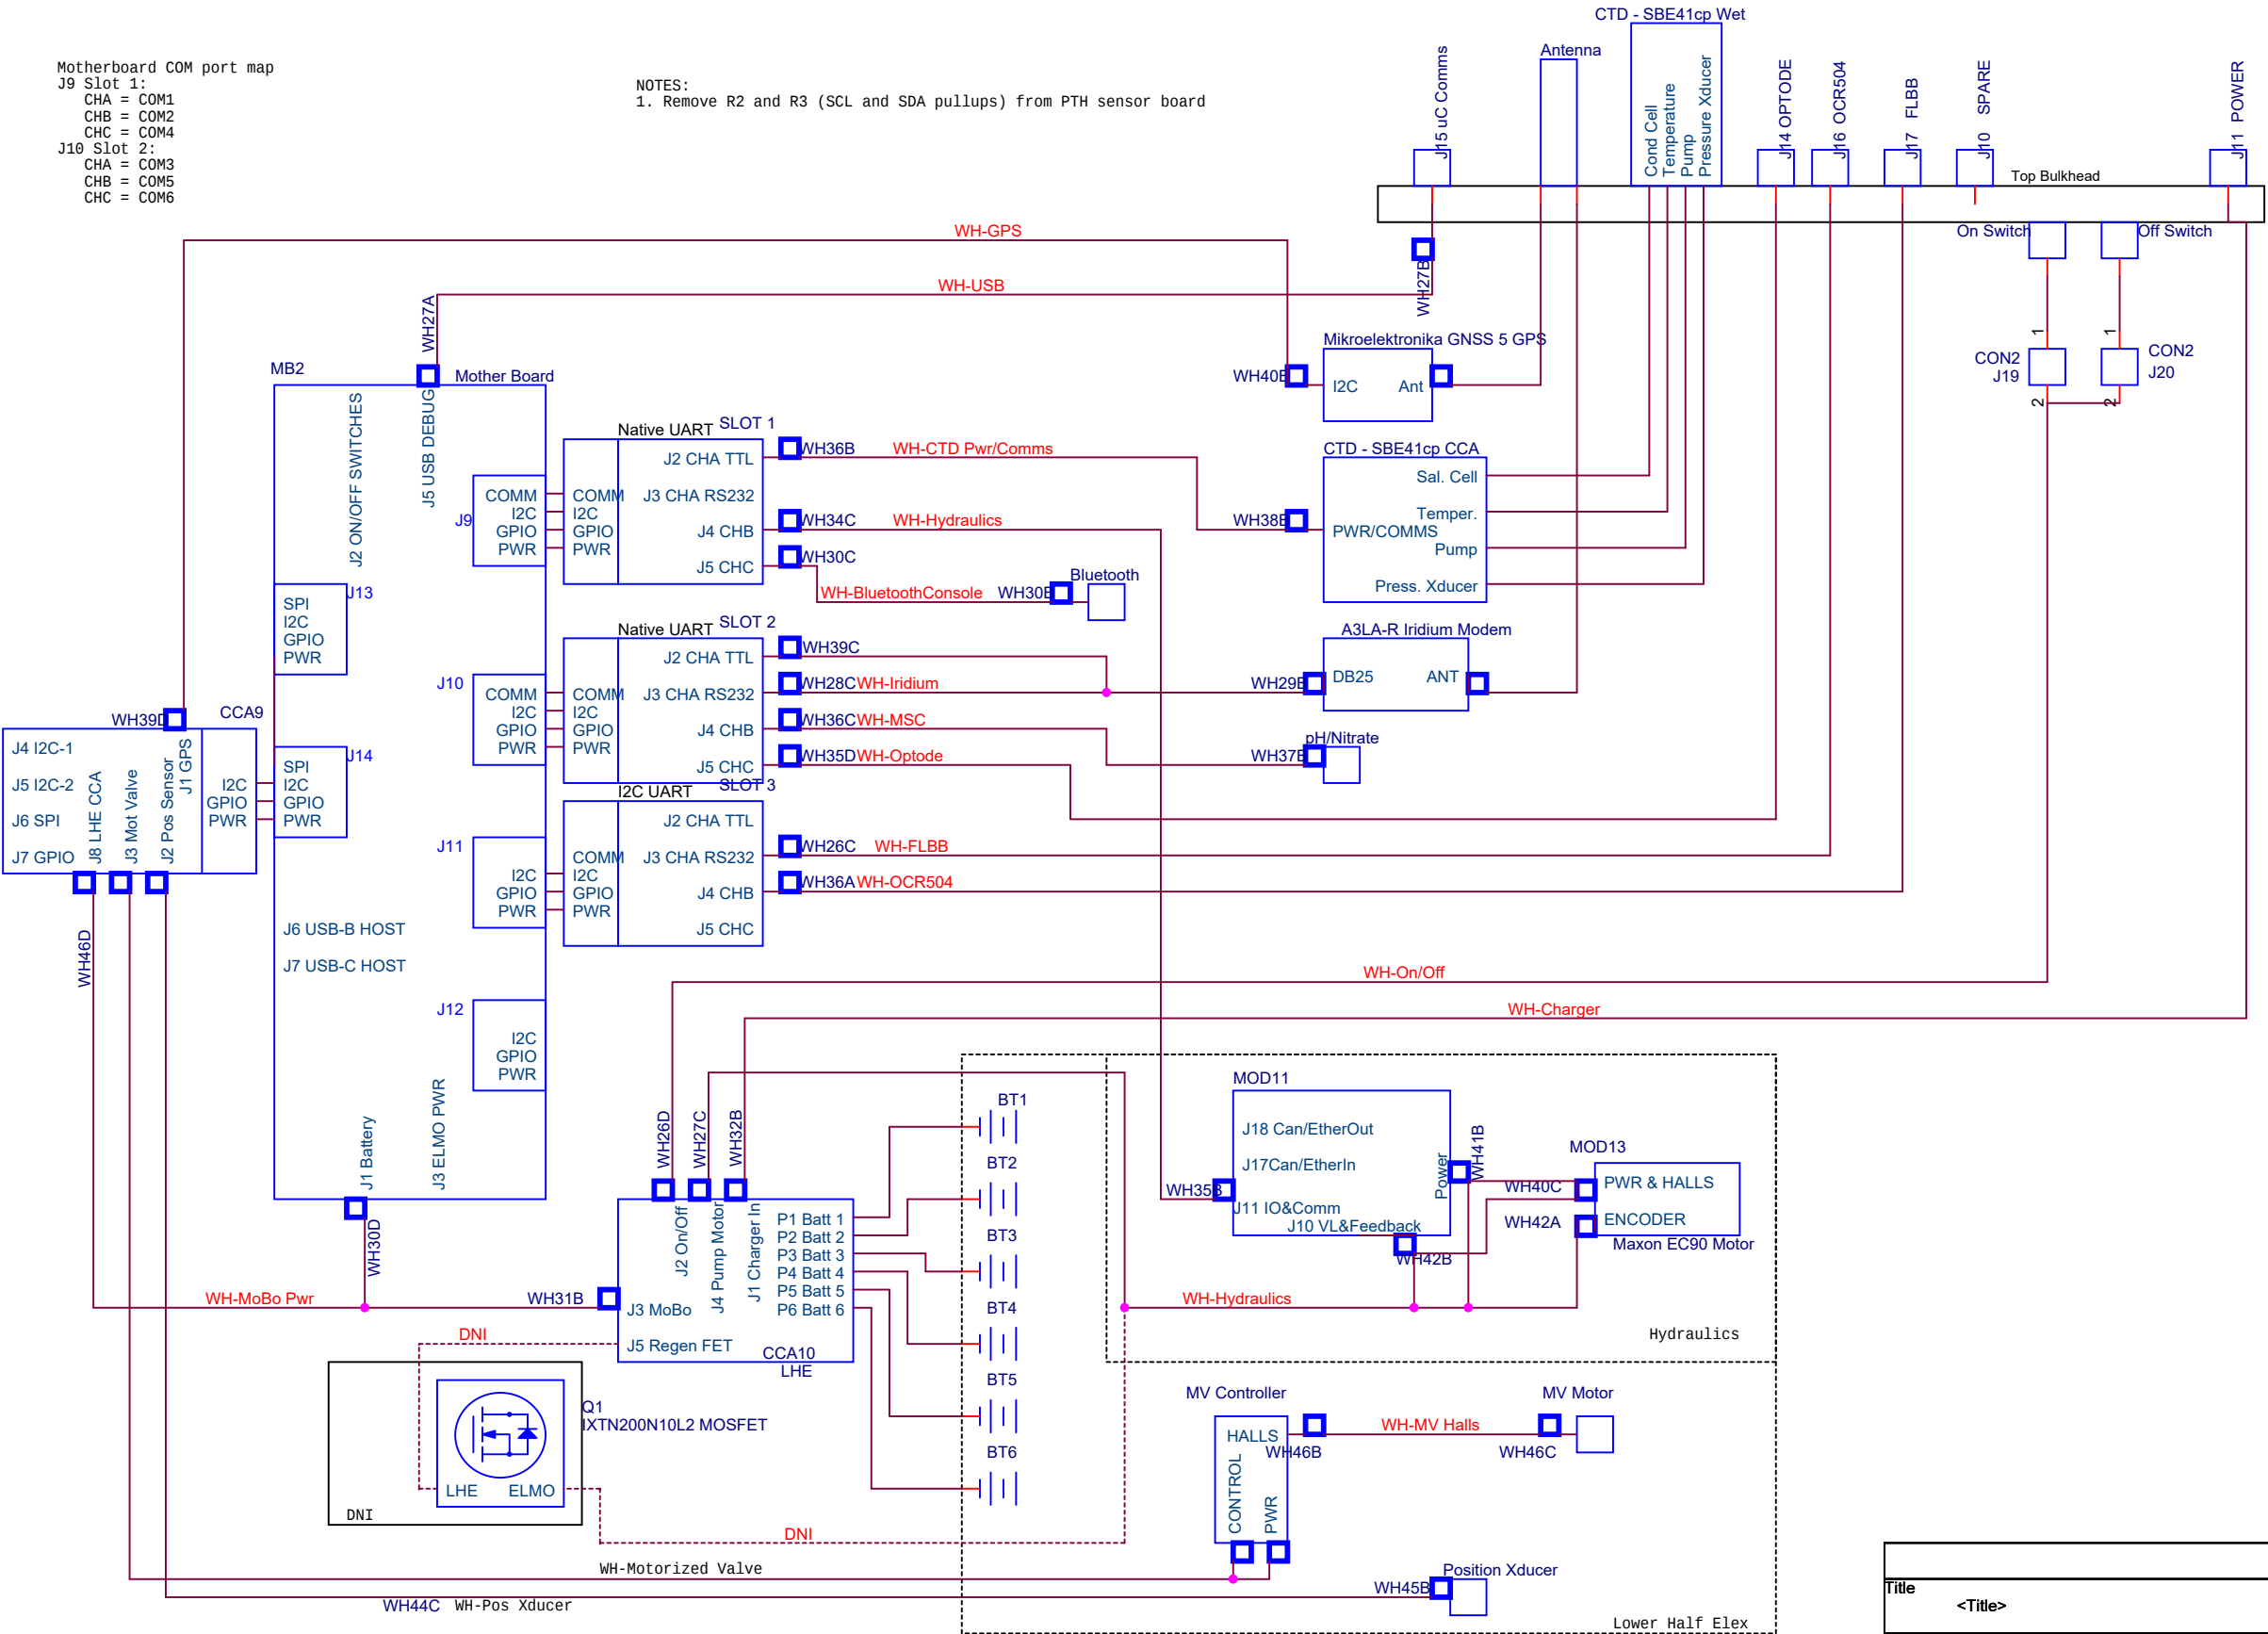

Title		
<Title>		
Size	Document Number	Rev
B	<Doc>	<RevCode>
Date:	Monday, May 13, 2019	Sheet 1 of 1