



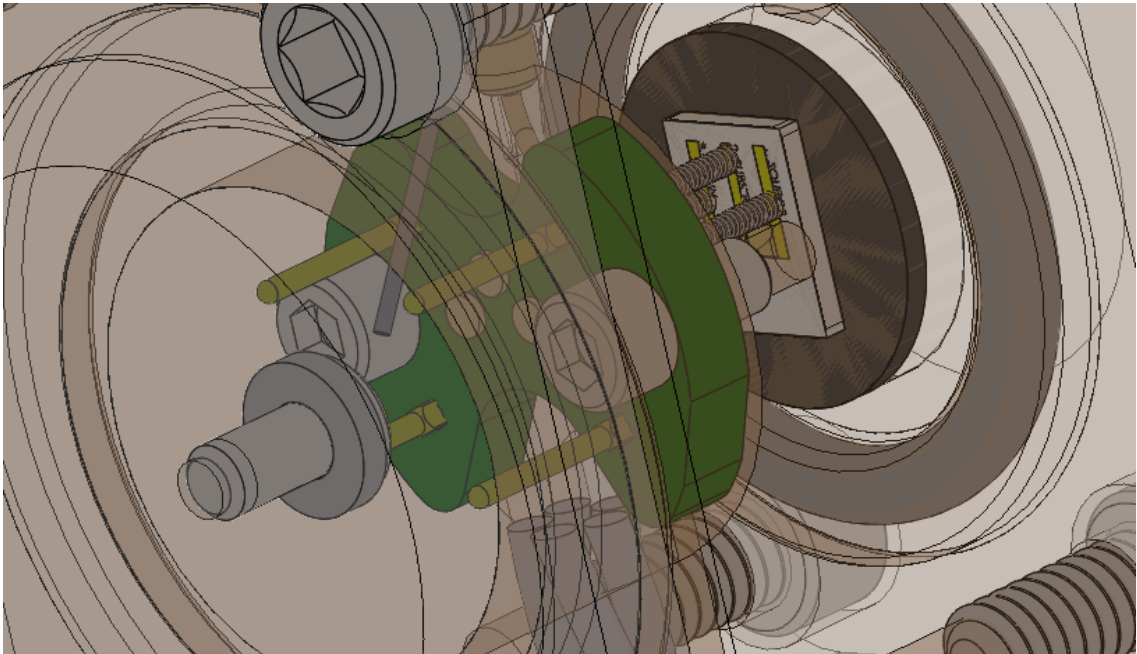

Notes:
1) 4X Pave wires are soldered to the CCA solder pins. 1X reference electrode wire is soldered to a CCA solder pin as shown
2) 1X Pave wire mounts under the counter electrode screw
3) Trace side shown here has 4 solder pins and 3 nail heads and is visible when mounted in stem
4) Nail pins on other side contact the fuzz buttons which contact the trace (back) side of the ISFET chip

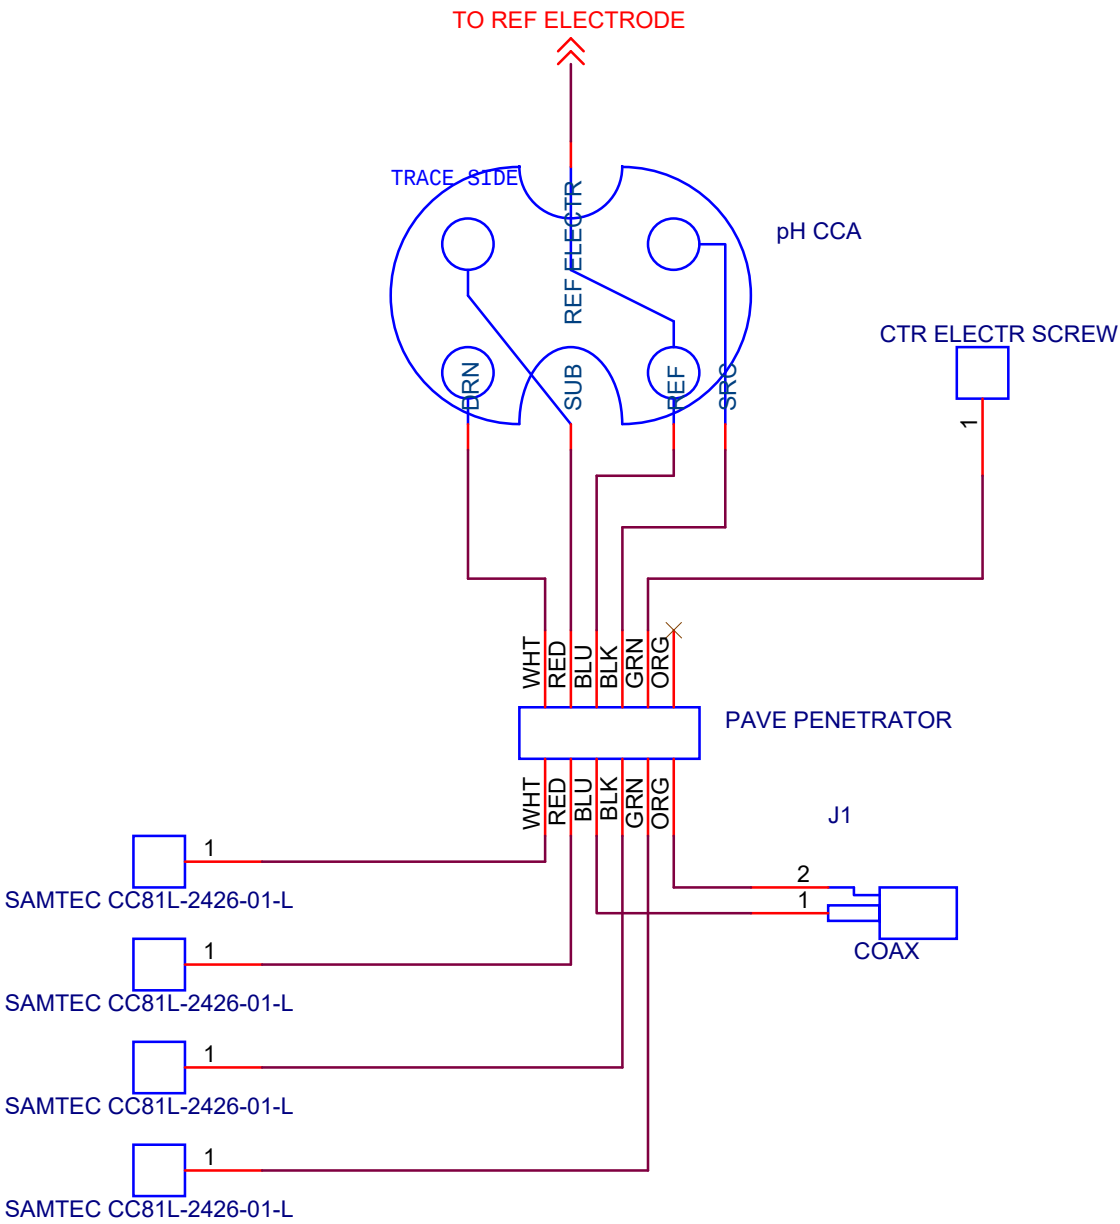

Title		
ph2018 Butterfly CCA Wiring Diagram		
Size A	Document Number <Doc>	Rev IR
Date:	Tuesday, September 08, 2020	Sheet 1 of 1