


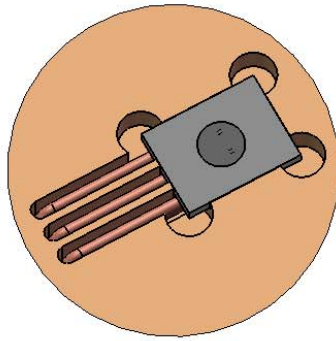
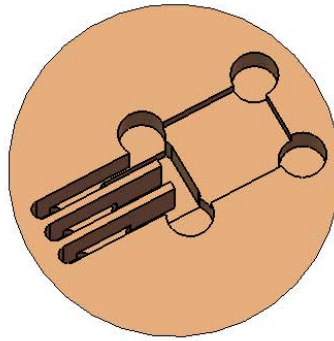


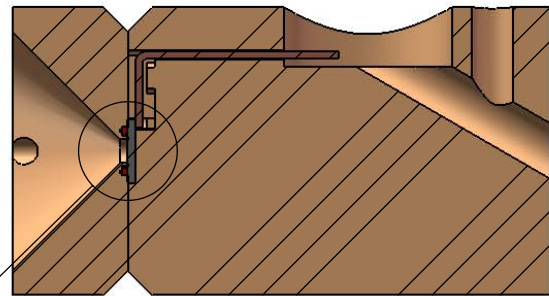


DETAIL A
SCALE 4 : 1

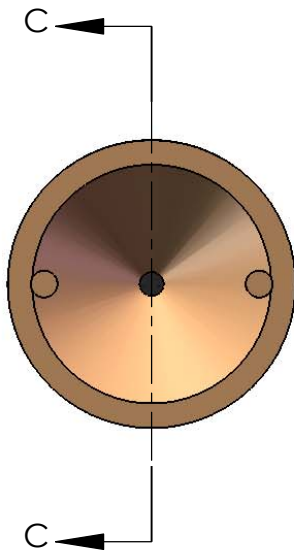

DETAIL B
SCALE 4 : 1

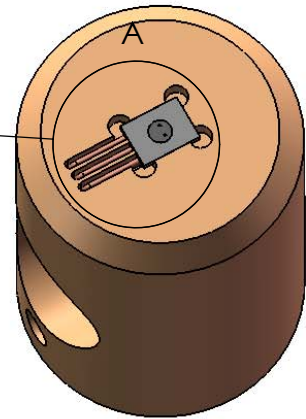

SECTION C-C
SCALE 2 : 1





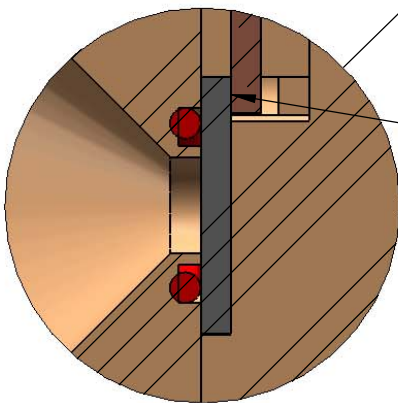


Can use piece of squishy-bus
between chip and wires.


DETAIL D
SCALE 8 : 1

Direct Support
with offset recess for direct contact connections

Hans Jannasch-MBARI; 6/17/09

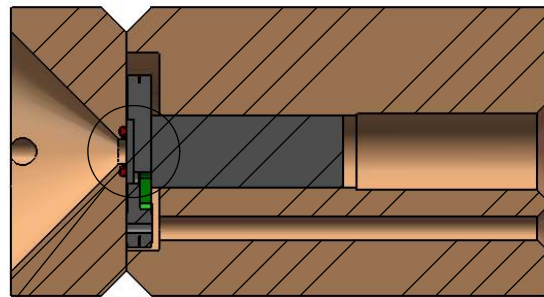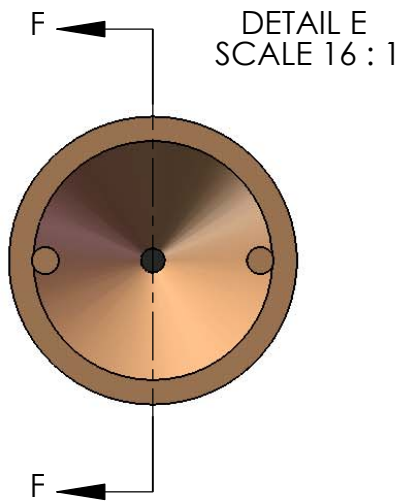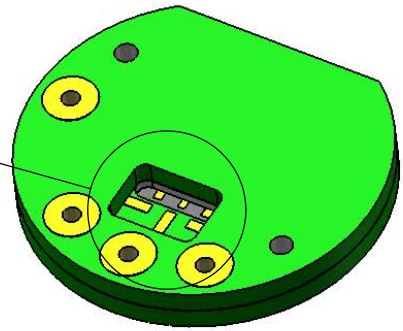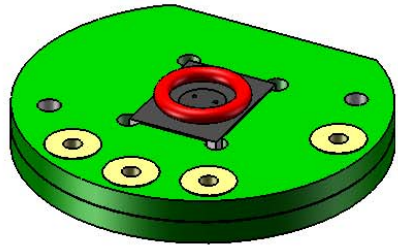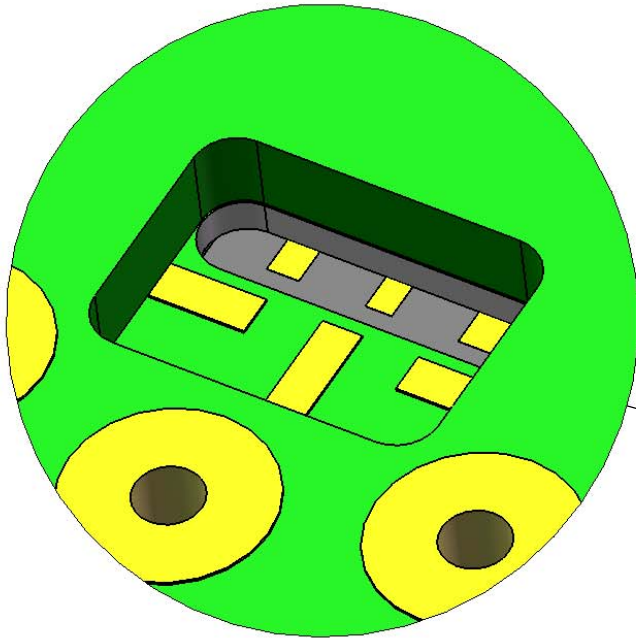

SECTION F-F
SCALE 2 : 1

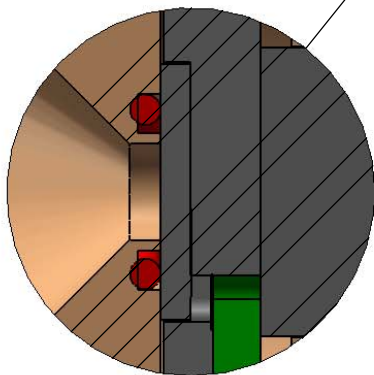

DETAIL G
SCALE 8 : 1

PCB Support with offset recess for wirebonding

Hans Jannasch-MBARI; 6/17/09