
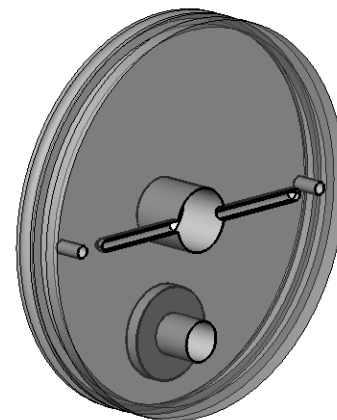


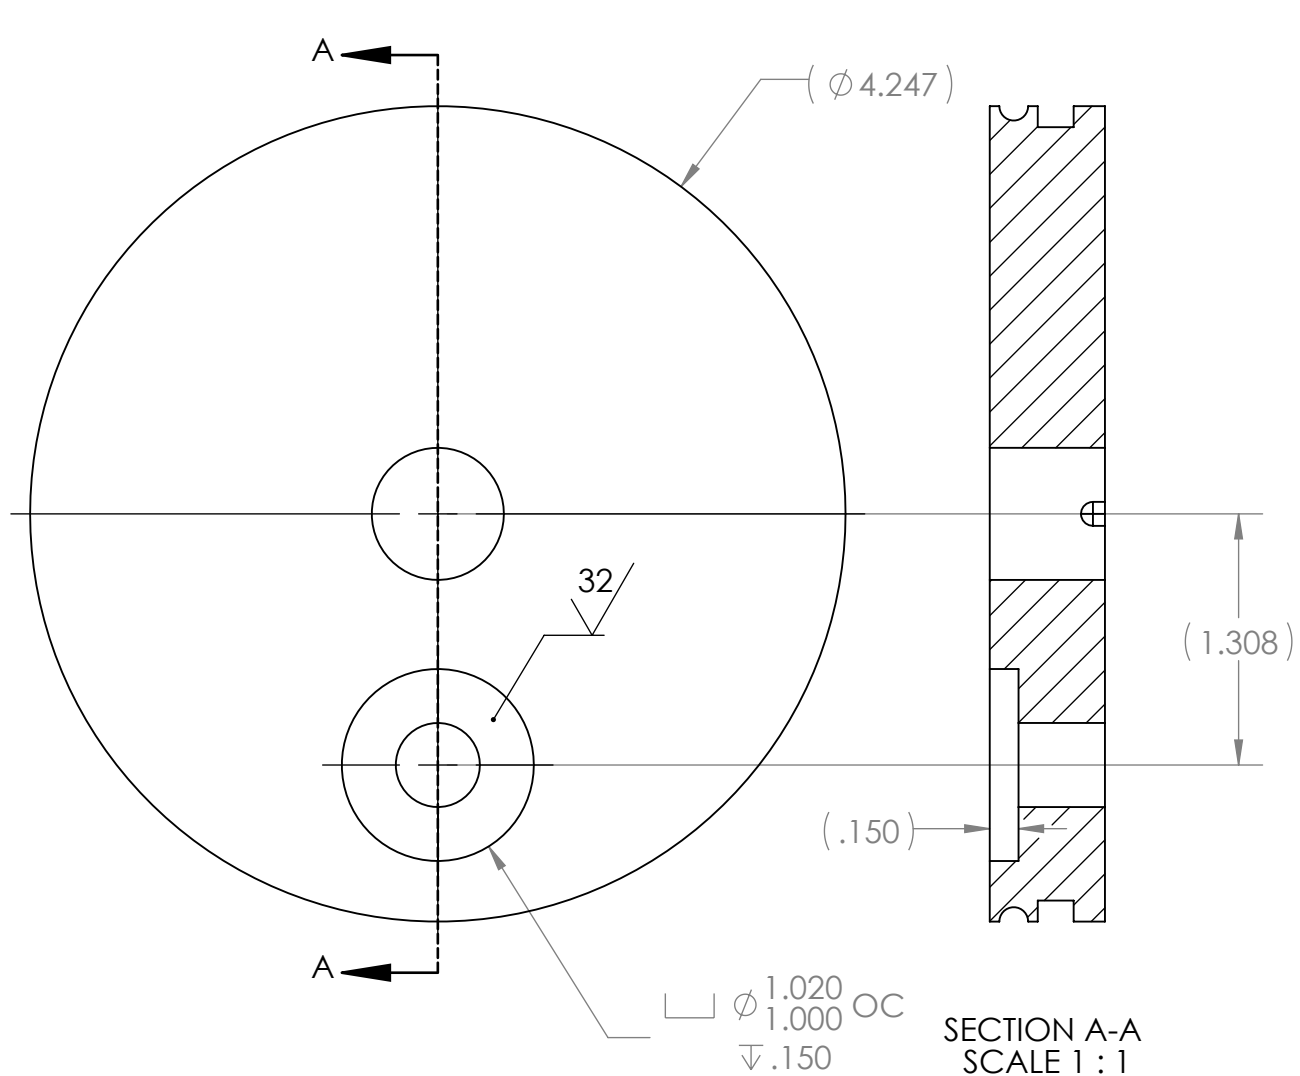

NOTE:
Use a thin washer under nut, ($<.040$ " thick)
e.g., MCM 98017A204

Modification for:
Shallow ISUS and DuraFET Housing Endcap#2
to accept Subconn MCBH8M connector

Jannasch/MBARI; 4/12/14
Scale 1:1