



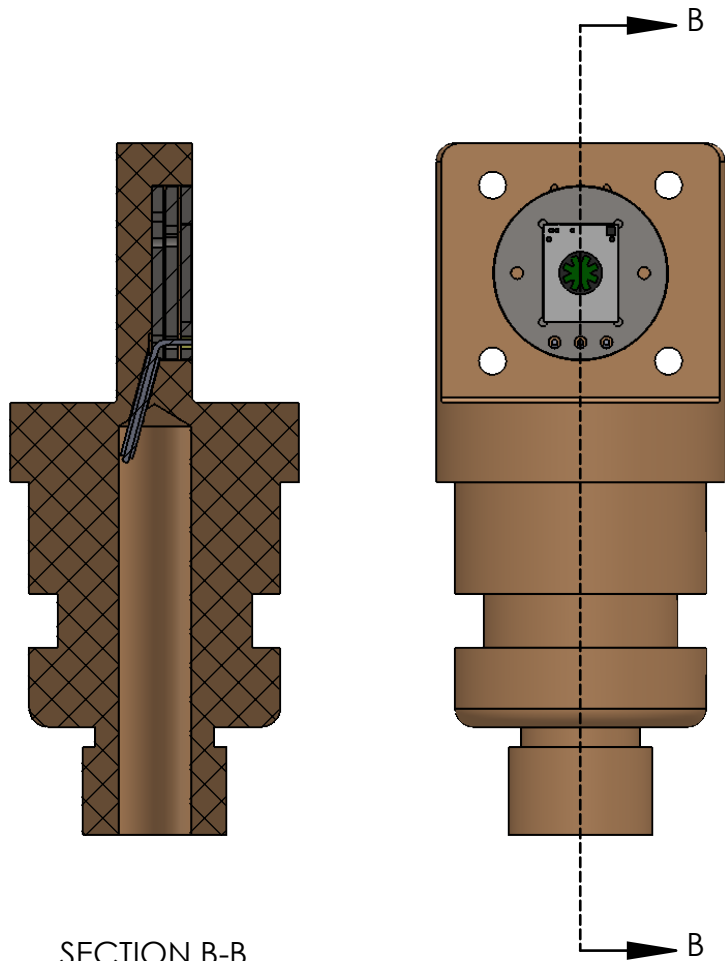


SECTION B-B
SCALE 3 : 1

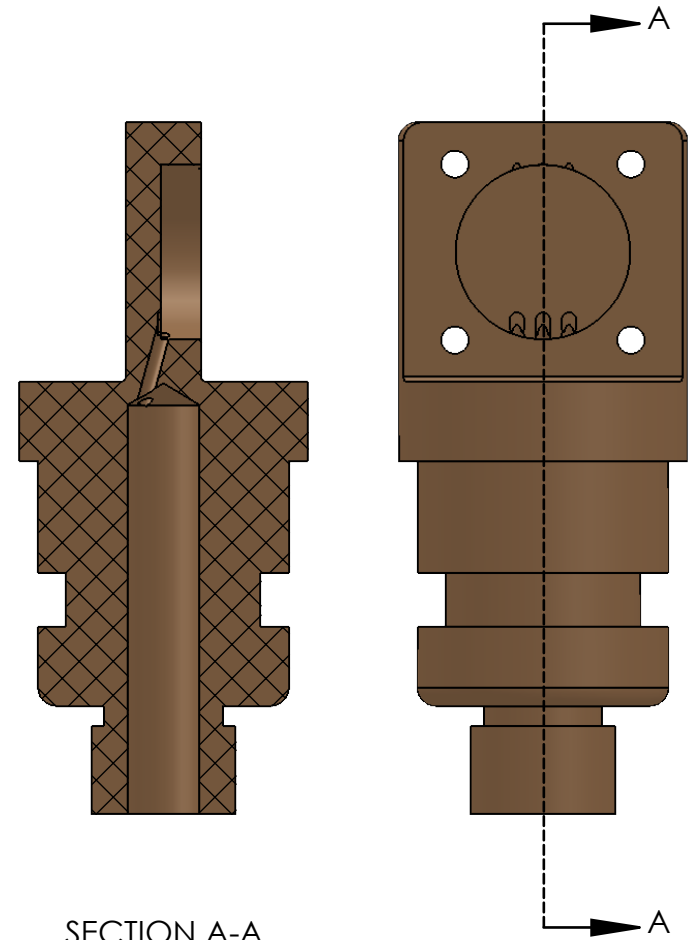

SECTION A-A
SCALE 3 : 1

Avoid solder or epoxy
in slot (left of this line)
to allow wire to bend
during installation.

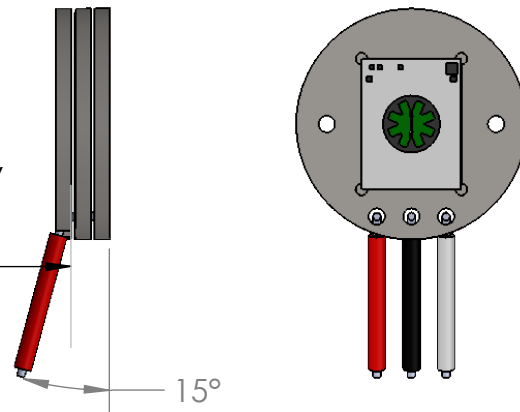

Final wire orientation
Hans Jannasch/MBARI
10/6/2016

NOTES:

- 1) Wires will need to bend during installation.
- 2) Use $\phi .010$ wire w/ max $\phi .022$ insulation 12" long. Use color code as shown (red, black and white).