


		REVISIONS		
ZONE	REV.	DESCRIPTION	DATE	APPROVED

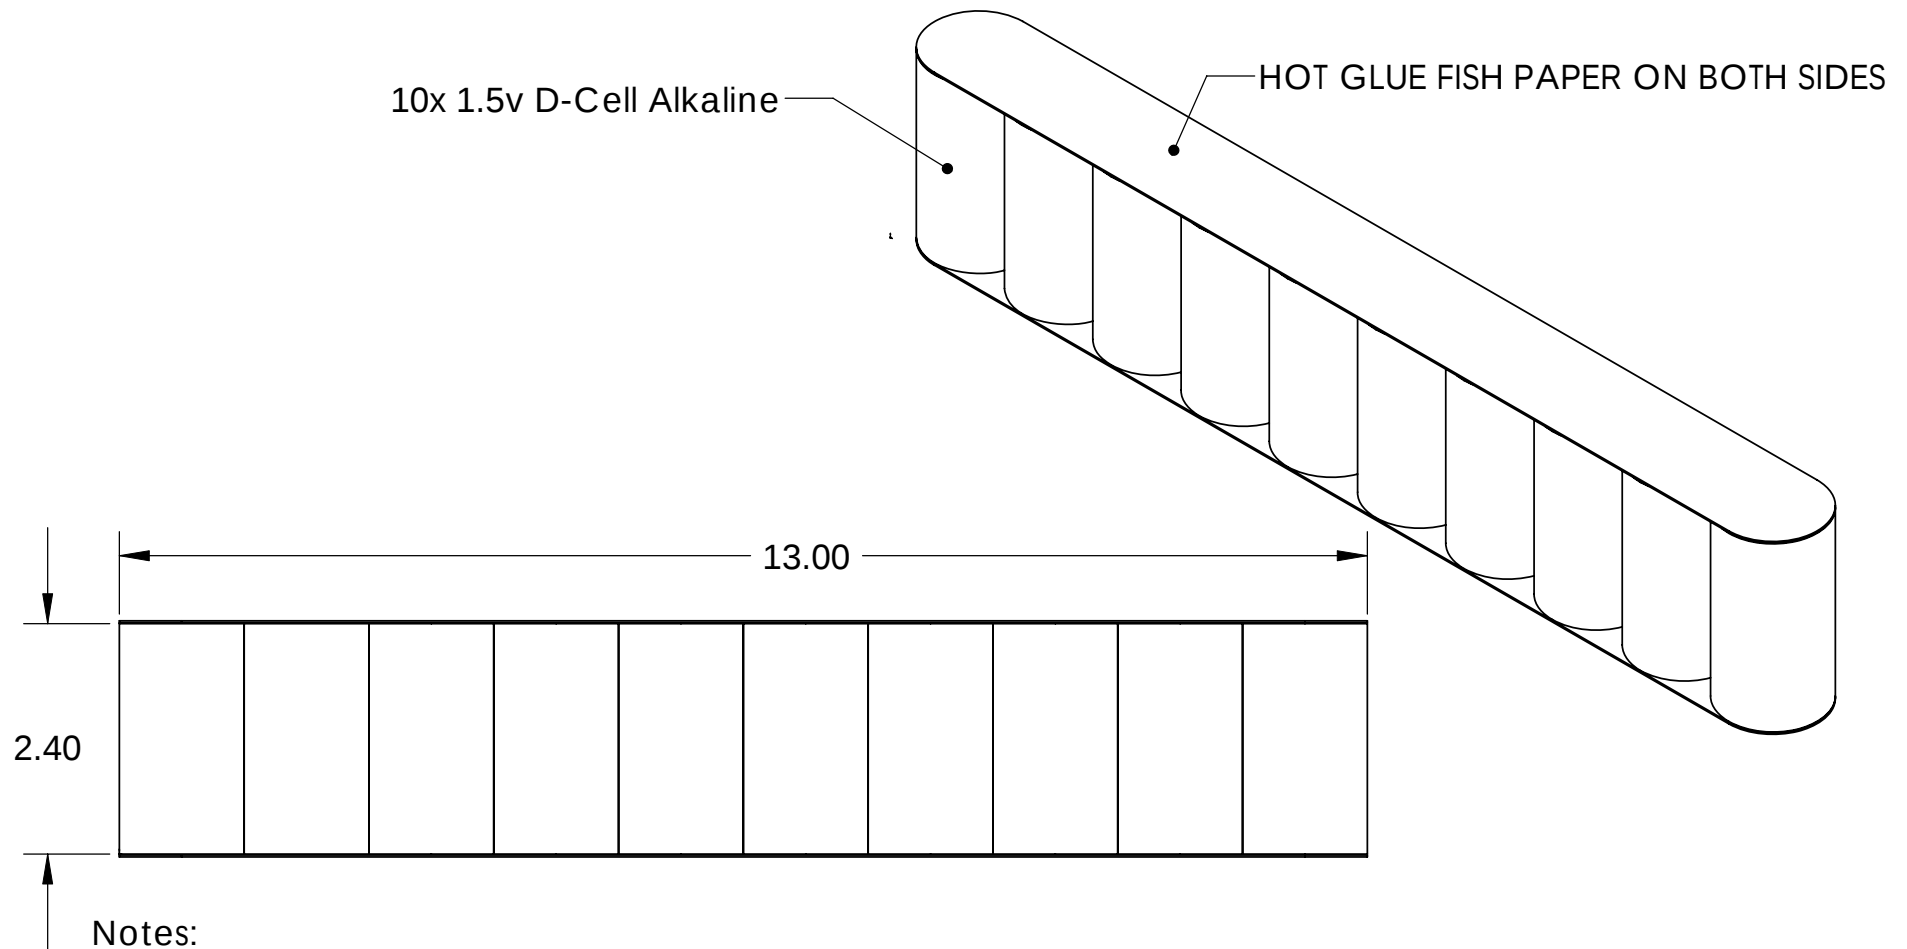

Notes:

- 1) Use part#10/1300WODW configuration as a starting point for battery pack
- 2) Battery packs need 2' twisted (5 turns per 1") 22AWG teflon coated wires to be used as leaders.
- 3) Assemble fish paper onto battery pack using 3M 3792LM or equivalent hot glue.
- 4) DO NOT COVER ENTIRE BATTERY PACK WITH HEAT SHRINK INSULATION

Status:

		DIMENSIONS ARE IN INCHES TOLERANCES: FRACTIONAL ± ANGULAR: MACH ± BEND ± TWO PLACE DECIMAL ± THREE PLACE DECIMAL ±	APPROVALS		DATE	Monterey Bay Aquarium Research Institute MBARI 7700 Sandholdt RD. Moss Landing, CA 95039 PH: (831) 775-1700		
			DRAWN	04.26.07				
			CHECKED	JRosal				
			ENGINEER	JRosal				
		MATERIAL	--	PROJECT NO.		15VDC Battery Pack		
		FINISH	--	PROJECT				
NEXT ASSY	USED ON			ESP				
APPLICATION		DO NOT SCALE DRAWING		WEIGHT		SIZE	DWG. NO.	REV.
						A		0
						SCALE:1:2	WEIGHT:	SHEET 1 OF 1