



XPRESS-Pro SW 52000

User Guide

Copyright & Trademark

© 2005, Lantronix. All rights reserved. No part of the contents of this book may be transmitted or reproduced in any form or by any means without the written permission of Lantronix. Printed in the United States of America.

Ethernet is a trademark of XEROX Corporation. UNIX is a registered trademark of The Open Group. Windows 95, Windows 98, Windows 2000, and Windows NT are trademarks of Microsoft Corp. Netscape is a trademark of Netscape Communications Corporation.

Contacts

Lantronix Corporate Headquarters

15353 Barranca Parkway
Irvine, CA 92618, USA
Phone: 949-453-3990
Fax: 949-453-3995

Technical Support

Online: www.lantronix.com/support

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at www.lantronix.com/about/contact .

Contents

1: Preface	5
Plug-and-Play Solution	5
2: Product Overview	6
Hardened Compact Switch	6
Package Contents	6
Product Highlights	7
Front Panel Display	7
① Power Status (PWR)	8
② Port Status LEDs	8
Physical Ports	8
Connectivity	8
3: Installation	9
Selecting a Site for the Switch	9
DIN Rail Mounting	9
Connecting to Power	10
DC Terminal Block Power Inputs	10
Connecting to Your Network	11
Cable Type & Length	11
Cabling	11
A: Specifications and Standards	12
B: Connector Pinouts	13

1: Preface

A member of the growing family of rugged switches, this switch addresses a need for a smaller switch. This switch provides an affordable solution for rugged and outdoor environment, transportation road-side cabinet, industrial floor shop, multitenant dwellings or Fiber To The Home (FTTH) applications. Capable of operating at temperature extremes of -10°C to +60°C, this is the switch of choice for harsh environments constrained by space.

Plug-and-Play Solution

The switch is a plug-and-play Fast Ethernet Switch in compact size. It doesn't have any complicated software to set up.

This manual describes how to install and use the hardened compact Ethernet Switch. This switch integrates full wire speed switching technology. This switch brings the answer to complicated hardened networking environments.


To get the most out of this manual, you should have an understanding of Ethernet networking concepts.

In this manual, you will find:

- ◆ Features on the switch
- ◆ Illustrative LED functions
- ◆ Installation instructions
- ◆ Specifications

2: Product Overview

Hardened Compact Switch

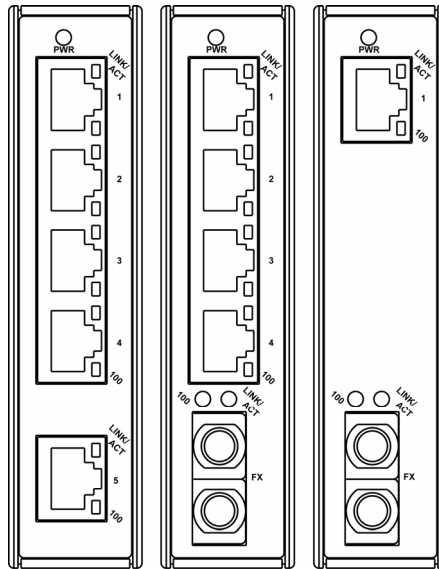

Package Contents


When you unpack the product package, you shall find the items listed below. Please inspect the contents, and report any apparent damage or missing items immediately to your authorized reseller.

- ◆ This Switch
- ◆ User's Manual

Product Highlights

- ◆ Basic Features
- ◆ 5-port 10/100Base-TX or 4-port 10/100Base-TX plus 1-port 100Base-FX.
- ◆ Available in media converter format with 1-port 10/100Base-TX and 1-port 100Base-FX.
- ◆ Support IEEE802.3/802.3u/802.3X.
- ◆ Auto-negotiation: 10/100Mbps, Full/half-duplex; Auto MDI/MDIX.
- ◆ Support 2K MAC addresses.
- ◆ Store-and-forward mechanism.
- ◆ Full wire-speed forwarding rate and non-blocking mechanism.
- ◆ Broadcast storm filtering.
- ◆ Operating voltage and Max. current consumption: 12VDC @ 0.71A, 24VDC @ 0.37A, 48VDC @ 0.22A.
- ◆ Power consumption: 10.56W Max.
- ◆ Power Supply: DC Terminal Block power input, 10-48VDC with polarity protection.
- ◆ Plastic compact DIN-Rail Industrial case design.
- ◆ DIN-Rail mounting ability.

Front Panel Display

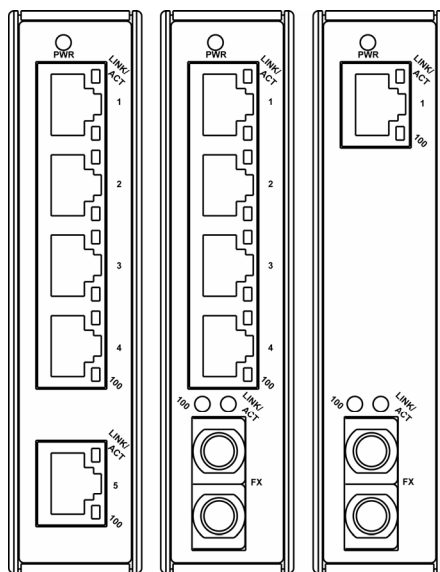

① Power Status (PWR)

This LED comes on when the switch is properly connected to power and turned on.

② Port Status LEDs

The LEDs display status for each respective port.

LED	State	Indication
10/100TX or 100FX		
LNK/ACT (Green)	Steady	A valid network connection established. LNK stands for LINK.
	Flashing	Transmitting or receiving data. ACT stands for ACTIVITY.
100 (Yellow)	Steady	Light solid yellow for a port transferring at 100Mbps.
	Off	The port is transferring at 10Mbps If this LED is dark.

Physical Ports

This switch provides:

- ◆ Five 10/100BaseTX ports
- ◆ Four 10/100BaseTX ports + one 100BaseFX port
- ◆ One 10/100BaseTX port + one 100BaseFX port

Connectivity

- ◆ RJ-45 connectors
- ◆ SC or ST connecto on 100BaseFX fiber port.

3: Installation

This chapter gives step-by-step instructions about how to install the switch:

Selecting a Site for the Switch

As with any electric device, you should place the switch where it will not be subjected to extreme temperatures, humidity, or electromagnetic interference. Specifically, the site you select should meet the following requirements:


- ◆ The ambient temperature should be between -10 to 60 degrees Celsius.
- ◆ The relative humidity should be less than 90 percent, non-condensing.
- ◆ Surrounding electrical devices should not exceed the electromagnetic field (RFC) standards.
- ◆ Make sure that the switch receives adequate ventilation. Do not block the ventilation holes on each side of the switch

The power outlet should be within 1.8 meters of the switch.

DIN Rail Mounting

Installation: Place the switch on the DIN rail from above using the slot. Push the front of the switch toward the mounting surface until it audibly snaps into place.


Removal: Pull out the lower edge and then remove the switch from the DIN rail.

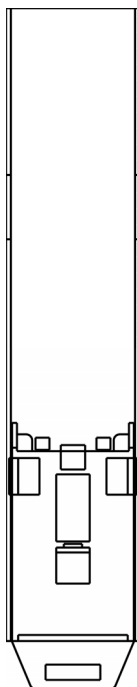

Connecting to Power

DC Terminal Block Power Inputs

1. Connect the DC power cord to the plug-able terminal block on the switch, and then plug it into a standard DC outlet.
2. Disconnect the power cord if you want to shut down the switch.

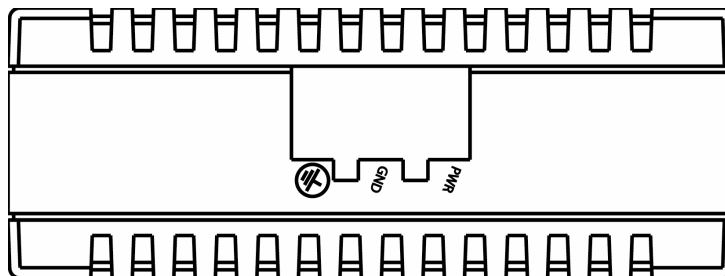

The Terminal Block	
PWR	Power Input
GND	Power Ground
	Earth Ground

Connecting to Your Network

Cable Type & Length

It is necessary to follow the cable specifications below when connecting the switch to your network. Use appropriate cables that meet your speed and cabling requirements.

Speed	Connector	Port Speed Half/Full Duplex	Cable	Max. Distance
10BaseT	RJ-45	10/20 Mbps	2-pair UTP/STP Cat. 3, 4, 5	100 m
100BaseTX	RJ-45	100/200 Mbps	2-pair UTP/STP Cat. 5	100 m
100BaseFX	SC, ST	100/200 Mbps	MMF (50 or 62.5µm)	2 km
100BaseFX	SC, ST	100/200 Mbps	SMF (9 or 10µm)	15, 40, or 75 km

Cabling

1. First, ensure the power of the switch and end devices is turned off.
2. Always ensure that the power is off before any installation.
3. Prepare cable with corresponding connectors for each type of port in use.
4. To connect two regular RJ-45 ports between switches or hubs, you need a cross-over cable.
5. Consult the previous section for cabling requirements based on connectors and speed.
6. Connect one end of the cable to the switch and the other end to a desired device.

Once the connections between two end devices are made successfully, turn on the power and the switch is operational.

A: Specifications and Standards


Table	Specification
Hardened Compact Switch	10/100BaseT/TX auto-negotiating ports with RJ-45 connectors, 100BaseFX fiber ports
Applicable Standards	IEEE 802.3 10BaseT IEEE 802.3u 100BaseTX/FX
Switching Method	Store-and-Forward
Forwarding Rate	
10BaseT:	10 / 20Mbps half / full-duplex
100BaseTX/FX:	100 / 200Mbps half / full-duplex
Performance	148,80pps for 10Mbps 148,800pps for 100Mbps
Cable	
10BaseT:	2-pair UTP/STP Cat. 3, 4, 5
100BaseTX:	2-pair UTP/STP Cat. 5 Up to 100m (328ft)
100BaseFX:	MMF (50 or 62.5µm), SMF (9 or 10µm)
LED Indicators	Per unit – Power status (PWR) Per port – LNK/ACT – (Green) 10/100TX or 100FX 100 – (Yellow) 10/100TX or 100FX
Dimensions	W26mm × D70mm × H110mm Compact Size
Net Weight	0.2kg approx.
Power	Terminal Block: 10-48VDC
Operating Voltage & Max. Current Consumption	12VDC @ 0.71A, 24VDC @ 0.37A, 48VDC @ 0.22A
Power Consumption	10.56W max.
Operating Temperature	-10°C to 60° C
Storage Temperature	-25°C to 85°C
Humidity	10%-90% non-condensing
Safety	UL/CUL 60950, EN60950, IEC 60950, IEC61000-6-2
Emissions	FCC Class A, CE Class A

Standards

ESD Standard (IEC 61000-4-2)
Radiated FRI Standards (IEC 61000-4-3)
Burst Standards (IEC 61000-4-4)
Surge Standards (IEC 61000-4-5)
Induced (Conducted) RFE Standards (IEC 61000-4-6)
Magnetic Field Standards (IEC 61000-4-8)
Voltage Dips Standards (IEC 61000-4-11)
Environmental Test Standards:
Vibration Resistance (IEC 60068-2-6)
Shock (IEC 60068-2-27)
Free Fall (IEC 60068-2-32)

B: Connector Pinouts

Pin Arrangement of RJ45 Connectors:

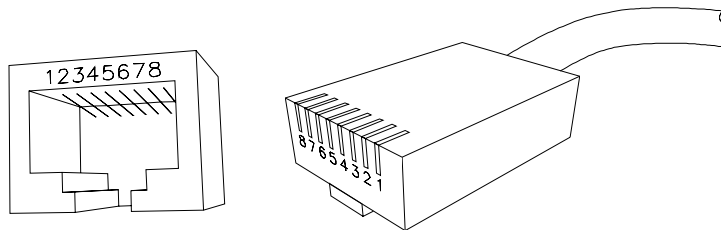

The following table lists the pinout of 10/100BaseT/TX ports.

Pin	Regular Ports	Uplink port
1	Input Receive Data +	Output Transmit Data +
2	Input Receive Data -	Output Transmit Data -
3	Output Transmit Data +	Input Receive Data +
4	NC	NC
5	NC	NC
6	Output Transmit Data -	Input Receive Data -
7	NC	NC
8	NC	NC