


RS 232 or RS 485 serial link wiring (ACT 201 H box version)

The box version controller is shipped with default configuration. The serial link parameters can be modified by accessing the corresponding unit menu.

Factory configuration

- Type: **RS 232**
- Transmission speed: **9600 bauds**
- Data length: **8 bits**
- Parity: **NONE**
- Stop bit: **1**

RS 232/485 connector wiring

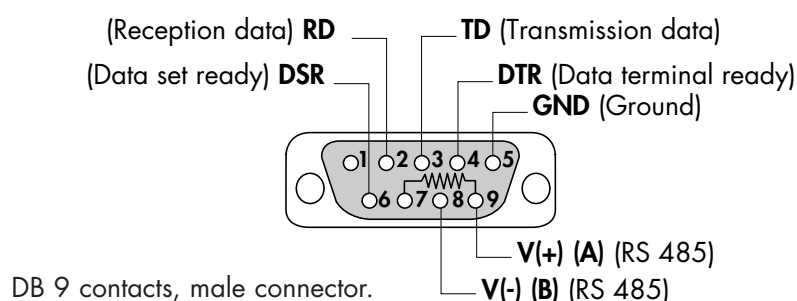


Connection examples

RS 232 type serial link with a single controller




Multiple RS 232 serial link

Several units (up to 255) can be controlled on a single link. The multiple link is obtained by creating a loop:

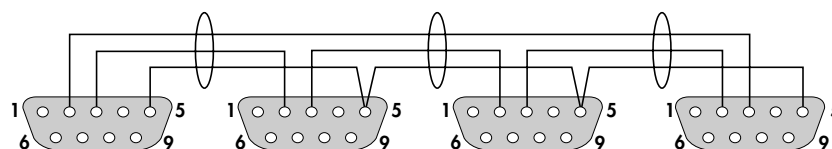

RS 485 serial link connection

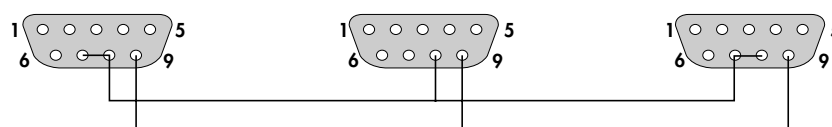

Connect terminals 7 and 8 when the controller is at the end of the line.