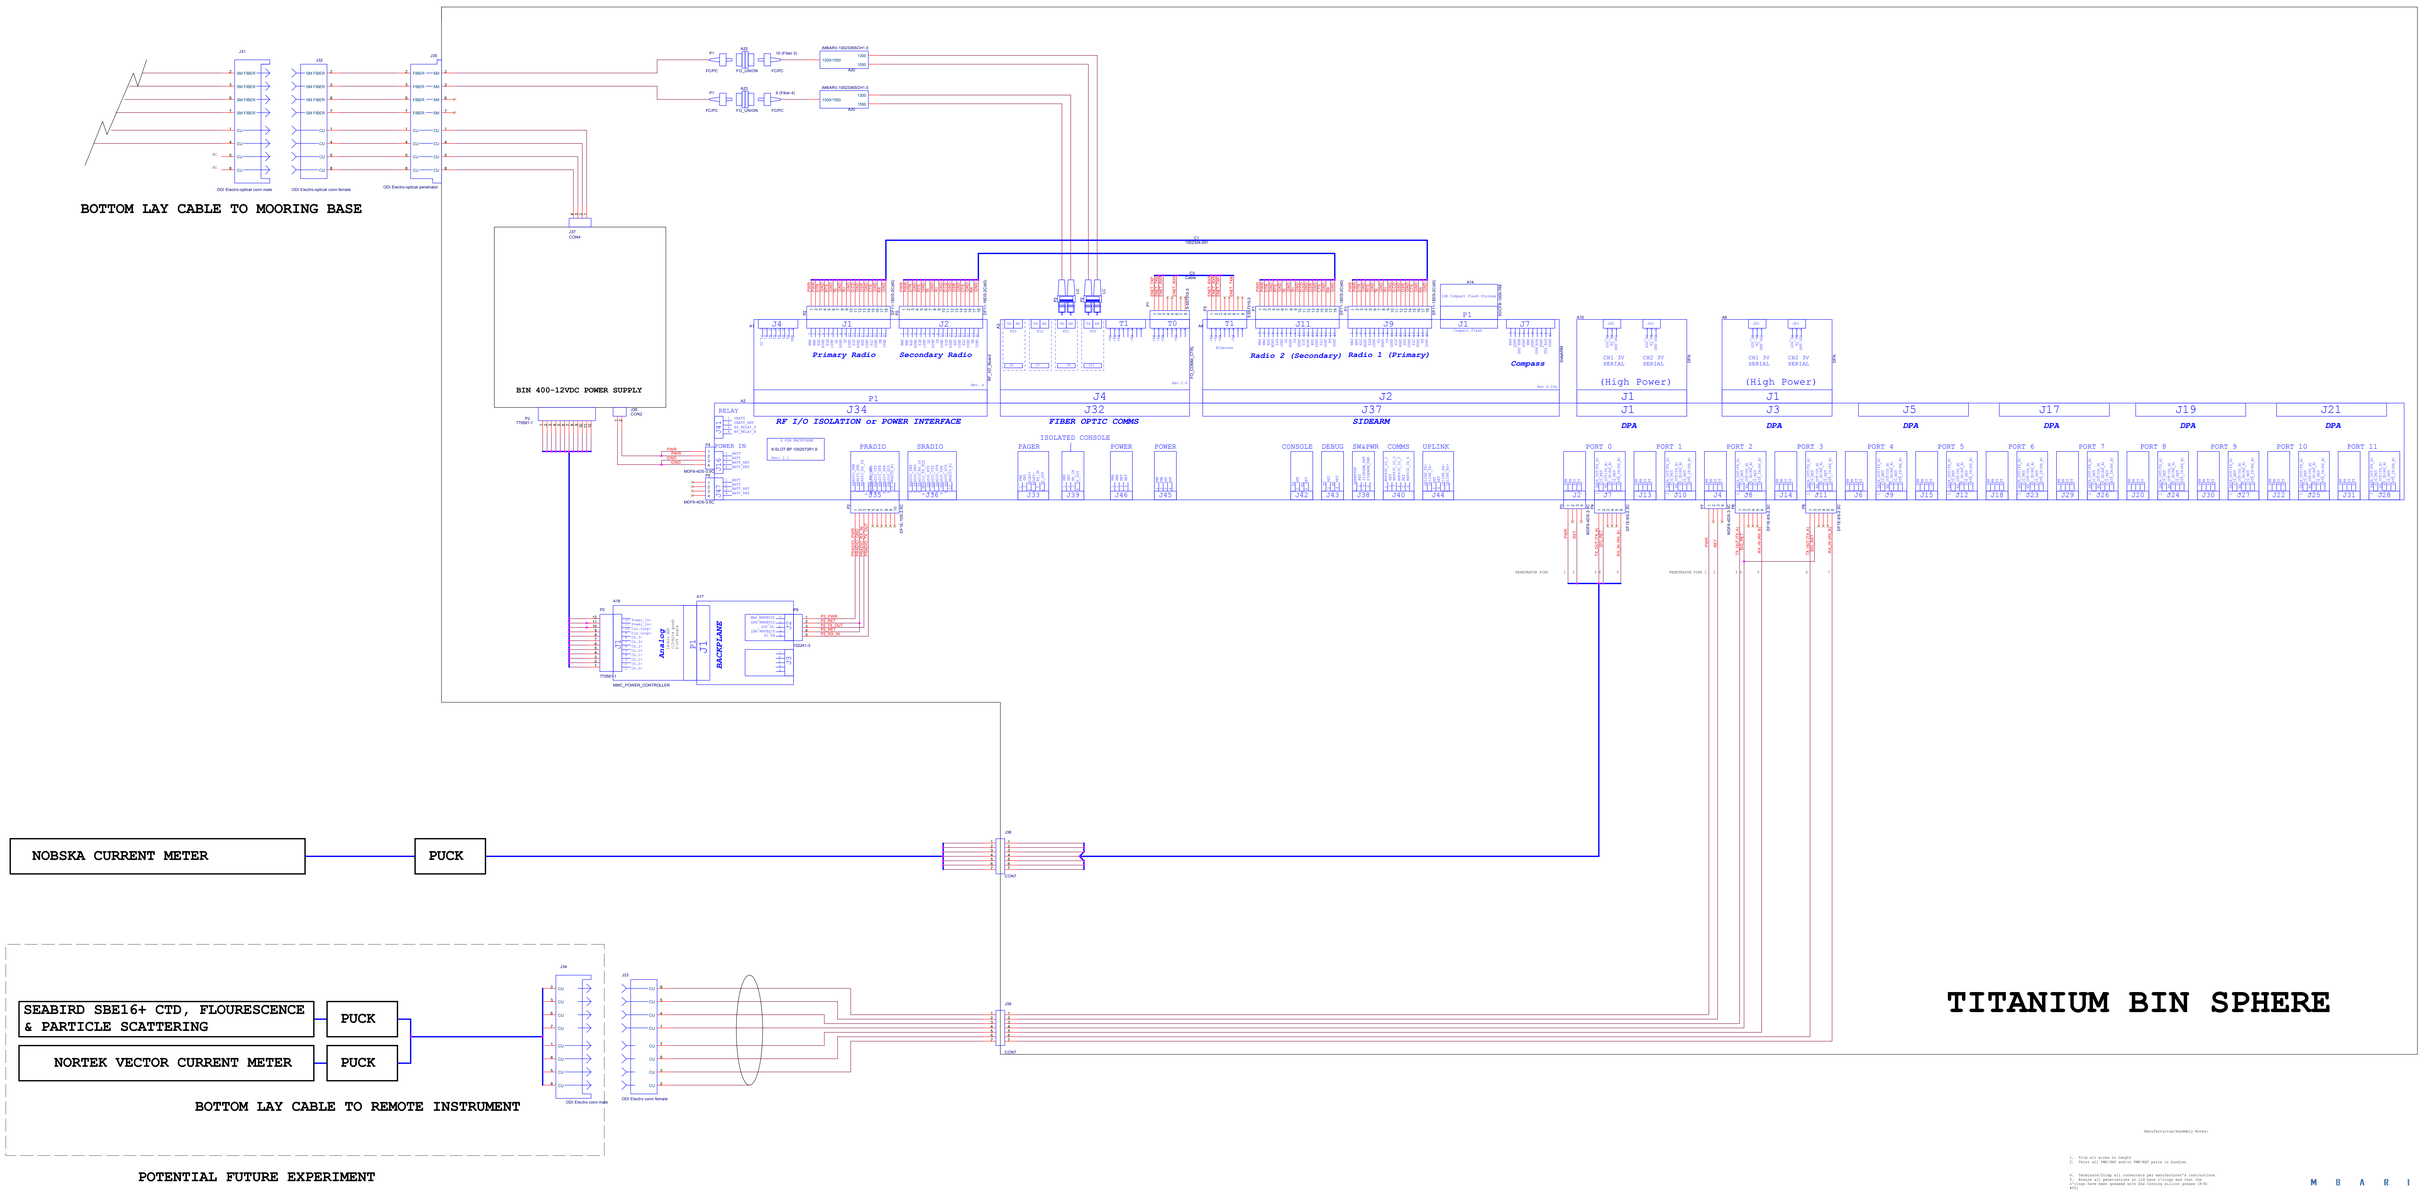

MOOS TEST MOORING #2 BIN WIRING

REVISION HISTORY
14JUN04 - INITIAL DRAWING.

Manufacturing/Assembly Notes:

1. Trim all wires to length
2. Twist all PWR/GND and/or PWR/RET pairs in bundles

3. Terminate/Crimp all connectors per manufacturer's instructions
4. Apply dielectric grease to all connector pins and sockets (Fringe have been greased with Dow Corning silicone grease DC-4, etc)

Copyright © 2004 MBARI
All information herein is proprietary to MBARI and may not be copied, duplicated, or used for any purpose without the express permission of Monterey Bay Aquarium Research Institute.

MBARI
7700 SANDHOLDT ROAD
MOOS LANDING, CALIFORNIA 95039
(831) 775 - 1700
www.mbari.org

DESIGN: Mark Chaffey

DRAWING: Lance McBride
& Mark Chaffey

Wednesday, June 16, 2004

MOOS TEST MOORING #2 BIN WIRING

Size	CAGE Code	DWG NO	Rev
Custom	<Cage Code>	1002450SCH-1.0	1.0

Scale | Sheet 1 of 1