



110 VAC INPUT
J4
TE_3-641210-3
0.156"
Male:
TE_770849-3
DGK A24112-ND


FILTER AND RECTIFIER

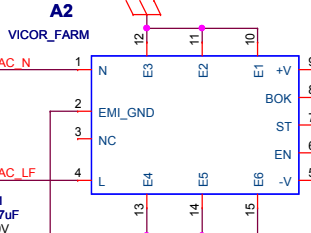


EXTERNAL HOLD-UP CAP MODULE




FILTER

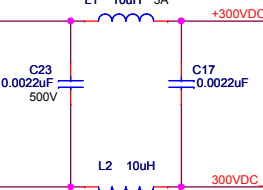


VICOR MINI-MOD
A3
V300B24C250L

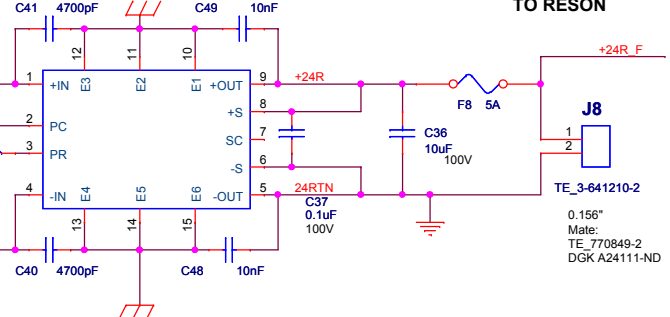


24VDC TO RESON



VICOR MICRO-MOD
A4
V300C24C150BL

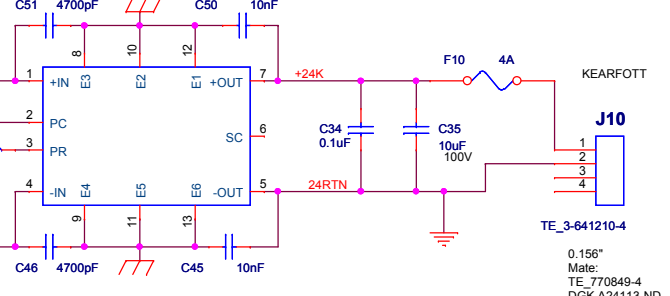


24VDC TO KEARFOTT AND CAMERAS




CAMERA CONNECTORS
J6 AND J7
SHOWN ON TRIGGERS
SHEET

24VDC TO STROBES

STROBE CONNECTORS
J3 AND J4
SHOWN ON TRIGGERS
SHEET

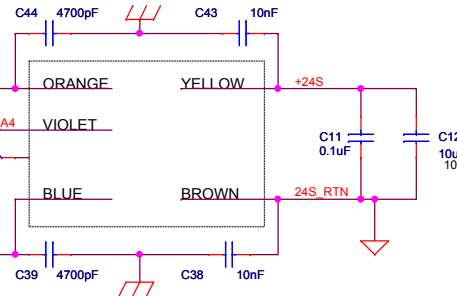


A1
V300B24C250L


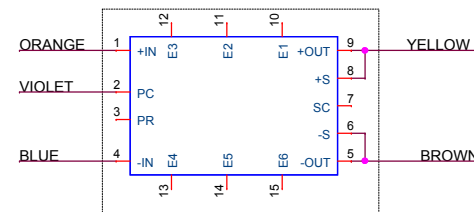


A1 is mounted on
bottom of heat sink plate
Five wires make the connections
from PCB to A1



TEST POINTS

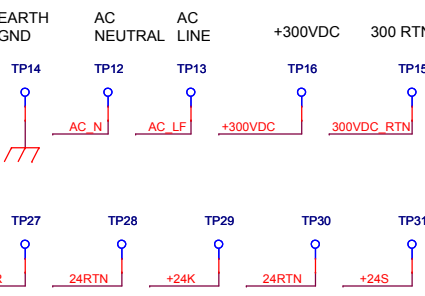

"VIAs"

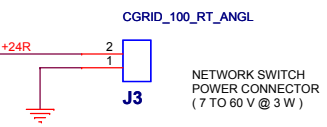

OFF-PAGE CONNECTIONS
TO TRIGGERS SHEET

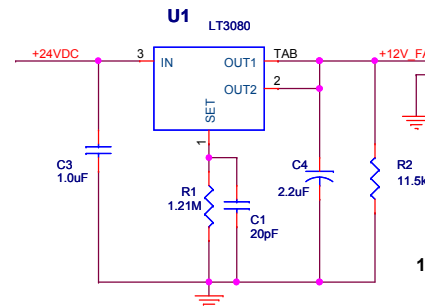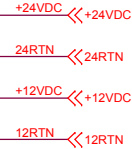

NOTES:
1. Do not load R3, C2, R4, C10, C25, R26

Title SCH, Power, Ocean Imaging		
Size C	Document Number 10020719	Rev C
Date: Monday, June 04, 2012	Sheet 1	of 1