

***FULL SPECTRUM SYSTEM
2200-M (6000m) ADDENDUM***

ADDENDUM TO TECHNICAL & USER'S MANUAL

DELIVERY SPECIFIC DOCUMENT

Customer: *WHOI*

Ship Date: *January, 2010*

Document No: *990-F094028-1000*

Product ID: *2672-ABCF*

Sales Order: *F094028*



An Affiliate Company of ORE Offshore

1141 Holland Drive, Suite 1
Boca Raton, FL 33487 - USA
Tel: 561 995-7767 / Fax: 561 995-7761
[Email: sales@edgetech.com](mailto:sales@edgetech.com)

TABLE OF CONTENTS

TABLE OF CONTENTS	2
1. SYSTEM HARDWARE BLOCK DIAGRAM.....	3
2. ELECTRONICS BLOCK DIAGRAM.....	3
3. CABLING	3
3.1 J1 CONNECTOR	4
3.2 SIDE SCAN AND SUB-BOTTOM CABLES	4
3.3 J6 CONNECTOR	4
4. SONAR.INI SETTING	5
5. SONARSERIAL.INI SETTING	6
6. ATTACHED DOCUMENTS:	7

1. System Hardware Block Diagram

The System block diagram attached (DWG: 900-F094028-0101) shows the system major hardware components and their connectivity. Refer to this drawing for a quick overview of the overall system layout and for drawings and parts index.

2. Processor Electronics Block Diagram

The Processor block diagram attached (DWG: 800- F094028-0101) shows the processor electronic components and connectivity specific to the system purchased. Please refer to this when considering system specific replacement parts and cabling.

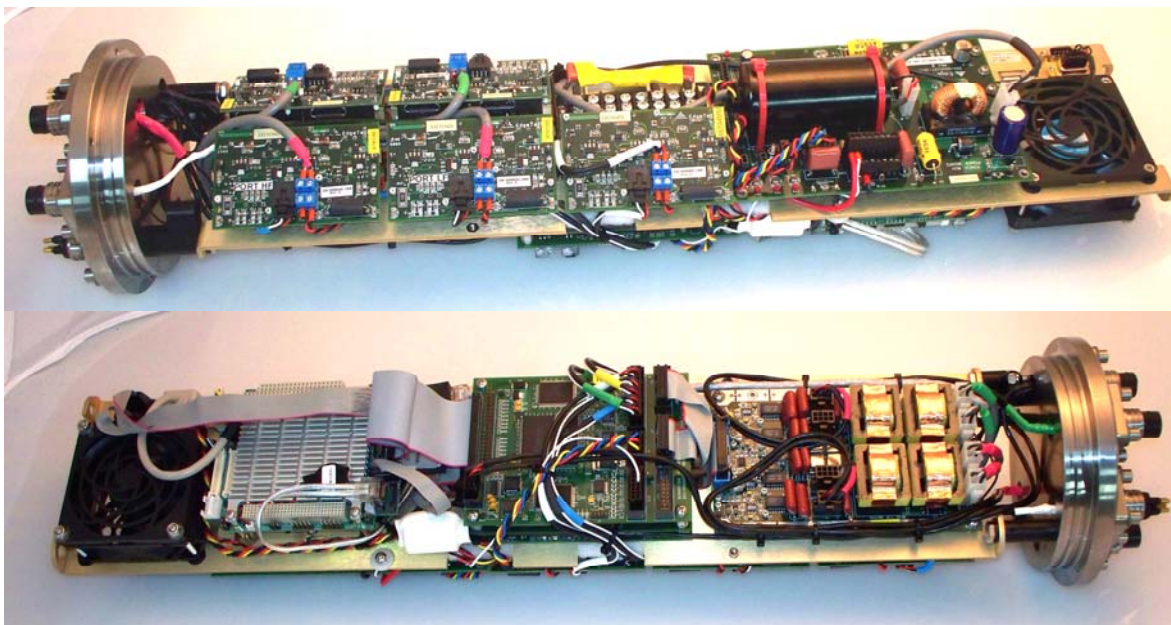


Figure 1: Processor Electronics

3. Cabling

The full system block diagram (DWG: 900- F094028-0101) and the processor block diagram (DWG: 800- F094028-0101) show the drawing numbers of all the systems cabling schematics. The end cap configuration can be seen in drawing 300-0000755-0105.

3.1 J1 Connector

J1 provides connection for 48VDC input, Ethernet telemetry and Trigger A. Refer to end cap drawing (DWG: 300-0000755-0105) and User Connection wiring diagram (DWG: 300-0000522-0105) for wiring configuration.

3.2 Side Scan and Sub-Bottom Cables

The pin outs and connections for the side scan arrays can be seen in drawing 300-0000238-0105, to be connected to J2 (Port) and J5 (Starboard) of the end cap.

The sub-bottom transmit cable (DWG: 300-0000450-0105) should be connected to J3 and the sub-bottom receive cable (DWG: 503-0000025-0105) connected to J4 of the end cap.

3.3 J6 Connector

J6 connector provides access to a serial port (COM 1) and Trigger B. Refer end cap drawing with (DWG: 300-0000755-0105) and User Connection wiring diagram (DWG: 300-0000498-0105) for wiring configuration. This connector is not used but Com 1 RS232 port can be configured and used for future interfacing as required (Note: Com 2 is not connected).

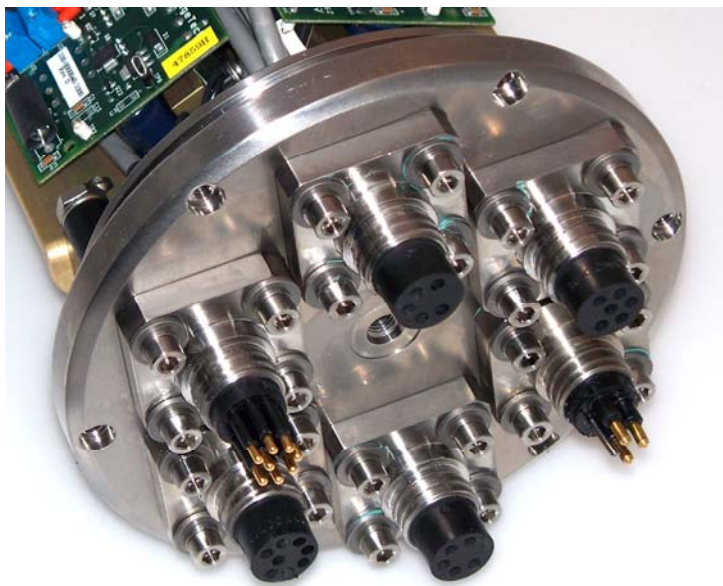


Figure 2: End Cap

4. Sonar.ini Setting

[Main]

Config=ATAPI_SBSS

CompressNet=1

=====

[SUB0]

TriggerMask=1 ; Trig A INput

TriggerOutLength=30000

[SUB1]

TriggerMask=1

;AutoPulseMode=1

[SUB1IO0]

;PROCESSING_PAKDELAY=-1

[SUB1IO1]

;PROCESSING_PAKDELAY=-1

[SUB2]

TriggerMask=1

TriggerOutLength=30000

;AutoPulseMode=1

[SUB2IO0]

;PROCESSING_PAKDELAY=-1

[SUB2IO1]

;PROCESSING_PAKDELAY=-1

[DSP0]

;TimeSyncMask=2

[File] - Store and Forward

PrimaryDrive=E:

BaseName=\DATA\DATA

MaxFileSize=50

MaxFileTime=600


FileQueueSize=2000

5. SonarSerial.ini Setting


```
;-----  
; User Available 1  
;-----  
[Serial1]      ; Logical Port  
Port=1         ; Physical Port  
Create=1  
Parser=0  
Baud=9600  
NetworkRaw=1  
  
-----  
; User Available 2  
;-----  
[Serial2]      ; Logical Port  
Port=2         ; Physical Port  
Create=1  
Parser=0  
Baud=9600  
NetworkRaw=1  
;-----
```

6. Attached Documents:

Title	Drawing Number	Rev No.
System Block Diagram	900- F094028-0101	A
Processor Block Diagram	800- F094028-0101	B
End Cap Connectors Arrangement	300-0000755-0105	A
48V Power Connection Wiring (J1)	300-0000522-0105	B
User Port Wiring Configuration (J6)	300-0000498-0105	B
Side Scan Array Cables (J2/J5)	300-0000238-0105	5
Sub-Bottom Tx-Cable (J3)	300-0000450-0105	D
Sub-Bottom Rx-Cable (J4)	503-0000025-0105	B
6000m Pressure Housing Mechanical Drawing	450-0000194-0800	A
Side Scan 120/410 kHz Array Mechanical Drawing	500-120410J-0800	B
KT-424D Transducer Mechanical Drawing	450-0000150-0800	A
HA-424D Hydrophone Array Mechanical Drawings	450-0000149-0800	A

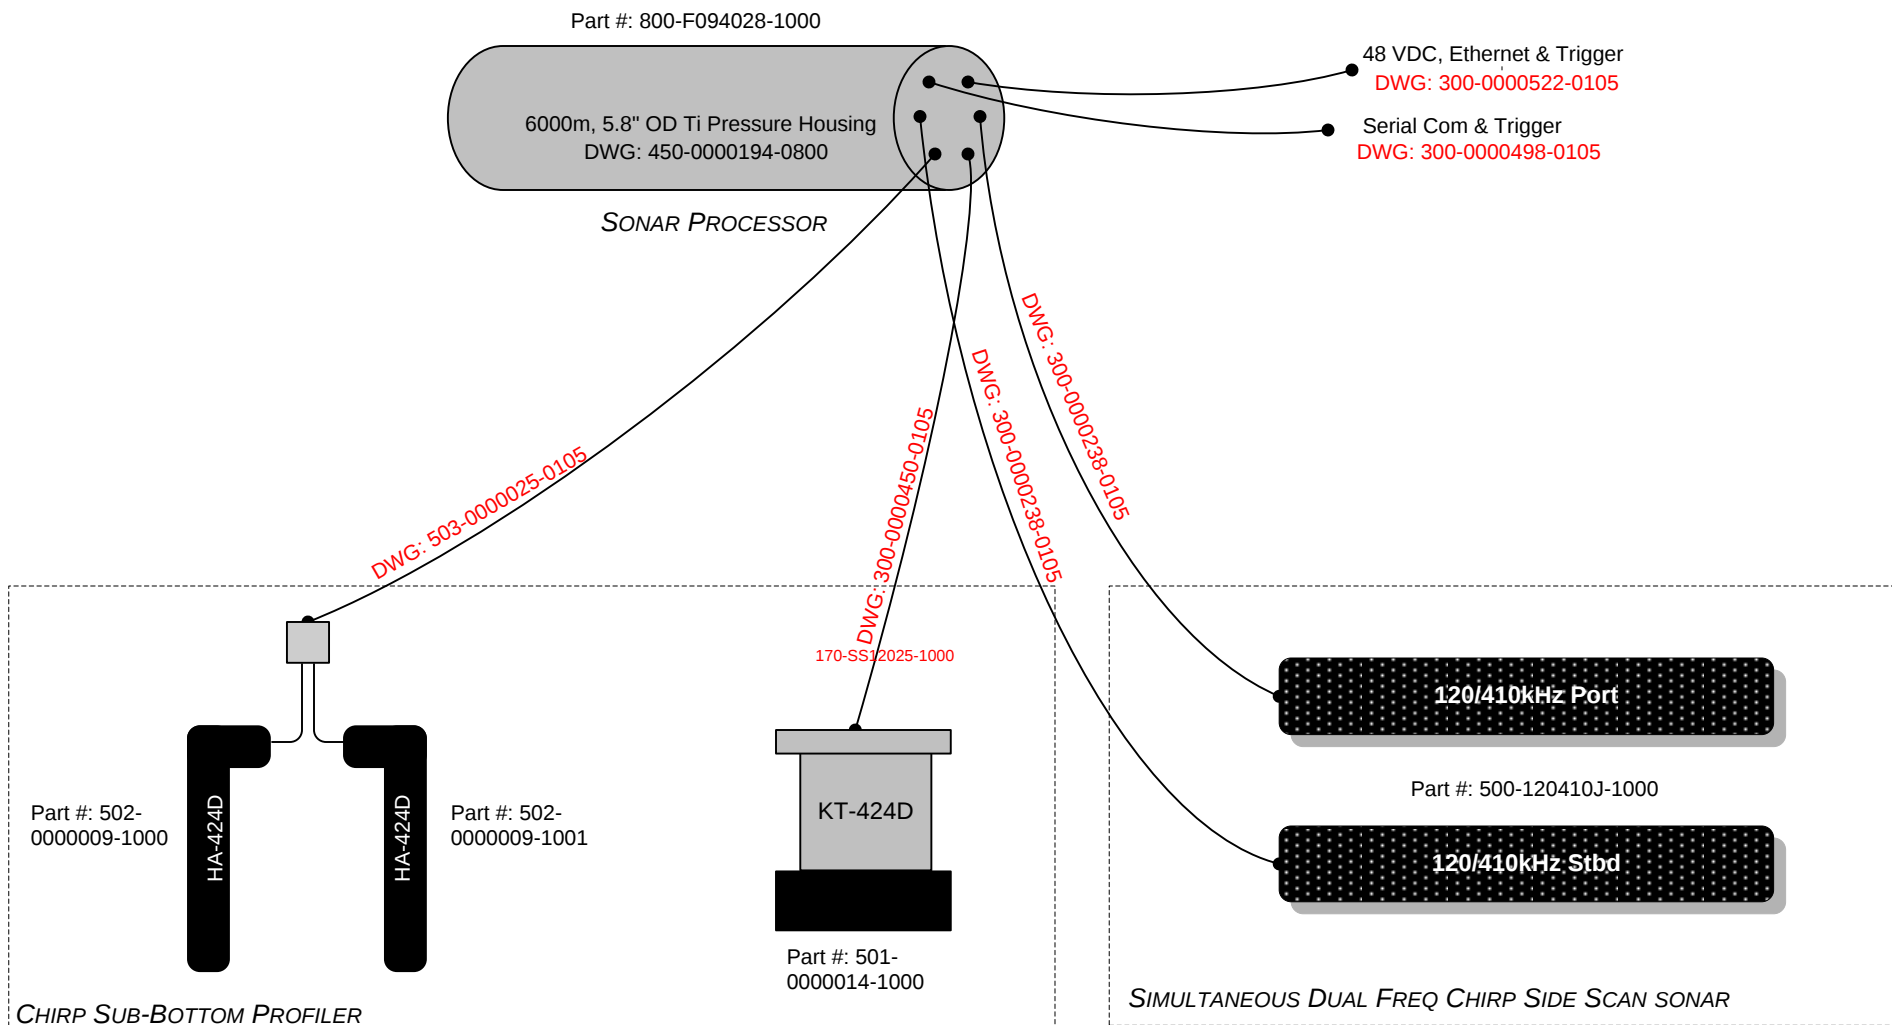


APPROVALS	DATE	 EdgeTech 1141 Holland Drive, Suite 1 Boca Raton, FL 33487 Tel: (561) 995-7767 / Fax: 995-7761 Email: FullSpectrum@EdgeTech.com			
DRAWN: CF	01-08-10				
CHECKED: RR	01-08-10				
ENG:					
ISSUED		System Block Diagram, 120/410 & 424 6000m, F094028 - WHOI			
		CARDFILE NAME		DRAWING NO.	REV
SYSTEM	2672-ABC/F	SCALE	page 1 of 1	900-F094028-0101	a

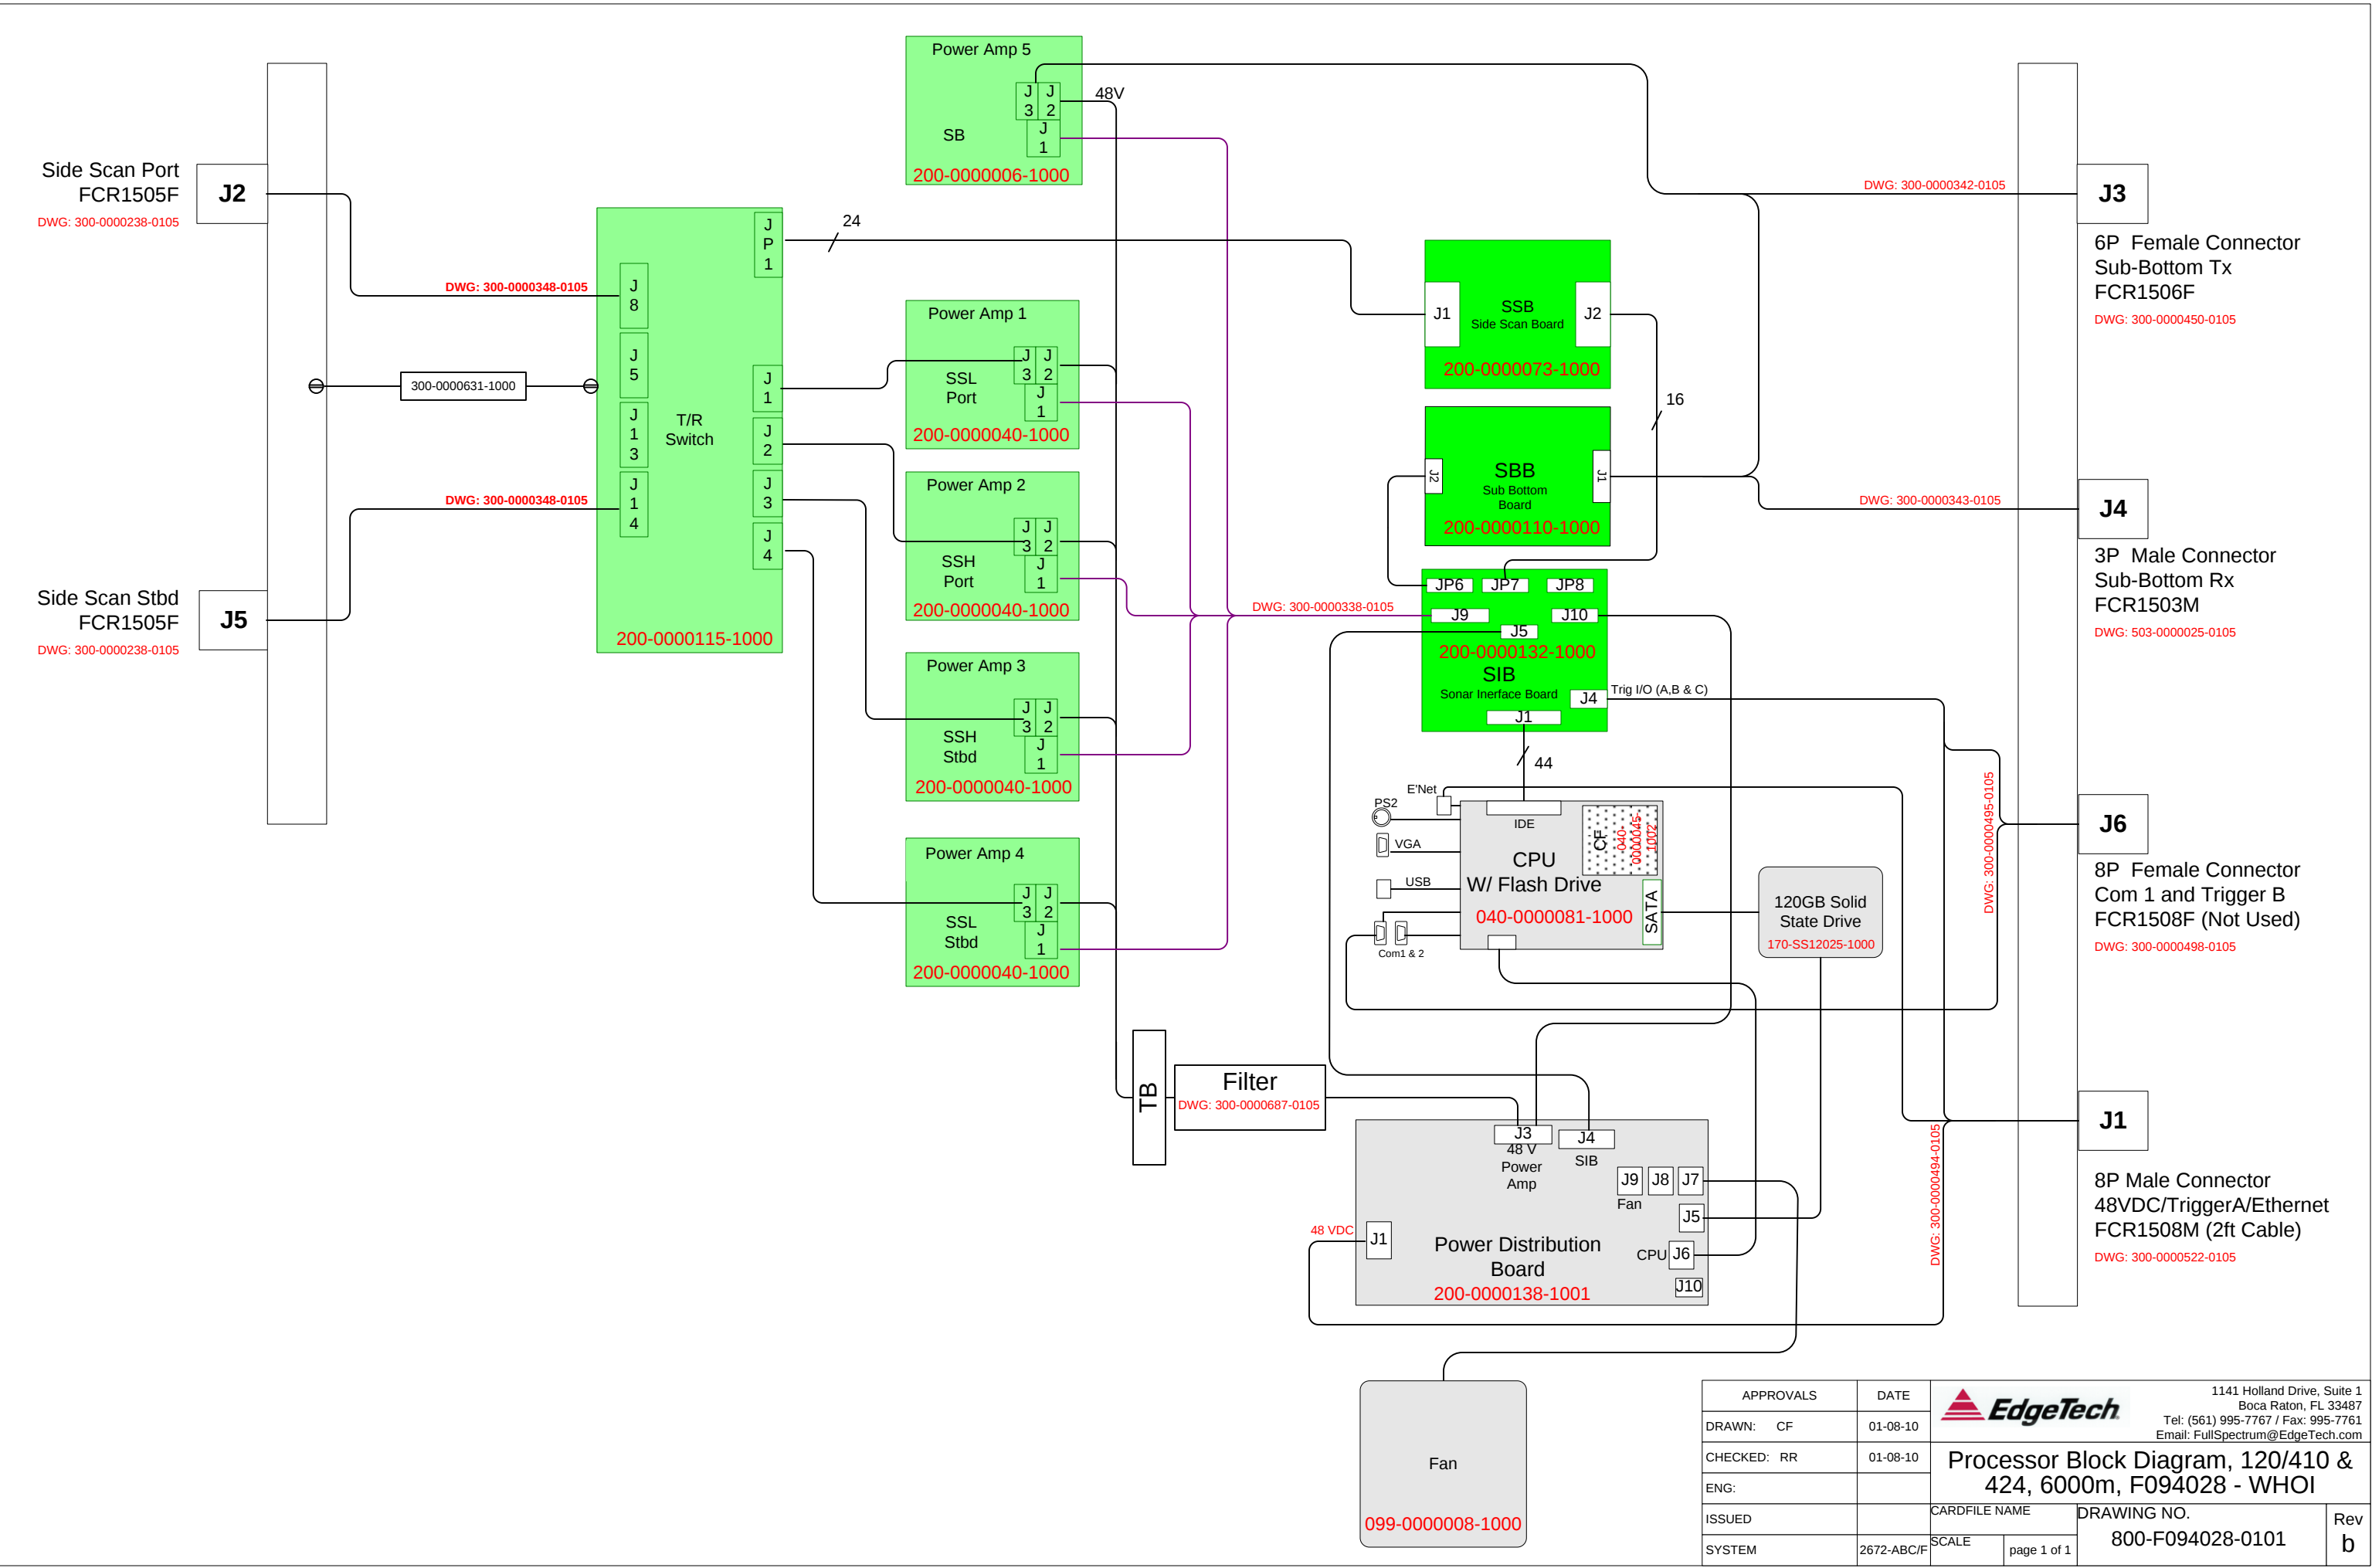

UNLESS AS MAY BE OTHERWISE PROVIDED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF "EDGE TECH" AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION. COPYRIGHT © 2010 EDGETECH INC.


REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
A	Initial Release	1/14/10	

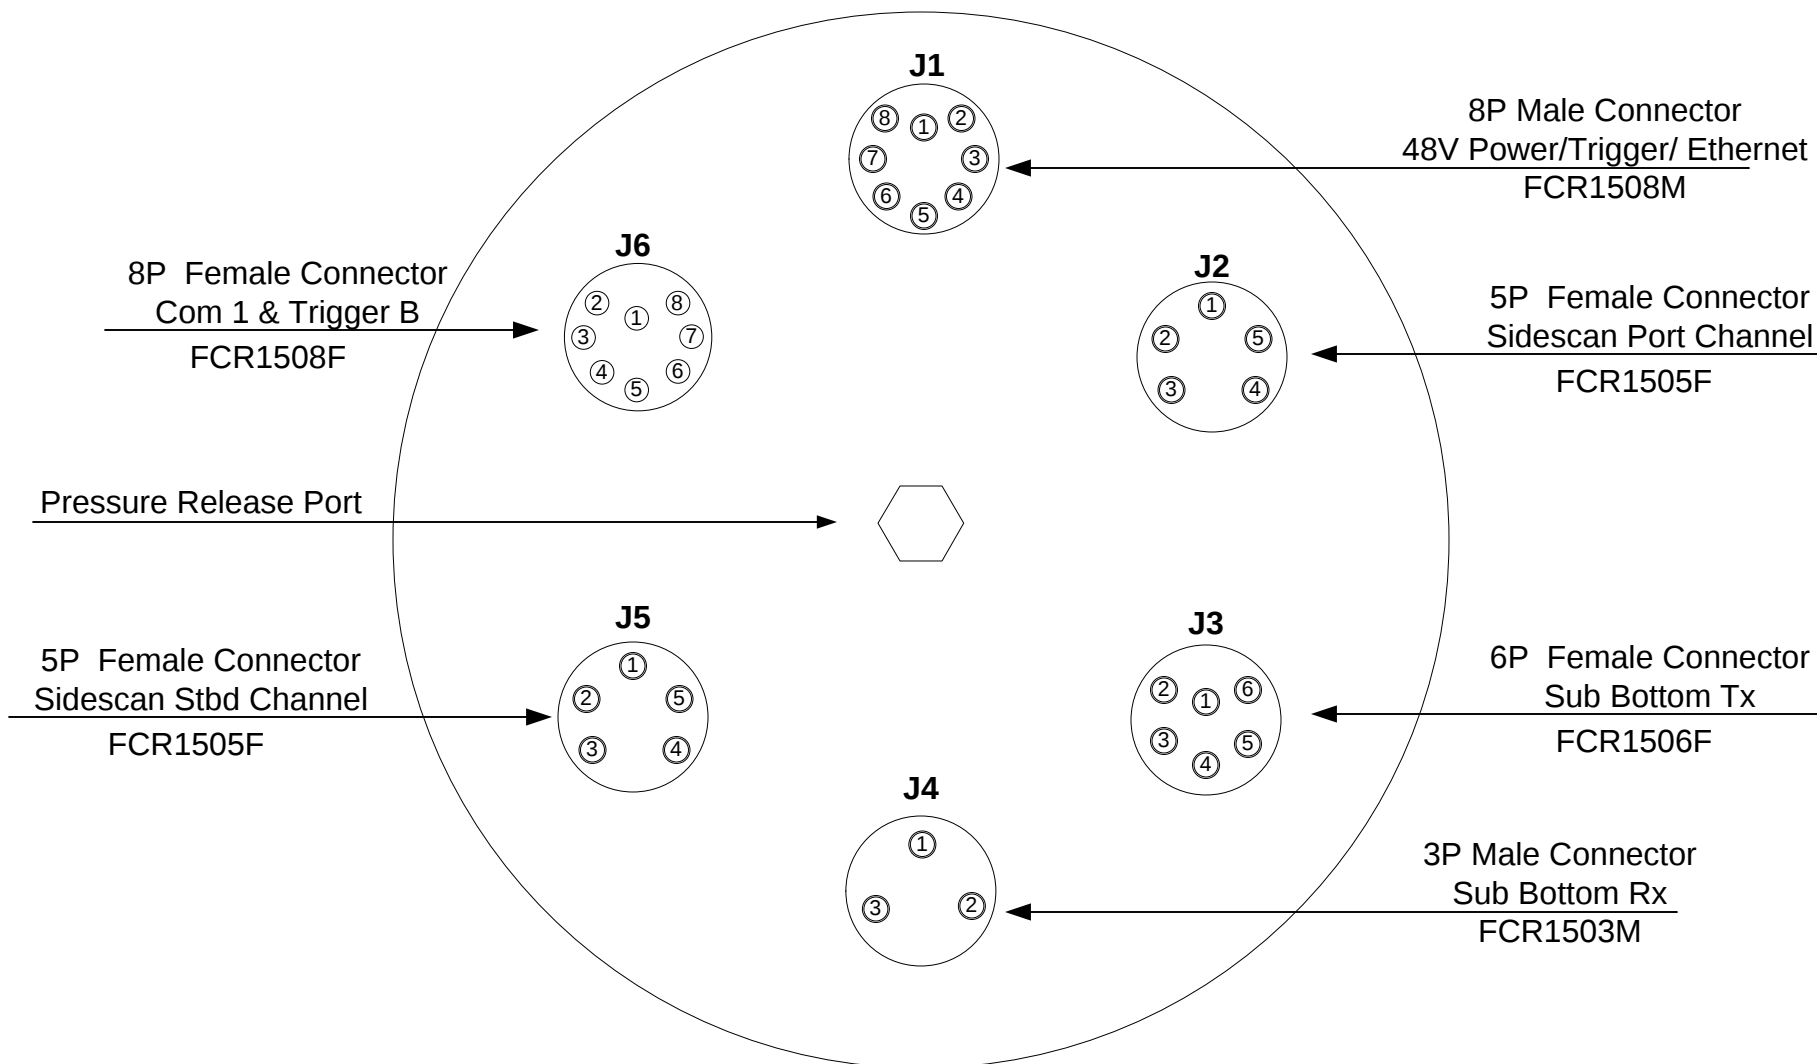

APPROVALS	DATE	 EdgeTech		1141 Holland Drive, Suite 1 Boca Raton, FL 33487 Tel: (561) 995-7767 / Fax: 995-7761 Email: FullSpectrum@EdgeTech.com		
DRAWN: CF	01-14-10					
CHECKED:		End Cap Connector Arrangement FE094028, 6000M, 5" ID Housing,				
ENG:						
ISSUED		CARDFILE NAME		DRAWING NO.		REV
SYSTEM	2672-ABC/F	SCALE	page 1 of 1	300-0000755-0105		
						A

UNLESS AS MAY BE OTHERWISE PROVIDED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF "EDGE TECH" AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION. COPYRIGHT © 2006 EDGE TECH INC.

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
1.0	Init Release	3-12-07	MS
2.0	Added Cable Length Table	1/28/08	CF
3.0	Removed cable wire colors	3/18/08	CF
3.1	Added cable length to table	4/15/08	CF
3.2	Change naming in table	5/28/08	CF
4.0	Added Twist to show pinout straight thru	2/22/09	RR
5.0	Added requirement to label	5/1/09	RR

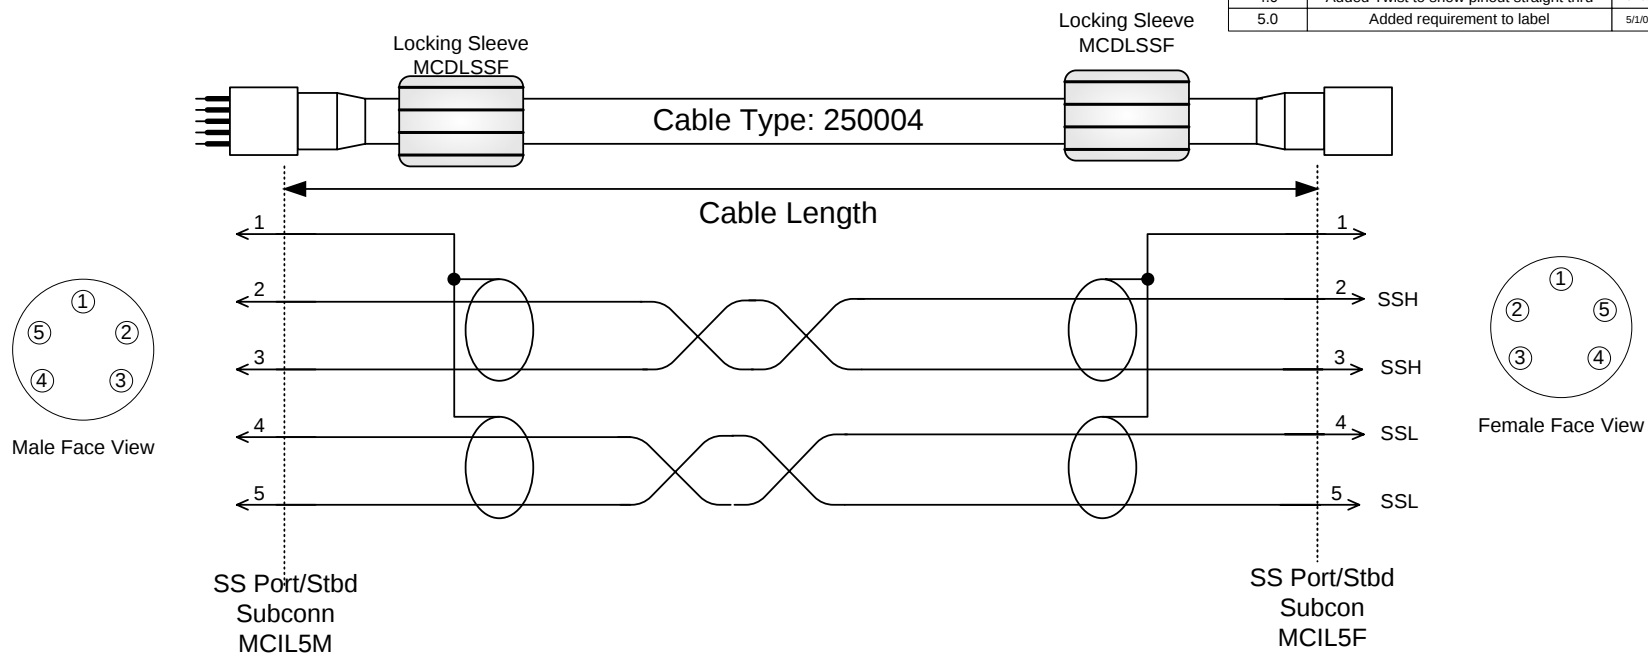




PART #	Cable Length
300-0000238-1000 (Standard)	8 Feet +1", -0.0"
300-0000314-1000	40 Feet +1", -0.0"
300-0000315-1000	30 Feet +1", -0.0"
300-0000316-1000	20 Feet +1", -0.0"
300-0000323-1000	5 Meter +20/-0mm
300-0000358-1000	12 Feet +1", -0.0"
300-0000369-1000	50 Feet +1", -0.0"
300-0000449-1000	38" +0.5", -0.0"
300-0000463-1000	10 Feet +1", -0.0"
300-0000464-1000	15 Feet +1", -0.0"
300-0000524-1000	1500mm +20/-0mm
300-0000562-1000	4 Meter +20/-0mm
300-0000585-1000 (R6000-75/410: Waitt)	60" +1", -0.0"

Note: Label final assembly with part number. Label must be suitable for marine and subsea environment. Affix label in the center of each assembly.

APPROVALS		DATE			1141 Holland Drive, Suite 1 Boca Raton, FL 33487 Tel: (561) 995-7767 / Fax: 995-7761 Email: FullSpectrum@EdgeTech.com	
DRAWN: MS		03-12-07				
CHECKED:			Sidescan Array Interconnect / Extension Cable			
ENG:						
ISSUED			CARDFILE NAME		DRAWING NO.	
SYSTEM			SCALE		300-0000238-0105	
			page 1 of 1		REV 5.0	

UNLESS AS MAY BE OTHERWISE PROVIDED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF "EDGETECH" AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION. COPYRIGHT © 2003 EDGETECH INC.

REVISIONS			
A	Release	8-30-06	RR
B	Added Note for Length	6-04-07	RR
C	Added Note for Length for KS	6-13-07	RR
C.1	Added Metric and Spelling	12-12-07	RR
C.2	Added Part # and length	4/15/08	CF
C.3	350>300 in Part Number	4/15/08	RR
C.4	Added Part # and length	5/29/08	CF
D	Added Labeling Requirement	5/1/2009	RR

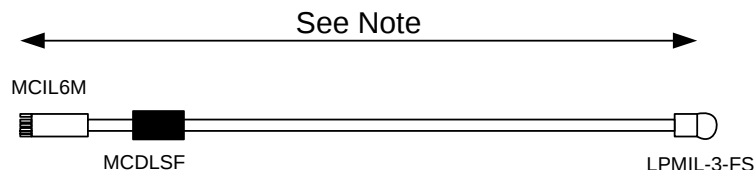
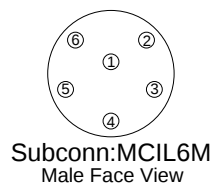
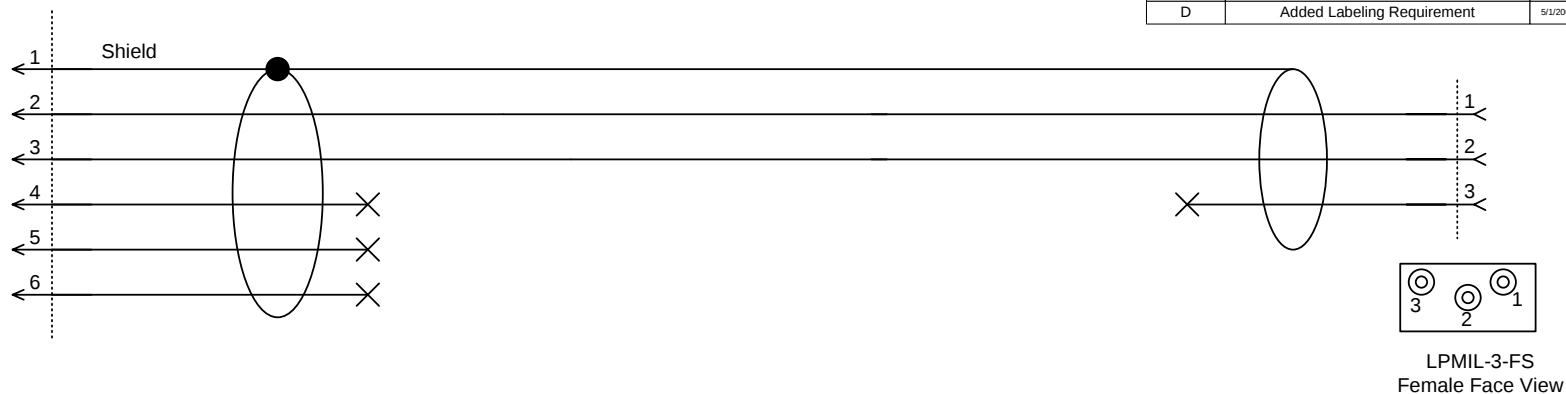


Note: Poly Urethane Jacketed Cable, 600V
 PN#300-0000450-1000= 66" (1676mm/+20mm-0mm)) Length
 PN#300-0000520-1000=120" (3048mm/+20mm-0mm)) Length
 PN#300-0000525-1000=39.4" (1000mm /+20mm-0mm))Length
 PN#300-0000610-1000=104" +/- 0.5" Length
 PN#300-0000614-1000=20" +/- 0.5" Length (Hydroid R600)

APPROVALS	DATE			1141 Holland Drive, Suite 1 Boca Raton, FL 33487 Tel: (561) 995-7767 / Fax: 995-7761 Email: FullSpectrum@EdgeTech.com	
DRAWN: RR	08-30-06			Cable Assembly, Deep, Tx Only	
CHECKED:		MCIL6M/MCDLSF>LPMIL-3-FS/Strap, PolyUrethane			
ENG:		CARDFILE NAME		DRAWING NO.	REV
ISSUED		SCALE		300-0000450-0105	D
SYSTEM	SBP	page 1 of 1			

UNLESS AS MAY BE OTHERWISE PROVIDED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF "EDGE TECH" AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION. COPYRIGHT © 2006 EDGETECH INC.

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
A	Initial release	04-06-07	RR
B	Remove Connector Reference	08-26-08	CF

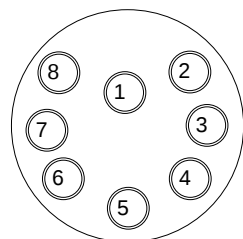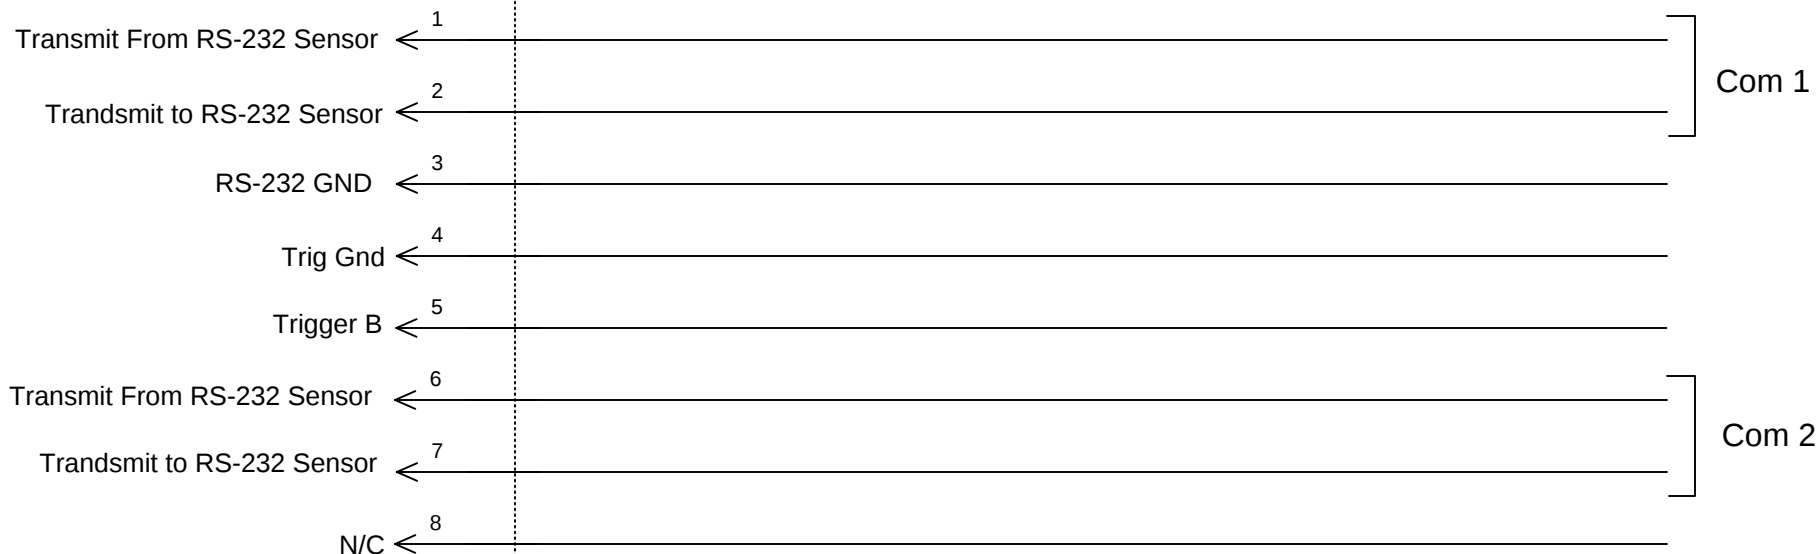
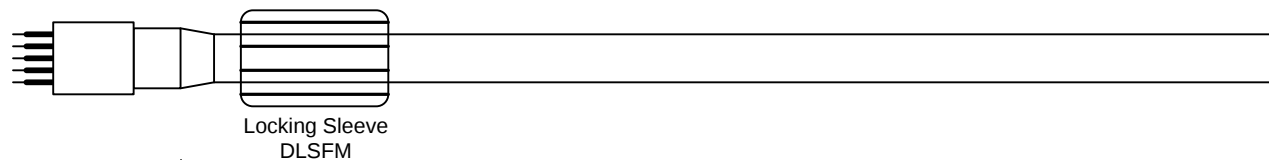


Male Face View
MCIL8M Connector

APPROVALS	DATE			1141 Holland Drive, Suite 1 Boca Raton, FL 33487 Tel: (561) 995-7767 / Fax: 995-7761 Email: FullSpectrum@EdgeTech.com	
DRAWN: CC	02/07/08			User Connection Com 2 & 3, Trigger B	
CHECKED: MS	02/07/08				
ENG:					
ISSUED		CARDFILE NAME		DRAWING NO.	REV
SYSTEM		SCALE	page 1 of 1	300-0000498-0105	B

UNLESS AS MAY BE OTHERWISE PROVIDED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF "EDGETECH" AND ARE ISSUED IN STRICT CONFIDENCE AND SHALL NOT BE REPRODUCED, COPIED OR USED AS THE BASIS FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION. COPYRIGHT © 2007 EDGETECH INC.

REVISIONS			
REV	DESCRIPTION	DATE	APPROVED
A	Initial release	04-06-07	CC
A.1	Remove letter from Trigger label	09-26-08	RR
B	Remove value from input voltage	02-05-09	CF

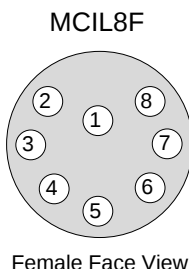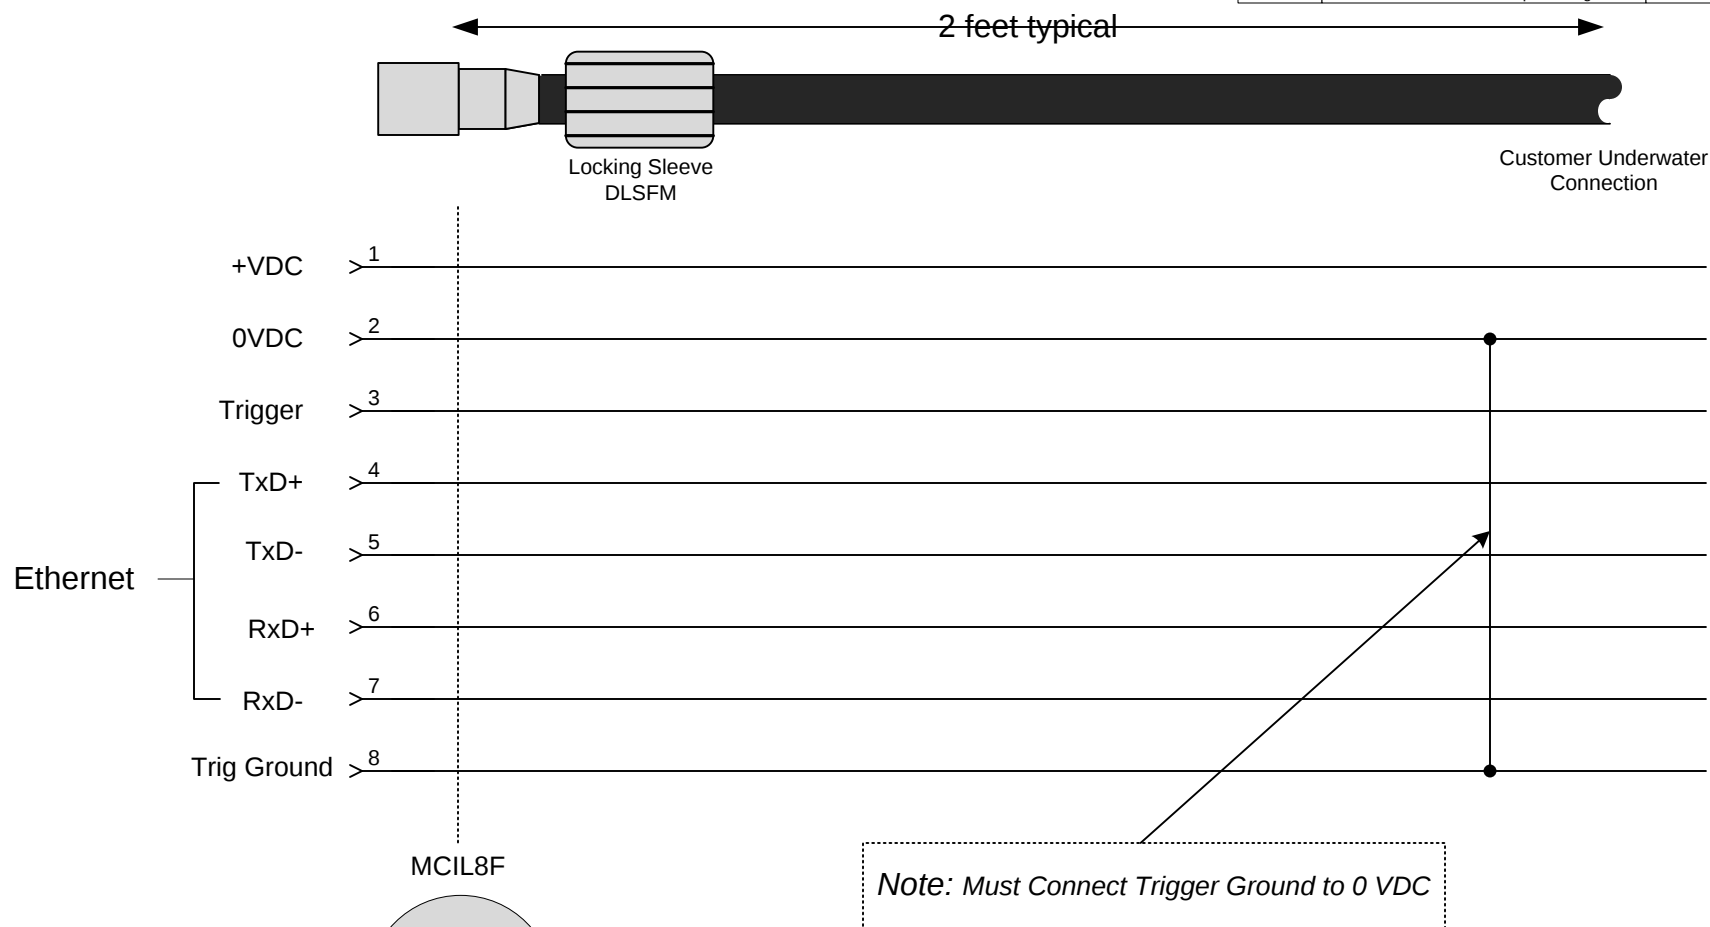


Note:
If the finished cable is longer than 1m, the Ethernet signal pairs should be run through 2 x twisted pairs.


APPROVALS	DATE			1141 Holland Drive, Suite 1 Boca Raton, FL 33487 Tel: (561) 995-7767 / Fax: 995-7761 Email: FullSpectrum@EdgeTech.com		
DRAWN: CC	06-06-07					
CHECKED: MS	06-06-07					
ENG:						
			J1: User Connection 1 Power, Trigger and Ethernet			
ISSUED						
		CARDFILE NAME		DRAWING NO.		REV
SYSTEM		SCALE		300-0000522-0105		B
		page 1 of 1				

THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF EDGEONE LLC DBA
 EDGETECH (OR ORE) AND ARE ISSUED IN STRICT CONFIDENCE. THEY SHALL NOT BE
 REPRODUCED, COPIED OR USED IN ANY WAY WITHOUT THE EXPRESS WRITTEN
 PERMISSION OF EDGEONE LLC. © 2005 EDGEONE LLC

REVISIONS				
ECR #	REV	DESCRIPTION	DATE	APPROVED
	A	Release	08/20/03	RR
	A1	Added Metric and Spell Check	12/12/07	RR
1360	B	Added Shrink Wrap Location	9-8-09	

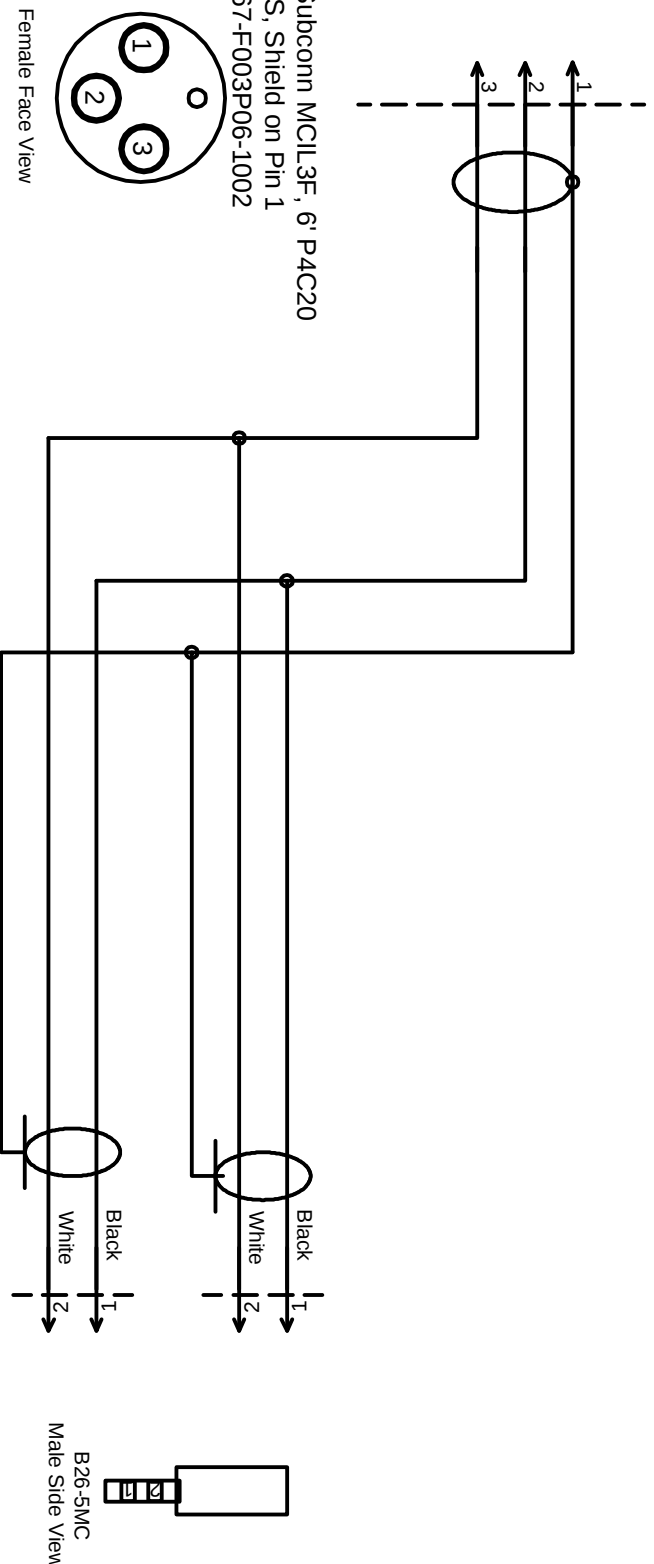

067-M002P10-1000

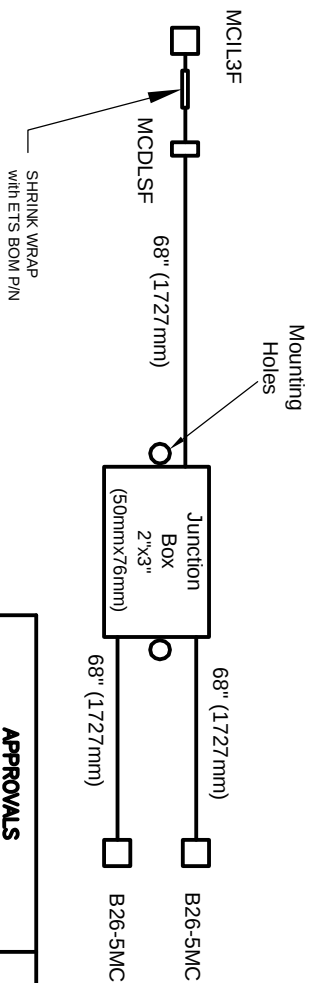



Note: Spliced connections must be soldered, individually coated with Scotchkote (3M 054007-14853) or equivalent, and then covered in heat shrink tubing prior to encapsulation.

APPROVALS		DATE	TITLE	
DRAWN:	RR	07-28-05	Spider, Deep, Rx Only 3 Pin Subconn	
CHECKED				
ENG				
ISSUED				
SYSTEM		F.S-DW		

EdgeTech
 An Affiliate Company of ONE Offshore
 1141 Holland Drive, Suite 1
 Boca Raton, FL 33487
 Tel: (561) 995-7767 / Fax: 995-7761
 Email: FullSpectrum@EdgeTech.com

CAD FILENAME:	DRAWING NO.	REV
SCALE	503-0000025-0105	B

UNLESS AS MAY BE OTHERWISE PROVIDED BY CONTRACT, THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF EDGETECH AND ARE NOT TO BE REPRODUCED OR TRANSMITTED IN ANY FORM OR BY ANY MEANS, ELECTRONIC OR MECHANICAL, INCLUDING PHOTOCOPYING, RECORDING, OR BY ANY INFORMATION STORAGE AND RETRIEVAL SYSTEM, WITHOUT PERMISSION IN WRITING FROM EDGETECH. FOR THE MANUFACTURE OR SALE OF APPARATUS WITHOUT PERMISSION. COPYRIGHT ©2008 EDGETECH INC.

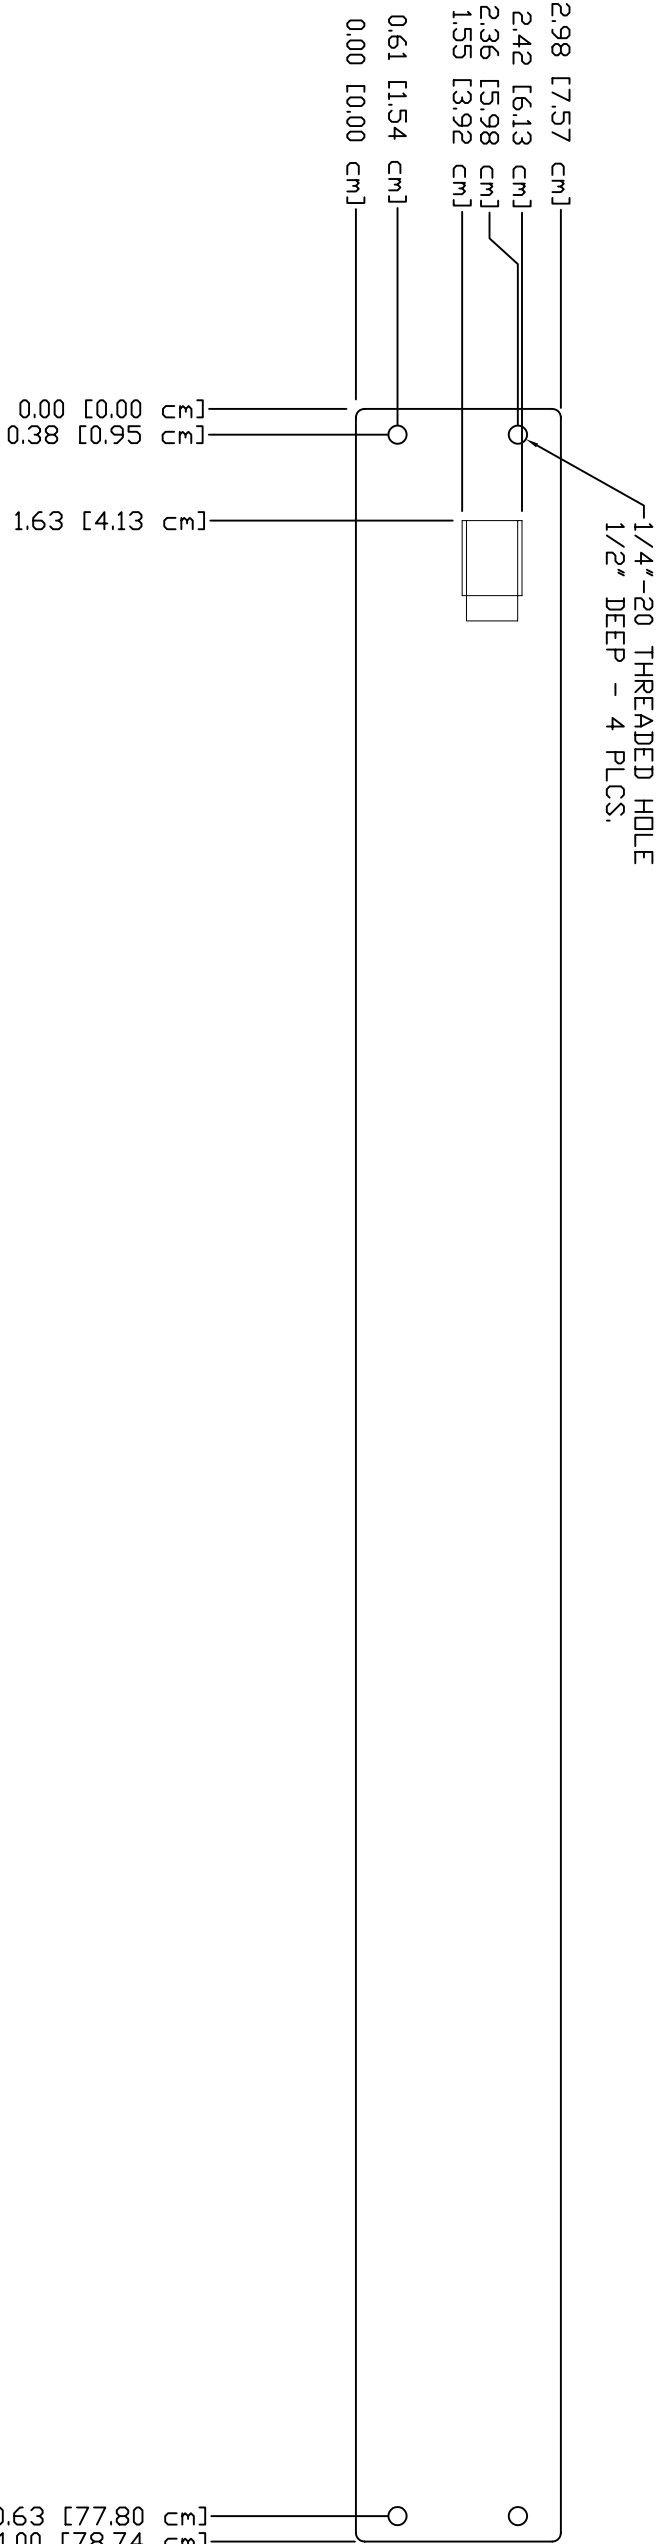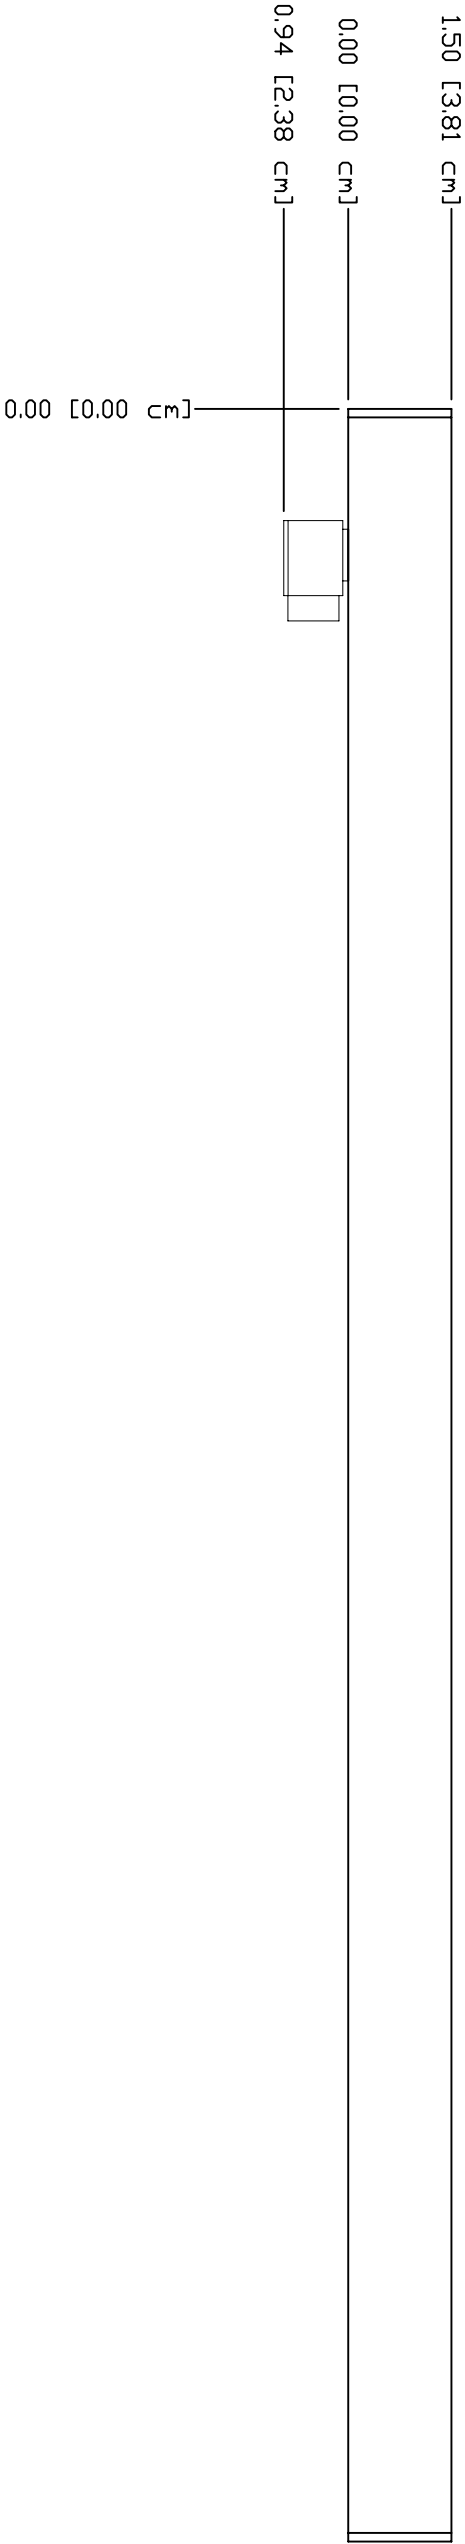

- NOTES:
- A. ARRAYS SHOULD HAVE A CLEAR VIEW OF SEAFLOOR.
 - B. ARRAYS SHOULD BE MOUNTED WITH A 20° DEPRESSION ANGLE.
 - C. PORT SIDE, CABLE END POINTS FORWARD.
 - D. STARBOARD SIDE, CABLE END POINTS AFT.
 - E. ARRAY BULK HEAD CONNECTOR = MCBHRA5M.

WEIGHT

AIR: 7.26 KG (16.00 LBS)

SW: 4.99 KG (11.00 LBS)




MATERIAL	UNLESS OTHERWISE NOTED: DIMENSIONS ARE IN INCHES RESISTORS ARE IN OHMS CAPACITORS ARE IN MICROFARADS	DRAWN BY: P.F.G.		 1141 HOLLAND DRIVE BAY 1 BOCA RATON FL, 33487
		AUGUST 11, 2003		
6061-T6 AL		CHECKED		
FINISH	TOLERANCES	DECIMALS	FRACTIONS	MECH
		2 PLACES	3 PLACES	ELECT
		±.005	+-.00-.01	SYSTEM
				2200 & 2400
BLACK MARINE HARD COAT		REMOVE BURRS BREAK SHARP EDGES		
		TITLE		SS ARRAY 120/410 KHZ, 6000M
		CARD TITLE NAME		500-120410J-0800
		SCALE		1:1
		DO NOT SCALE		
		DRAWING NO.		REV
		500-120410J-0800		B

REV		REVISIONS	
REV	DESCRIPTION	DATE	APPROVED
A	INITIAL RELEASE	8/11/03	
B	UPDATED NOTES	3/3/08	

Edgetech 1141 HOLLAND DRIVE, BAY1
BOCA RATON FL, 33487

THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF EDGEONE LLC DBA EDGETECH (OR ORE) AND ARE ISSUED IN STRICT CONFIDENCE. THEY SHALL NOT BE REPRODUCED, COPIED OR USED IN ANY WAY WITHOUT THE EXPRESS WRITTEN PERMISSION OF EDGEONE LLC ©2005 EDGEONE LLC

REVISIONS				
ECR#	REV	DESCRIPTION	DATE	APPROVED
	A	INITIAL RELEASE	11/27/07	

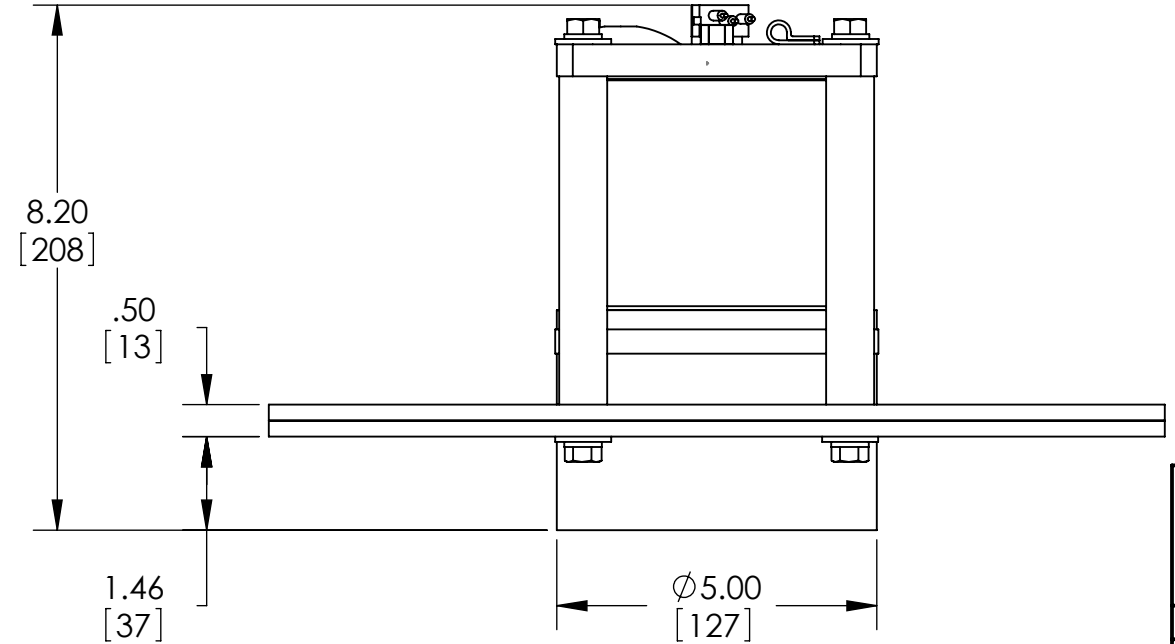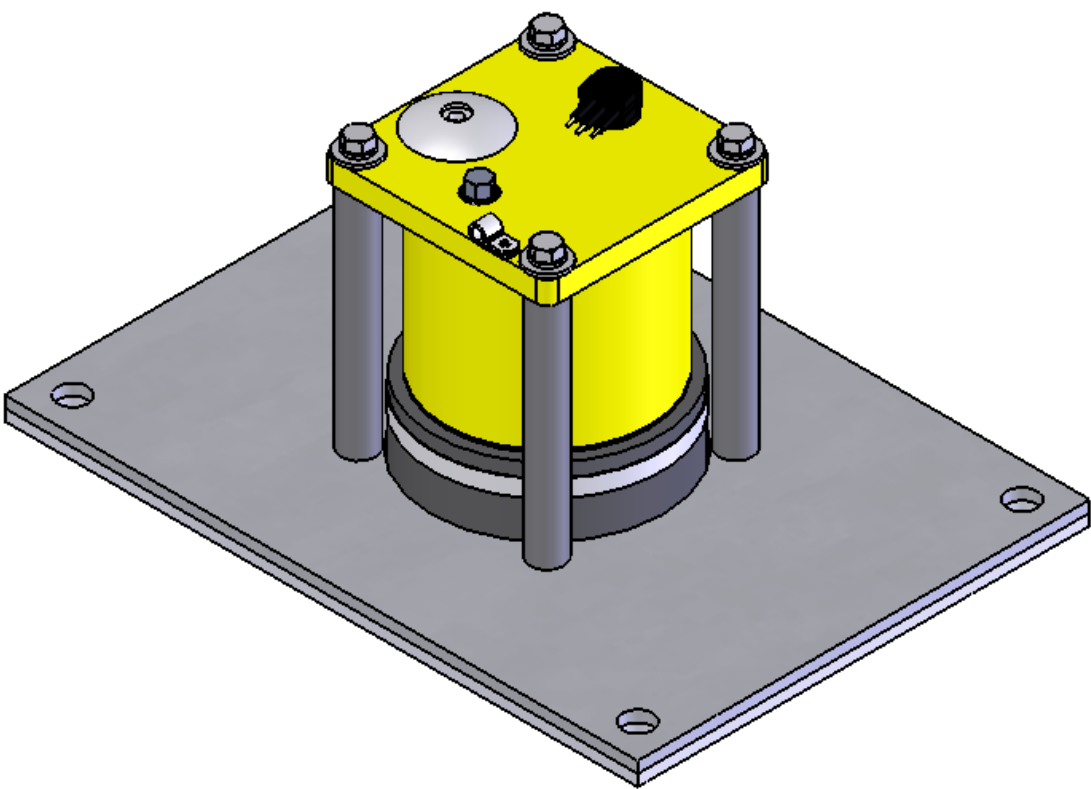
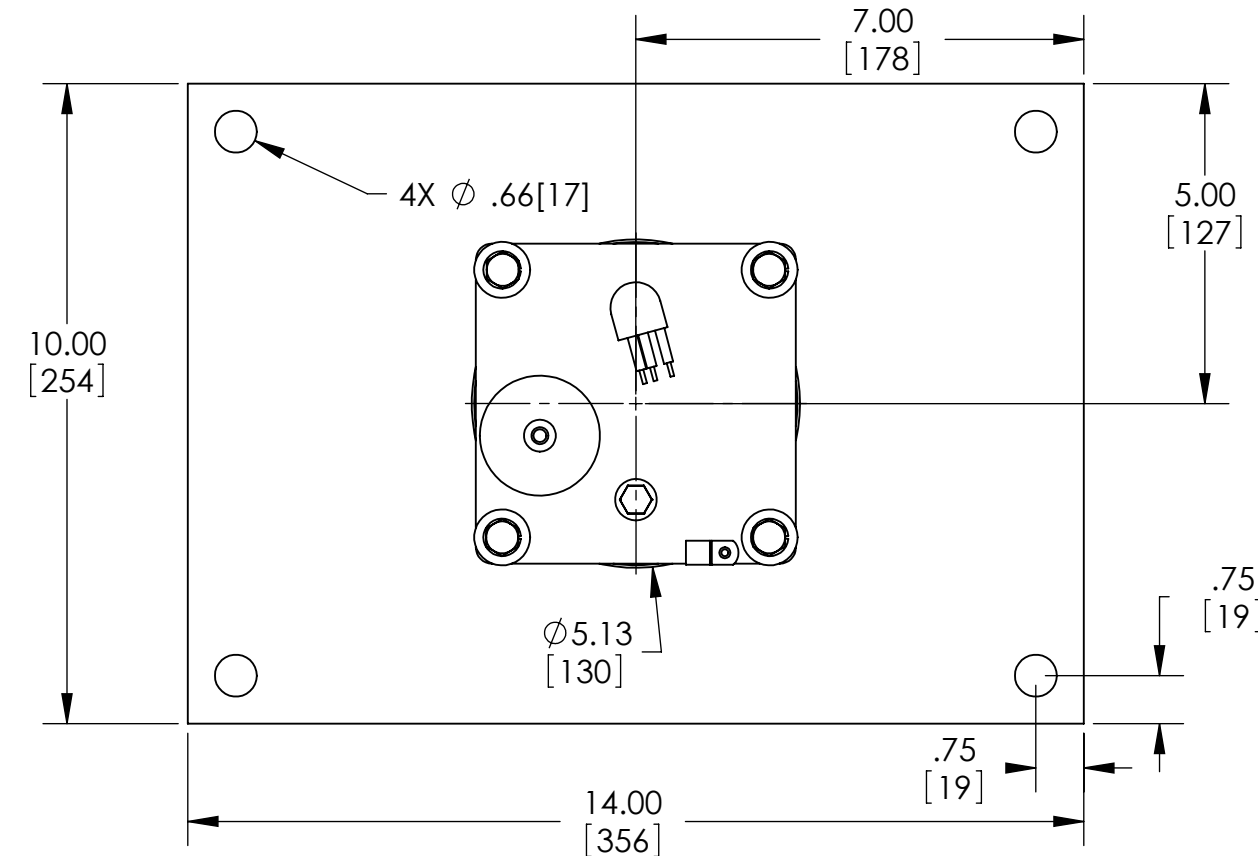


UNLESS OTHERWISE NOTED: DIMENSIONS ARE IN INCHES RESISTORS ARE IN OHMS CAPACITORS ARE IN MICROFARADS				APPROVALS		SIGNATURE & DATE		 <i>EdgeTech</i> 1141 HOLLAND DRIVE, BAY 1 BOCA RATON, FL 33487		
				DRAWN	WJM		11/27/07			
				CHECKED						
TOLERANCES				MECH			TITLE 424 TRANSDUCER W/ PLATE			
				ELECT						
DECIMALS		FRACTIONS	ANGLES	SYSTEM	DW-424		CADFILENAME:	DRAWING NO.	REV	
2 PLACES	3 PLACES									
+/- .010	+/- .005	+/- 1/64	+/- 0.5°							
DO NOT SCALE PRINT				REMOVE BURRS, BREAK SHARP EDGES			SCALE	B	450-0000150-0800	A

THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF EDGEONE LLC DBA EDGETECH (OR ORE) AND ARE ISSUED IN STRICT CONFIDENCE. THEY SHALL NOT BE REPRODUCED, COPIED OR USED IN ANY WAY WITHOUT THE EXPRESS WRITTEN PERMISSION OF EDGEONE LLC ©2009 EDGEONE LLC

REVISIONS				
ECR#	REV	DESCRIPTION	DATE	APPROVED
	A	INITIAL RELEASE	12/9/09	

Ø5.80
[147]

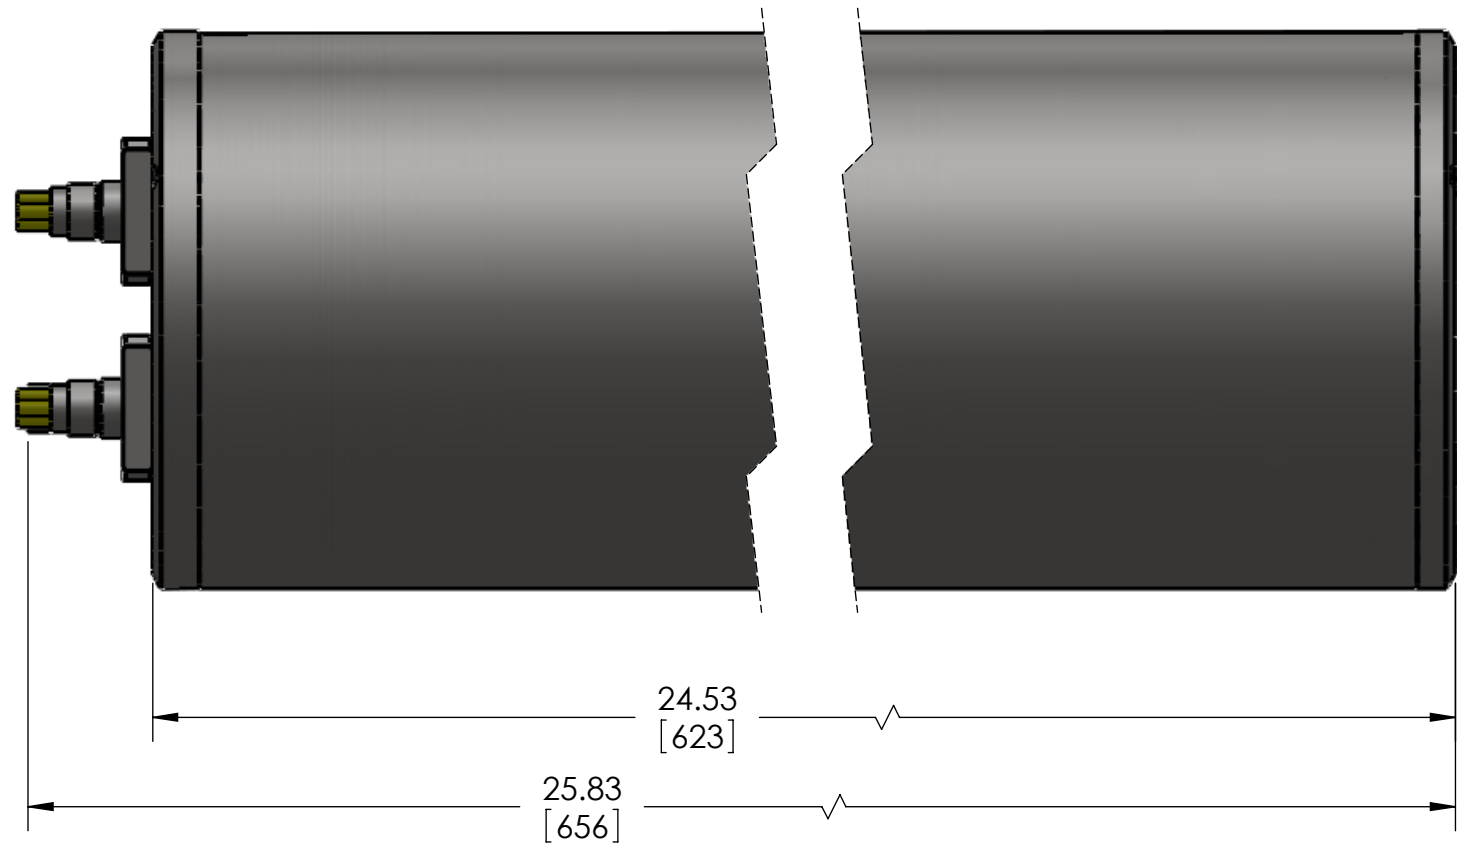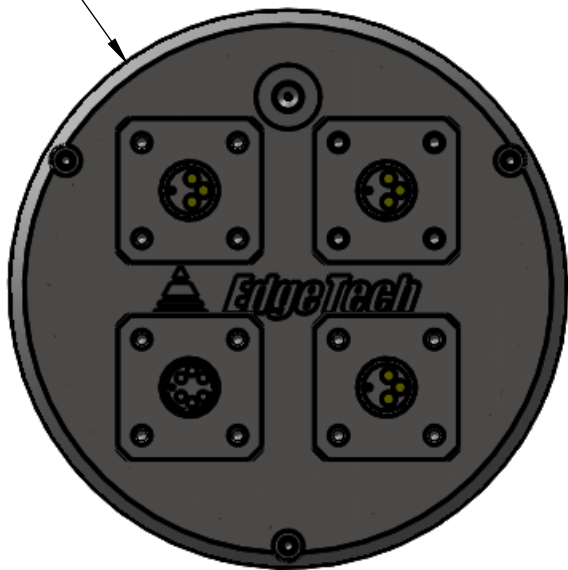

WEIGHTS:

AIR: 41.2 LBS [18.7 KG]
SW: 17.7 LBS [8.0 KG]


NOTES:

1. DIMENSIONS IN BRACKETS ARE IN MM.

UNLESS OTHERWISE NOTED: DIMENSIONS ARE IN INCHES RESISTORS ARE IN OHMS CAPACITORS ARE IN MICROFARADS	APPROVALS		SIGNATURE & DATE		 1141 HOLLAND DRIVE, BAY 1 BOCA RATON, FL 33487	
	DRAWN	WJM	12/9/09			
	CHECKED				TITLE 5" CHASSIS, 6000 M, TITANIUM, 23" W.L.	
	MECH					
TOLERANCES				ELECT	CADFILENAME:	
DECIMALS		FRACTIONS	ANGLES	SYSTEM		
2 PLACES	3 PLACES				DRAWING NO.	
+/- .010	+/- .005	+/- 1/64	+/- 0.5°		B 450-0000194-0800	
DO NOT SCALE PRINT				REMOVE BURRS, BREAK SHARP EDGES		REV A

THESE DRAWINGS AND SPECIFICATIONS ARE THE PROPERTY OF EDGEONE LLC DBA EDGETECH (OR ORE) AND ARE ISSUED IN STRICT CONFIDENCE. THEY SHALL NOT BE REPRODUCED, COPIED OR USED IN ANY WAY WITHOUT THE EXPRESS WRITTEN PERMISSION OF EDGEONE LLC ©2005 EDGEONE LLC

REVISIONS				
ECR#	REV	DESCRIPTION	DATE	APPROVED
	A	INITIAL RELEASE	11/27/07	

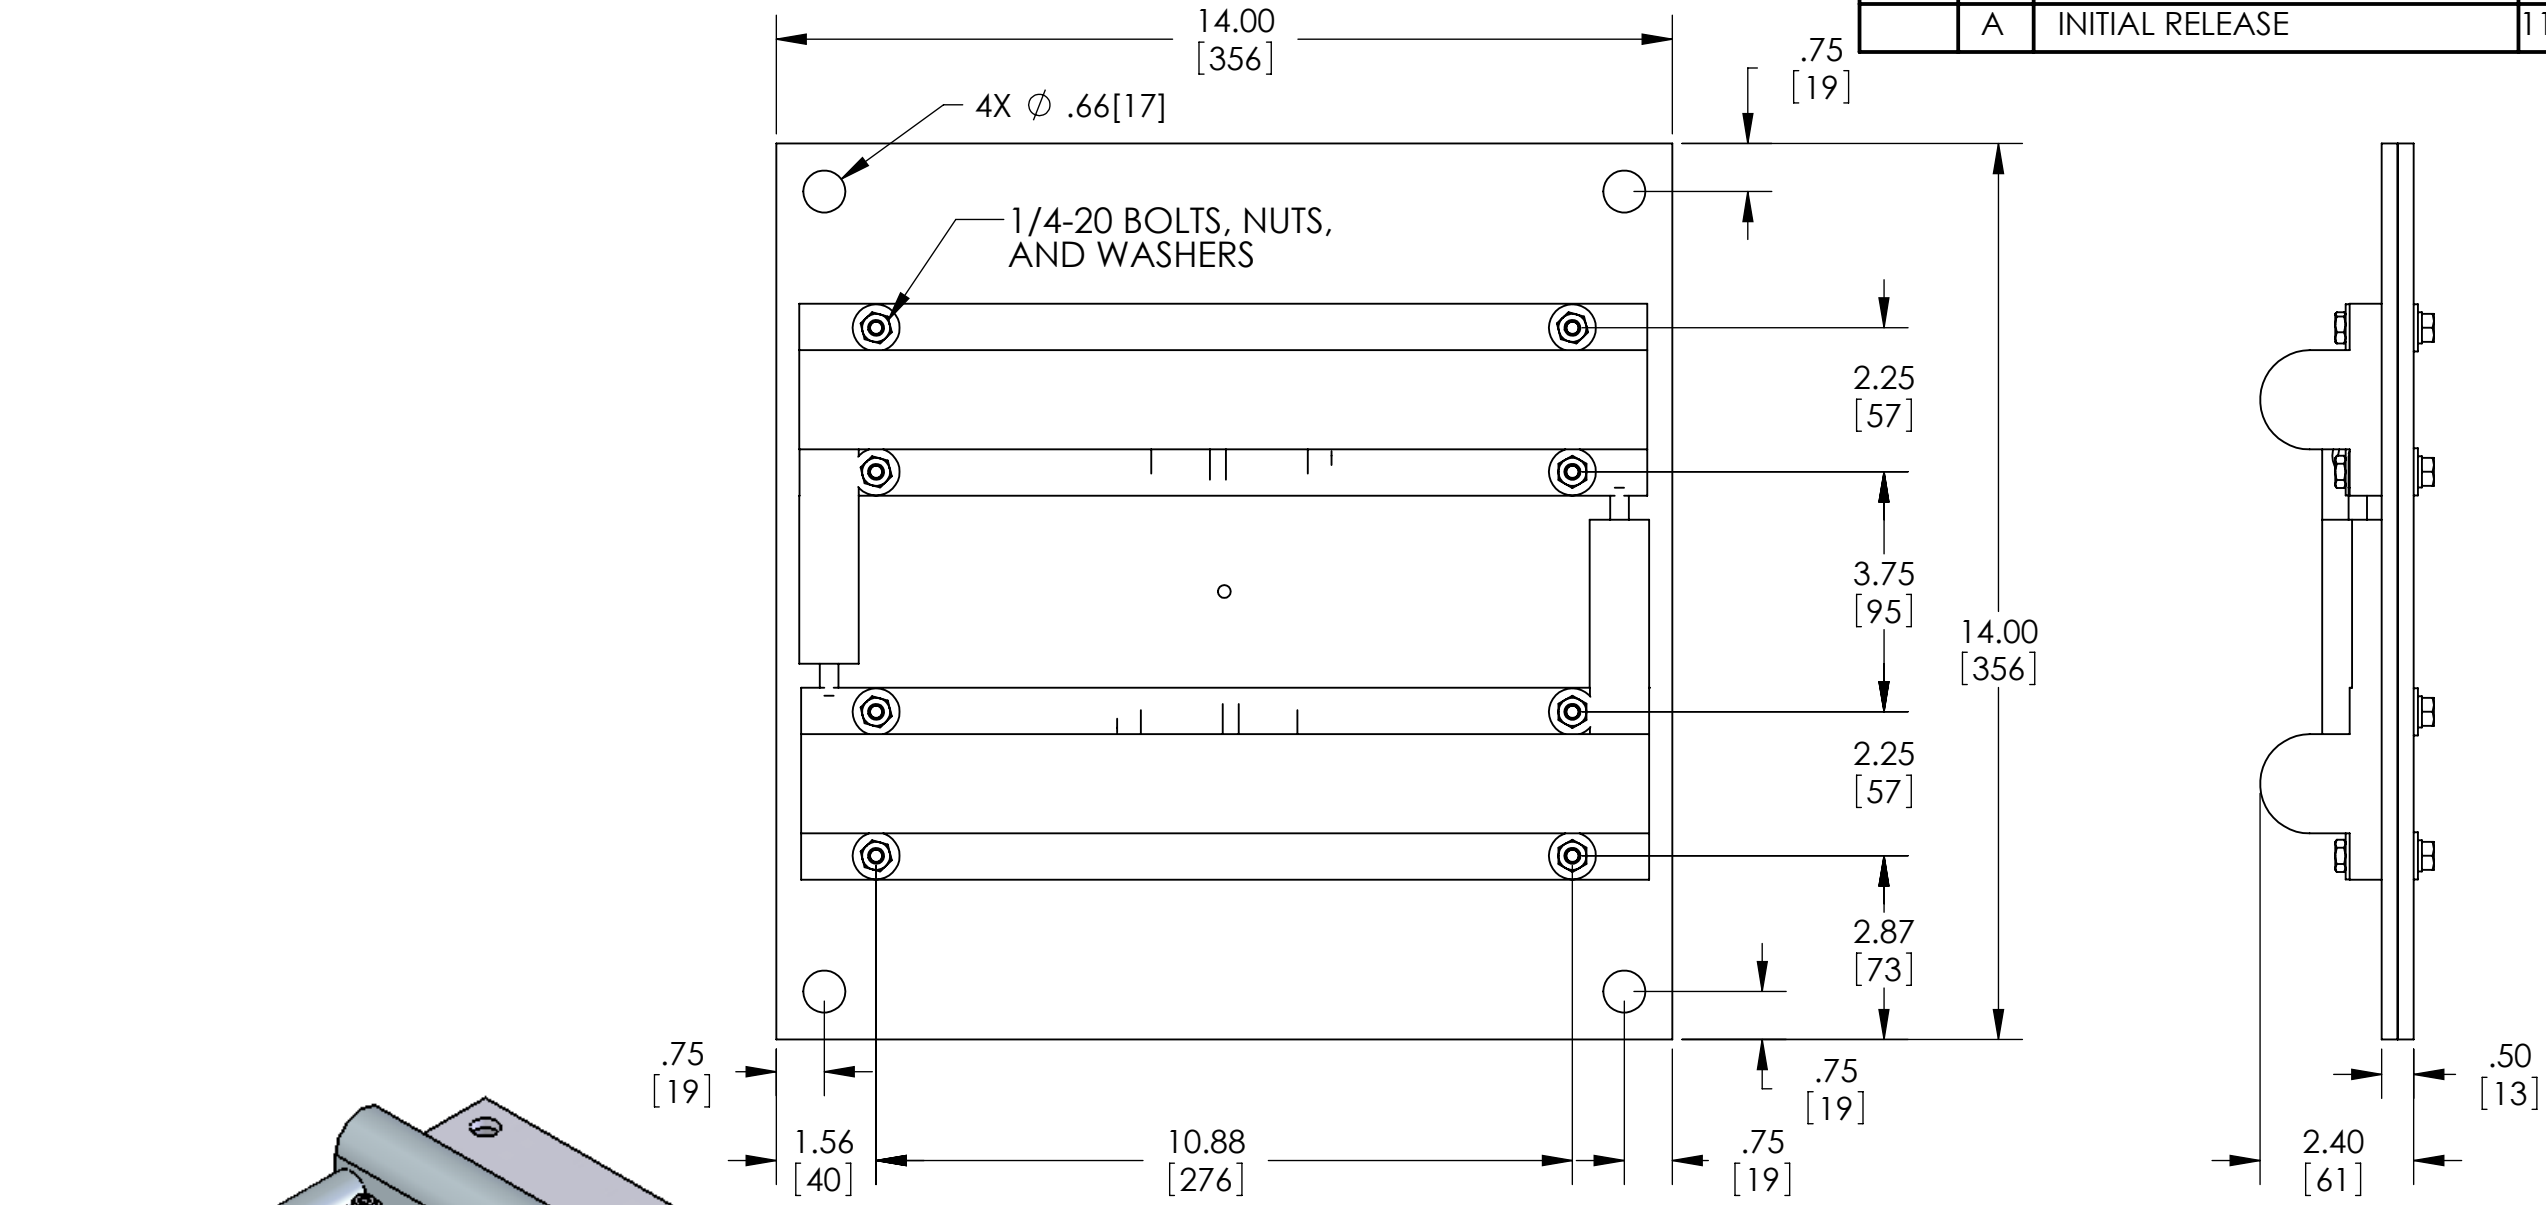

UNLESS OTHERWISE NOTED: DIMENSIONS ARE IN INCHES RESISTORS ARE IN OHMS CAPACITORS ARE IN MICROFARADS				APPROVALS		SIGNATURE & DATE		 1141 HOLLAND DRIVE, BAY 1 BOCA RATON, FL 33487							
				DRAWN		WJM				11/27/07					
				CHECKED											
TOLERANCES				MECH				TITLE 424 HYDROPHONE WITH PLATES							
DECIMALS		FRACTIONS		ANGLES		ELECT									
2 PLACES		3 PLACES						CADFILENAME:		DRAWING NO.		REV			
+/- .010		+/- .005		+/- 1/64		+/- 0.5°				B		450-0000149-0800		A	
DO NOT SCALE PRINT				REMOVE BURRS, BREAK SHARP EDGES				SCALE							