

CABLES

AANDERAA



cable 3296. Connecting cable 10 pin to 6 pin



cable 3485. Connecting cable 10 pin to free end



cable 3854. Connecting cable 10 pin to Cell Plug



cable 3855. Connecting cable for PC



cable 3976*. Flange Connecting cable 10 pin to free end




cable 3980*. Flange connecting cable 10 pin to 10 pin

*) used with coupling 3979 for 36mm sensors and coupling 3977 for 40mm sensors.

EXAMPLES OF APPLICATIONS

To the right: The Oxygen Optode 3830 used with a Recording Current Meter to measure dissolved oxygen and temperature as part of environmental monitoring.

Below: The Oxygen/Temperature Sensor 3930 used with Display Unit 3315 to measure dissolved oxygen and temperature in a fish mare

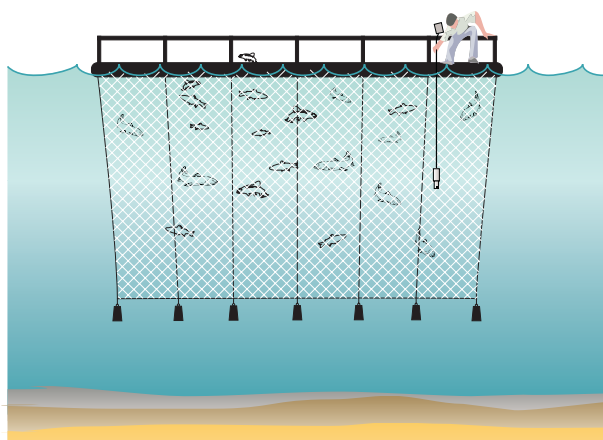

Representative's Stamp

PO BOX 34, SLÅTTHAUG
5851 BERGEN, NORWAY

NESTTUNBREKKEN 97
5221 NESTTUN, NORWAY

TEL. +47 55 109900
FAX. +47 55 109910

E-MAIL: info@aanderaa.no
WEB: <http://www.aanderaa.no>

OXYGEN OPTODE 3830

OXYGEN OPTODE/TEMPERATURE SENSOR 3930

OXYGEN OPTODE 3975



3830



3930



3975

Since oxygen is involved in most of the biological and chemical processes in aquatic environments, it is the single most important parameter needing to be measured. Oxygen can also be used as a tracer in oceanographic studies.

For environmental reasons it is critical to monitor oxygen in areas where the supply of oxygen is limited compared to demand e.g.:

- In shallow coastal areas with significant algae blooms
- In Fjords or other areas with limited exchange of water
- Around fish farms
- In areas interesting for dumping of mine or dredging waste

The Aanderaa Oxygen Optodes are based on the ability of selected substances to act as dynamic fluorescence quenchers. The fluorescent indicator is a special platinum porphyrin complex embedded in a gas permeable foil that is exposed to the surrounding water. A black optical isolation coating protects the complex from sunlight and fluorescent particles in the water.

This sensing foil is attached to a sapphire window providing

optical access for the measuring system from inside a watertight titanium housing.

The foil is excited by modulated blue light, and the phase of a returned red light is measured (see illustration overleaf). By linearizing and temperature compensating, with an incorporated temperature sensor, the absolute O₂ concentration can be determined.

The lifetime-based luminescence quenching principle offers the following advantages over electro-chemical sensors:

- Not stirring sensitive (it consumes no oxygen)
- Less affected by fouling
- Measures absolute oxygen concentrations without repeated calibrations
- Better long-term stability
- Less affected by pressure
- Pressure behaviour is predictable
- Faster response time.

The sensor is designed to operate down to 6000 meters. It fits directly on to the top end-plate of Recording Current Meters RCM 9, RCM 11 and other Aanderaa instruments.

SPECIFICATIONS

AANDERAA

PARAMETER	OXYGEN OPTODE 3830		OXYGEN/TEMPERATURE OPTODE 3930		OXYGEN OPTODE 3975	
OXYGEN	O ₂ -Concentration	Air Saturation	O ₂ -Concentration	Air Saturation	O ₂ -Concentration	Air Saturation
Measuring Range:	0 - 500μM ¹⁾	0 - 120%	0 - 500μM ¹⁾	0 - 120%	0 - 500μM ¹⁾	0 - 120%
Resolution:	<1μM	0.4%	<1μM	0.4%	<1μM	0.4%
Accuracy:	<8μM or 5 % ²⁾ whichever is greater	<5% ²⁾	<8μM or 5 % ²⁾ whichever is greater	<5% ²⁾	<8μM or 5 % ²⁾ whichever is greater	<5% ²⁾
Settling Time (63%):	<25s		<25s		<25s	
TEMPERATURE						
Range:	-0°C to +36°C		-7.5°C to +41°C		-0°C to +36°C	
Resolution:	0.01°C		0.05°C		0.01°C (0 - 5V)	0.02°C (4 - 20mA)
Accuracy:	±0.05°C		±0.1°C		±0.1°C (0 - 5V)	±0.15°C (4-20mA)
Settling Time (63%):	<10s		30s		<10s	
Operating Temperature	0 - 40°C (32 - 104°F)		0 - 40°C (32 - 104°F)		0 - 40°C (32 - 104°F)	
Operating Depth:	0 - 6000m (19,690ft)		0 - 1000m (3,280ft)		0 - 6000m (19,690ft)	
Sampling Rate:	SR10: controlled by the datalogger. RS-232: From 1s to 255 minutes		Controlled by the datalogger		From 1s to 255 minutes	
Output Formats:	Aanderaa SR10 ³⁾ RS-232 ⁴⁾		Aanderaa SR10 ³⁾ (Oxygen) and VR22 ³⁾ (Temperature)		0 - 5V outputs: ±0.1% of FS ⁵⁾ 4-20mA output: ±0.2% of FS ⁵⁾ RS-232 ⁴⁾	
Current Consumption:	SR10: 10mA/T where T is recording interval in minutes RS-232: 80mA/S +0.3mA where S is recording interval in seconds		10mA/T where T is recording interval in minutes		80mA/S +0.3mA +I _a where S is recording interval in seconds and I _a is quiescent: 5 - 45mA when analog adaptor enabled	
Supply Voltage:	SR10: -6 to – 14Vdc RS-232: +5 to +14Vdc		SR10: -6 to –14Vdc		Analogue: +7 to +14Vdc RS-232: +5 to +14Vdc	
Dimensions:	Ø36 x 86mm (Ø1.42 x 3.386in)		Ø40 x 168mm (OD1.575 x 6.61in)		Ø40 x 175.5mm (Ø1.42 x 6.9in)	
Weight:	230g (8.113oz)		495g (17.5oz)		480g (16.93oz)	
Materials:	Titanium, Hostaform (POM)		Titanium, Hostaform (POM)		Titanium, Hostaform (POM)	
Accessories included:	Sensor Cable 3854					
Accessories not included:	Sensor Cable 3855 to PC ⁶⁾ Foil Service Kit 3853 PS ⁶⁾		Sensor Cable 3855 to PC ⁶⁾ Foil Service Kit 3853 PS ⁶⁾		Sensor Cable 3855 to PC ⁶⁾ Foil Service Kit 3853 PS ⁶⁾ Cable 3485 with free end rated for 0-6000m	
Warranty:	Two years against faulty material and workmanship (3830, 3930, 3975)					

¹⁾ O₂ Concentration in mM = mmol/l. To obtain mg/l, divide by 31.25

²⁾ Valid for 0 - 2000m (6,562ft) depth, salinity 33 - 37ppt

³⁾ Aanderaa SR10a/VR22 are signal protocols that are used with Aanderaa equipment only

⁴⁾ 9600 Baud, 8 data bits, 1 stop bit, No Parity, Xon/Xoff Handshake


⁵⁾ The accuracy of the Analogue Adaptor in 0 - 5V output mode is specified to 0.1% of FS. Note however that at the end of the scale (<0.0 - 0.07> and <4.93 -5.0>) the error may be larger

⁶⁾ In order to change settings or calibrating the Optode the Sensor has to be connected to a PC. To gain access to the 3930 Optode's RS232 signals its cylindrical body must be removed, see Operating Manual TD218

PIN CONFIGURATION:

Receptacle, exterior view;

pin = ●, bushing = ○

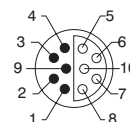

^{A)} Ground for SR10

^{B)} Supply for RS-232

^{C)} Ground for RS-232

^{D)} Supply for SR10

3835	4130	4175
1: Positive Supply ^{A), B)}	1: System Ground	1: Positive Supply
2: Ground ^{C)}	2: <i>Not Connected</i>	2: Ground
3: -9V ^{D)}	3: -9V	3: Analogue Output 1
4: Reserved, <i>Do Not Connect</i>	4: <i>Not Connected</i>	4: Return Ground 1
5: Bridge Voltage (BV)	5: Bridge Voltage (BV)	5: Analogue Output 2
6: Reserved, <i>Do Not Connect</i>	6: SR10 (Oxygen)	6: Return Ground 2
7: RXD (RS-232)	7: <i>Not Connected</i>	7: RXD (RS232)
8: TXD (RS-232)	8: <i>Not Connected</i>	8: TXD (RS232)
9: Control Voltage	9: Control Voltage	9: <i>Not Connected</i>
10: SR10 (Oxygen)	10: VR22 (Temperature)	10: <i>Not Connected</i>

Optode Model	3830	3930	3975
Description	Integrally/Direct Mounted.	Immersion Body for cable or sensor string.	Immersion Body w/ Analog and Serial Outputs.
Output	Dual Channel: RS232 data string (Oxygen,Temp.) or Single SR10 (Oxygen) channel to RCM's or RDCP.	Dual Channel: SR10 (Oxygen) and VR22 (Temp.).	Dual Channel: 0-5V (Oxygen, Temp.) or 4-20mA (Oxygen, Temp.) and/or RS232 (Oxygen, Temp.).
Application	Add sensor(s) to top end-plate of our RCM 9/11, RDCP 600 or for OEM/Third party use.	For use with Aanderaa DL series datalogger's; added sensors to AWS 2700 Weather Stations, DB 4280 Data Buoys or our self-contained recording instruments.	General Purpose use with third party datalogger's, e.g. CTD's, ARGO floats, ROV's; PLC's, process industry controllers, recorders, data acquisition and control systems.
Sample Rate	Set by host. RCM : continuously* – 120min. RDCP : 1min – 8hours. Internal interval setting for input to third party RS232 interface.	Set by host. DL3960 : continuously* - 180min. DL7 : 1min – 180min. DB4280 : continuously* - 180min. AWS 2700 : continuously* - 180min.	
Multi-sensor Configuration	RCM9 : Yes, 2nd 3830 via cable 3296 and Receptacle 3622R. RCM11 : Yes, 2nd 3830 via coupling 3979, cable 3980 and Flange Terminal 3978. RDCP600 : 300m version: as for RCM9 2000m version: as for RCM11	DL3960 : Max 15 sensors, depending on the configuration. DL7 : Max 5 sensors. DB4280 : Max 15 sensors, depending on the configuration. Sensor attachment : single points on cable use 3913; In-line 5-sensor disk 3829. RCM/RDCP : contact factory.	
Stand-alone Sensor (0–1000m)	Use 3485 Cable. Output : RS232 (Oxygen,Temp.). Sampling Rate : 1s to 255 min.		User furnished datalogger or controller, 3485 Cable. Output : 0-5 Vdc; 4-20 mAdc; or RS232 (Oxygen, Temperature). Sampling Rate : 1s to 255 min.
Stand-alone Sensor (0–6000m)	Use Coupling 3979 and Cable 3976 Output : RS232 (Oxygen,Temp.). Sampling Rate : 1s to 255 min.		User furnished datalogger or controller, Coupling 3977 and Cable 3976. Output : 0-5 Vdc; 4-20 mAdc; or RS232 (Oxygen, Temperature). Sampling Rate : 1s to 255 min.

*) Note that when the optode is connected to an instrument like the RCM, CMB, AWS or a datalogger, the sampling rate in a continuous recording mode depends on the number of channels for storage etc.

Oxyview© Program

Oxyview©, has been designed for use with Oxygen Optode/ Temperature Sensor 3830. The program allows display of Oxygen Concentration, Oxygen Saturation and Temperature both in tables and in graphical forms.

A Calibration Wizard is included in the program. This Wizard helps calibrate the Optode.

Oxyview© can also be used to configuring the Oxygen Optode.

The Optical System

The principle of measurement is based on the effect of dynamic luminescence quenching (lifetime based) by molecular oxygen.

