

MBARI DIC Controller Hardware Checkout Guide

Contents

- [Materials](#)
- [Board Preparation](#)
- [Firmware Installation](#)
- [Test Procedures](#)
- [Pre-test](#)
- [Console and Host Port](#)
- [Licor Serial Port](#)
- [Set Real Time Clock](#)
- [Analog Inputs](#)
- [Battery Voltage Input](#)
- [Valve Ports](#)
- [Pump Ports](#)
- [SD Card](#)

Materials

- PCB
- fuses (BK/PCS 1-5A slow blow)
- RTC backup battery (CR1620 or equivalent)
- SD card (16GB micro SDHC UHS-1 or better)
- console cable
- host cable
- DMM or oscilloscope
- 1x 3-pin ADC/SV test cable
- 1x 2-pin Pump test cable
- 10-20k pot
- 2x MM jumper wire(s)
- 2x MF jumper wire(s)
- test clips
- F-F DB9 serial loop back connector or Phoenix w/ comms looped back
- 12V 2A power supply
- Microchip ICD4 programmer w/ RJ45 programming cable
- MPLAB host computer (OSX/Win/Linux)
- MPLABX IDE v5.40
- XC16 v1.50
- Code Configurator Plugin 3.95.0
- IDE Platform Plugin 1.29
- device pack PIC24F-GA-GB_DFP 1.1.74
- PIC24/dsPIC33/PIC32MM MCU peripheral library 1.167.0
- 16-bit bootloader v1.17.2

Optional * Java (for Unified Host app if installing serial bootloader)

Resources

- [controller PCB schematic](#)
- [test cables](#)
- [command reference](#)

Board Preparation

- install the RTC backup battery

```
BT1 on left end of PCB  
'+' side up  
The solder pads lift easily, don't lift retainer clip.
```

- install the fuses

```
sockets F1, F2 on PCB  
upper right, near console and host cables
```

- connect cables
 - the ICD4 programming cable to the PCB
 - connect the ICD4 USB cable to the MPLAB host computer
 - connect the console cable power leads to the power supply
- get the firmware repo (either option)
 - clone firmware git repo

```
git clone git@bitbucket.org:mbari/carbonwg-pic.git
```

- checkout the binlog branch

```
$ cd carbonwg-pic  
$ git checkout feature/binlog
```

- install system files on the SD card
 - use an SD Card reader to mount the SD card
 - copy the system files from carbonwg-pic/sdc to the SD card

```
SYSBOOT.SCR  
CONFIG.TXT  
HELP.MD  
DIC2.SCR
```

- edit CONFIG.TXT (on the SD card) and set the serial number field
- if using OSX or linux, run unix2dos on the files to make sure have correct line endings

```
$ dos2unix path/to/sdcard/*
```

- install the SD Card in the PCB socket

Firmware Installation

There are two firmware options


- stand-alone
 - simpler to install
 - firmware updates require ICSP programmer, e.g. ICD4
- with serial bootloader
 - firmware updates may be done via console port
 - requires Microchip Unified Host Java app (distributed with firmware repo)

procedure: Install stand-alone

- open the pic firmware project

```
File > Open Project... > carbonwg-pic/cwg-pic.X
```

- select the cwg_nonboot configuration

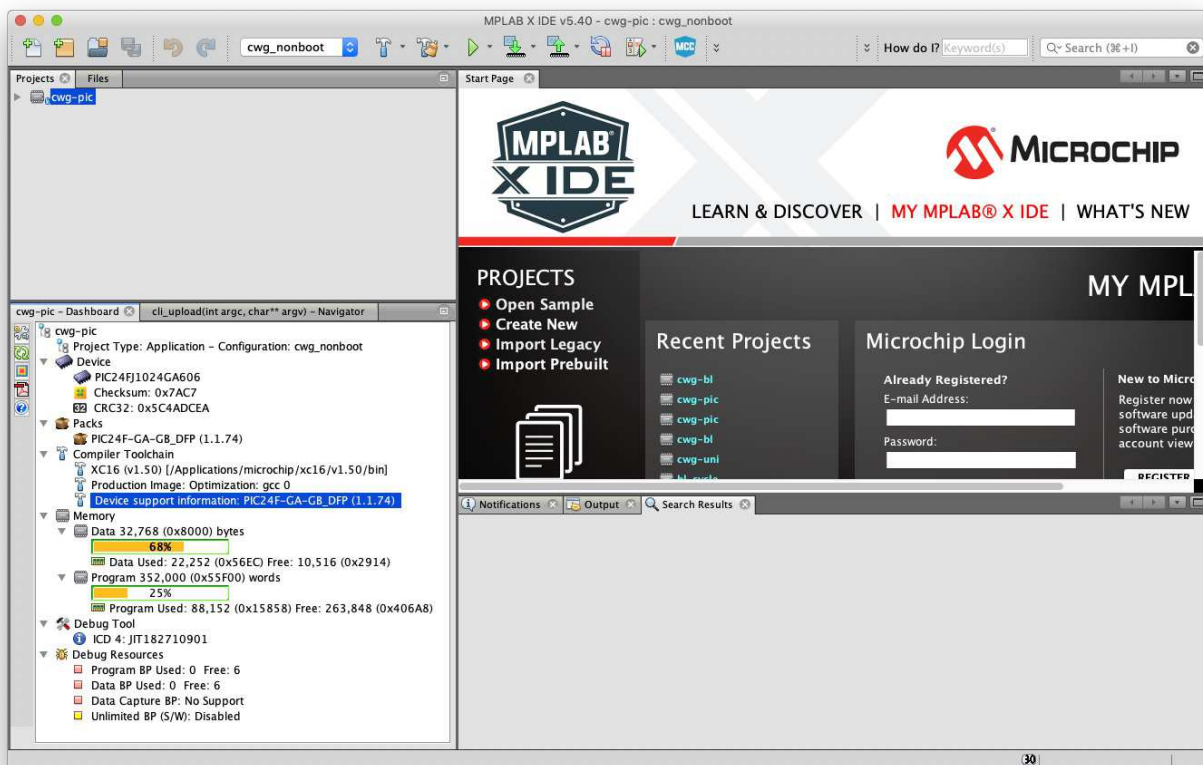

[carbonwg project non-boot configuration]

- clean/build
- make and program device

procedure: Install serial bootloader version

Installing the serial bootloader version is a three step process:

- build and install the bootloader firmware
- build the carbonwg firmware (uses a different configuration than stand-alone)
- use the bootloader together with the Microchip Unified Host app to load the carbonwg firmware

Step 1: build and install the bootloader firmware

- open the bootloader firmware project

```
File > Open Project... > carbonwg-pic/cwg-bl.X
```

- clean/build
- make and program device

Step 2: build and install the carbonwg firmware (bootloadable configuration)


- open the bootloader firmware project

```
File > Open Project... > carbonwg-pic/cwg-pic.X
```

- select the cwg_boot configuration
- clean/build
- **WAIT** (do not make and program device)


Step 3: Use the bootloader and Unified Host app to load the carbonwg firmware

- unzip the Unified host file carbonwg-pic/utls/unifiedhost- -bin.zip creates directory UnifiedHost-
- double click the jar file to run the app UnifiedHost- /UnifiedHost.jar
- configure the Device Architecture PIC24/dsPIC33/PIC32MM MCUs
- configure the Unified Host serial port (i.e. controller console port, not host port) Settings > Serial... Bits per second 38400 Data bits 8 Stop bits 1 Parity Disabled

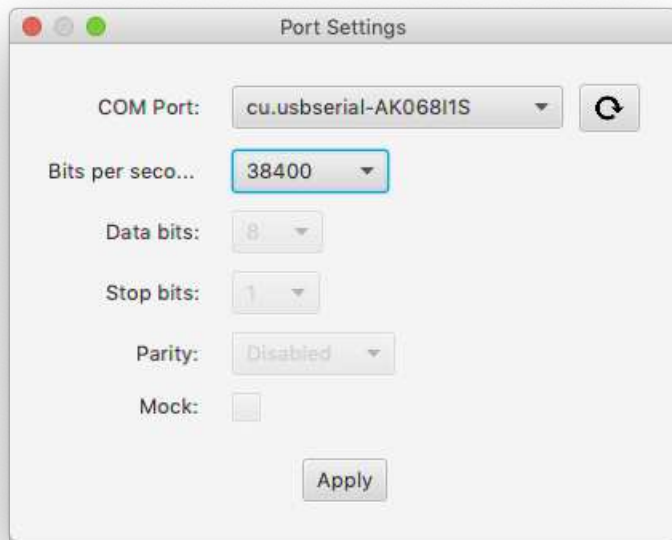

[unified host serial configuration]


- configure the firmware image address range Application Start (Byte Address):0x1800 Application End (Byte Address):0x5B000

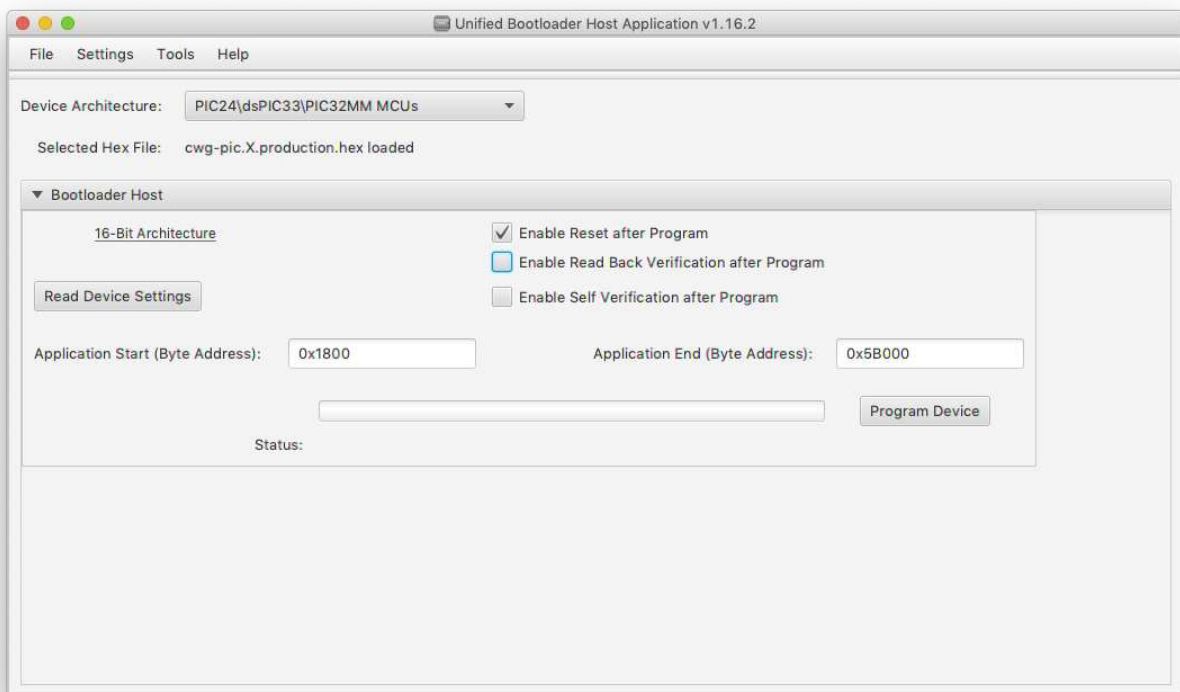

[unified host configuration]

- select the cwg_boot firmware image File > Open/Load (*.hex) > cwg-pic.X > dist > cwg_boot > production > cwg-

pic.X.production.hex

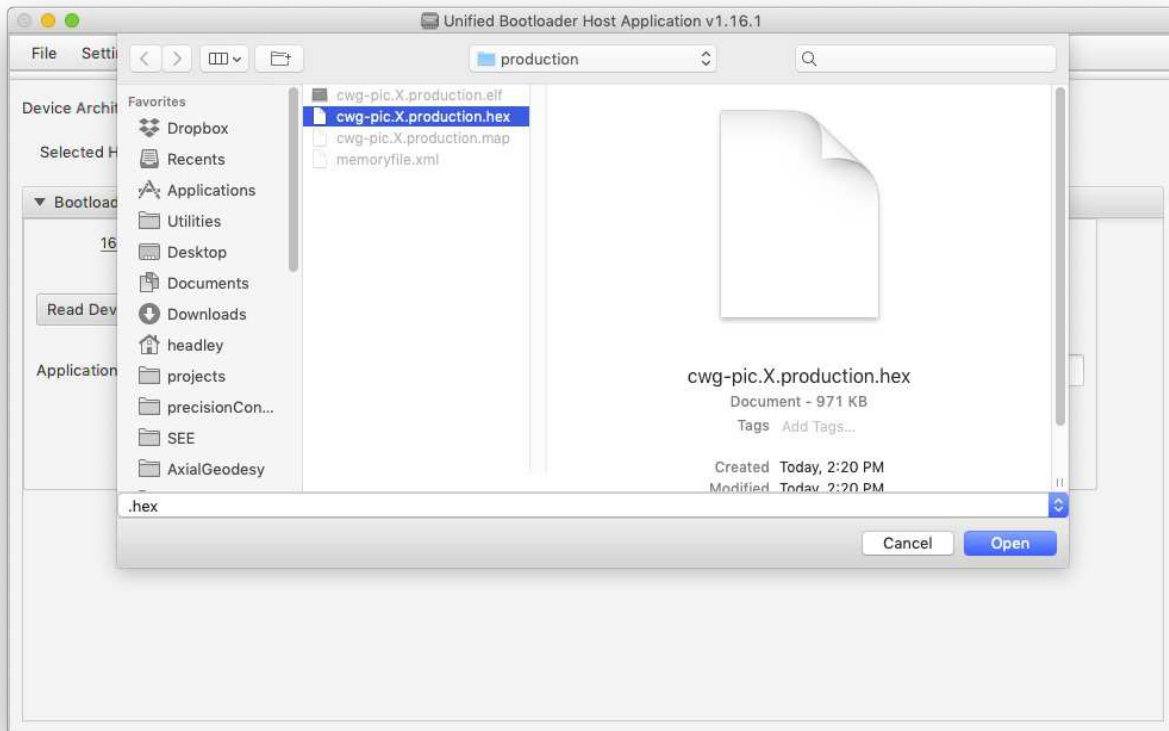

[select firmware hex image]

- optionally, uncheck Enable Read Back Verification After Program (slower, but recommended to verify)
- leave the Unified Host app window open
- use a terminal emulator (e.g. hyperterm, minicom, etc.) to open a console session to the controller console port - the same one used by the Unified Host. Configure using 38400N81.
- cycle power to the board
 - On power up, the LED will stay lit for 2 seconds.
 - When it turns off, type UUUU within 10 seconds to activate the bootloader
 - Each character typed should be echoed, the LED should flash when it receives a 'U'
 - The LED will stay lit when the bootloader is active (10s max or when UUUU sequence complete)
 - The LED will flash 3 times then turn off if the bootloader is **NOT** activated (cycle power and start again)
- close the terminal emulator, and return to the Unified Host session window
- click the "Program Device" button to begin programming the device. The process takes ~5-10 min.
- when the programming cycle is complete, the board should reset.
 - The LED will light for 2 S
 - After ~10s, the LED will flash three times and boot the firmware

- The LED will flash at 1 Hz for a few seconds and stop flashing if no console input is received
- Now it should be possible to initiate a terminal session on the console port (9600N81)

Test Procedures

Pre-test

- complete board prep checklist (above)
- turn off power to the controller board
- unplug all cables
- testing should be conducted on a non-conductive, static safe surface

Console and Host Port

- install console port cable
- open a terminal session (9600N81)
- issue a reset command

```
>> reset

serial IO [OK]
sdcard mount [OK]
log_init [OK]
Loading config...cfg load [OK]
running boot script...
00:00:03
bootstrap [OK]

CarbonWG build [Aug 12 2020, 14:20:08]
SN: 0002
status[x0044/0000]
```

- repeat for host port, host cable
- PASS:
 - executes reset
 - both cables/ports work

Licor Serial Port

- install instrument port cable
- install loopback connector (or connect DB-9 pins 2,3)
- perform loopback test

```
>> con licor
```

[typed characters - should be echoed] * remove loopback connector

[typed characters - should **not** be echoed] * measure licor port power (pins 1,4 - ~11-12 V)

- enter CTRL-D to quit con session
- measure licor port power (pins 1,4 - ~0 V)
- PASS:
 - port power responds, voltage levels correct
 - serial port loopback test OK

Set Real Time Clock

- establish a console session
- set the time (YYYY M D H M S)

```
>> set time 2019 11 20 14 20 0
```

- get the time (should be later than set time)

```
>> get time  
2019-11-20T14:27:20Z
```

- issue reset or cycle power
- get the time (should be later than previous check)

```
>> get time  
2019-11-20T14:32:20Z
```

- PASS:
 - time retained across power cycle
 - time matches value entered

Analog Inputs

- connect 10-20k pot center/end to pins 2,3 of ANALOG port
- assert ADC enable bits

```
>> set bits a*
```

- read ADC for ends and middle of pot range

```
>> GET AD 0 1  
ADC0 : 3.5547 V  
ADC1 : 4.9805 V
```

- repeat for channels 0,1
- PASS:
 - voltage should vary X-5V ($0 < X < 5$, depending on pot value)

Battery Voltage Input

- read ADC2 (VBATT)

```
>> GET AD 2  
ADC0 : 11.4001 V
```

- PASS:
 - voltage should be ~11-12V

Valve Ports

- install 3-pin test cable on port SV0
- connect a DMM or scope to the test cable
 - DMM negative:
 - DMM positive: SVn:A
- assert all SV ports ON

```
>> set bits v* pa ps
>> get bits
```

- DMM should indicate ~11-12V
- Move the connector to each of the SV*A ports (check voltage)
- Connect the DMM to the B port and repeat for SV*B
- assert all valve ports OFF

```
>> clr bits v* pa ps
>> get bits
```

- repeat SVA, SVB checks (should be ~0.3V)
- PASS:
 - all valve ports should on/off @ nominal voltage

Pump Ports

- install 2-pin test cable on port P0
- connect a DMM or scope to the test cable
 - DMM negative: P0-
 - DMM positive: P0+
- assert all Pump ports ON

```
>> set bits p*
>> get bits
```

- DMM should indicate ~11-12V
- Move the connector to each of the pump ports (check voltage)
- assert all valve ports OFF

```
>> clr bits p*
>> get bits
```


- repeat P(checks (should be ~0.0V)
- PASS:
 - all pump ports should cycle on/off @ nominal voltage

SD Card

- run filesystem info utility

```
>>dstat
FAT type                FAT32
Bytes/Cluster           32768
Number of FATs          2
Root DIR entries        0
Sectors/FAT             3834
Number of clusters      490720
Volume start (lba)      8192
FAT start (lba)         8716
DIR start (lba,cluster) 2
Data start (lba)        16384

768312 bytes in 71 files 16 directories
15703040 KiB total    15700192 KiB available
```



Monterey Bay Aquarium Research Institute
MBARI
7700 Sandholdt RD.
Moss Landing, CA 95039
PH: (831) 775-1700

Date: Thursday, August 13, 2020 Sheet 1 of 1

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF MBARI ANY REPRODUCTION IN PART OR WHOLE WITHOUT THE WRITTEN PERMISSION OF MBARI IS PROHIBITED.

CONSOLE PORT
HOST PORT

GND
232 TXD
232 RXD
DC INPUT

1
2
3
4
PHOENIX
1826995

GND
232 TXD
232 RXD
+12 INPUT

24 AWG, BLK

24 AWG

24 AWG

20 AWG, RED

20 AWG, BLK

GND


232 RXD

232 TXD

+12 INPUT

GND

DB9F



RED BANANA MALE
BLACK BANANA MALE



INSTRUMENT
CONNECTION
LICOR

GND
232 TXD
232 RXD
SW DC OUT

1
2
3
4
PHOENIX
1826995

GND
232 TXD
232 RXD
+12 OUT

24 AWG, BLK

24 AWG

24 AWG

20 AWG, RED

20 AWG, BLK

GND


232 TXD

232 RXD

+12 OUT

GND

DB9M



RED BANANA FEMALE
BLACK BANANA FEMALE



SV DC OUTS

SV-xA
GND
SV-xB

1
2
3

CONN SHELL
0050579203

FEMALE PIN
0016020103

24 AWG, RED

24 AWG, BLK

24 AWG, ORANGE

PUMP DC OUTS

PUMP
GND


1
2

CONN SHELL
0050579202

FEMALE PIN
0016020103

24 AWG, RED

24 AWG, BLK



DRAFT 8/10/2020

Monterey Bay Aquarium Research Institute

MBARI
7700 Sandholdt RD.
Moss Landing, CA 95039
PH: (831) 775-1700

Title

DIC SENSOR PCB TEST CABLES

Size
B

Document Number
<Doc>

Rev
-

Date:

Monday, August 10, 2020

Sheet

1 of 1