


FACE VIEW
99 0071 100 02



SPEC_PWR
5VGND

99 0071 100 02

13.5" OVERALL LENGTH
22AWG-RED
22AWG-BLK

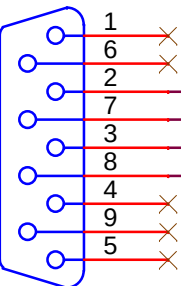

1757819-1

DCE_TXD
DCE_CTS
DCE_RXD
DCE_RTS

SPEC_RXD
SPEC_RTS
SPEC_TXD
SPEC_CTS

15.0" OVERALL LENGTH
24AWG-RED
24AWG-GRN
24AWG-ORN
24AWG-YEL

SPECTROMETER_PWR_COMMS

J2



50-57-9406

SPEC_PWR
5VGND
SPEC_TXD
SPEC_RXD
SPEC_RTS
SPEC_CTS

NOTES:

USE TE CRIMP TERMINAL PN: 205089-1
WITH TE PN: 1757819-1 HOUSING
USE ASTRO CRIMP TOOL PN: 615717 & 615724 POSITIONER
WITH TE CRIMP TERMINAL PN: 205089-1

USE MOLEX CRIMP TERMINAL PN: 016-02-0103
WITH MOLEX PN: 50-57-9406 HOUSING
USE MOLEX CRIMP TOOL PN: 638118700C
WITH MOLEX CRIMP TERMINAL PN: 016-02-0103

MONTEREY BAY AQUARIUM RESEARCH INSTITUTE

7700 SANDHOLDT ROAD
MOSS LANDING, CA 95039
(831)775-1700
LUKE COLETTI - COLETTI@MBARI.ORG

Title
APF-ISUS SPECTROMETER WIRING HARNESS

Size
A

Document Number

Rev
A

Date: Wednesday, April 15, 2015

Sheet 1 of 1